

TOSHIBA

SERVICE MANUAL

AIR-CONDITIONER


SPLIT TYPE

Indoor Unit


RAS-B05B2KV2G-E
RAS-B07B2KV2G-E
RAS-B10B2KV2G-E
RAS-B13B2KV2G-E
RAS-B16B2KV2G-E
RAS-B18B2KV2G-E
RAS-B24B2KV2G-E
RAS-B05B2KVG-E2
RAS-B07B2KVG-E2
RAS-B10B2KVG-E2
RAS-B13B2KVG-E2
RAS-B16B2KVG-E2
RAS-B18B2KVG-E2
RAS-B24B2KVG-E2

Outdoor Unit


RAS-05B2AVG-E2
RAS-07B2AVG-E2
RAS-10B2AVG-E2
RAS-13B2AVG-E2
RAS-16B2AVG-E2
RAS-18B2AVG-E2
RAS-24B2AVG-E2

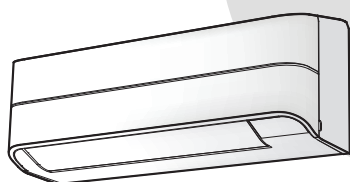

B2KV2G-E Series

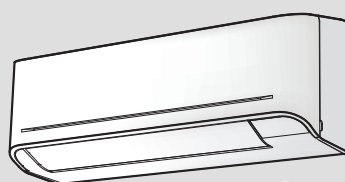

B2KVG-E2 Series

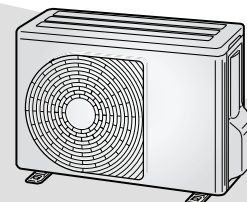

R32





INVERTER





CONTENTS

1. SAFETY PRECAUTIONS	3
2. SPECIFICATIONS	7
3. REFRIGERANT R32	12
4. CONSTRUCTION VIEWS	20
5. WIRING DIAGRAM	28
6. SPECIFICATIONS OF ELECTRICAL PARTS	32
7. REFRIGERANT CYCLE DIAGRAM	33
8. CONTROL BLOCK DIAGRAM	41
9. OPERATION DESCRIPTION	44
10. INSTALLATION PROCEDURE	74
11. HOW TO DIAGNOSE THE TROUBLE	90
12. HOW TO REPLACE THE MAIN PARTS	122
13. EXPLODED VIEWS AND PARTS LIST	153

1. SAFETY PRECAUTIONS

	Read the precautions in this manual carefully before operating the unit.		This appliance is filled with R32. (Flammable Material)
	Information included in the Operation Manual and/or Installation Manual.		Service personnel should be handling this equipment with reference to the Installation Manual.

Warning Indications on the Air Conditioner Unit

Warning indication	Description
 CAUTION BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.	CAUTION BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.
 WARNING! Be sure to connect earth wire. (Grounding work)	WARNING Be sure to connect earth wire. (Grounding work) Incomplete grounding causes an electric shock.

For general public use

Power supply cord and connecting cable of appliance use shall be at least polychloroprene sheathed flexible cord (design H07RN-F) or cord designation 60245 IEC66. (Shall be installed in accordance with national wiring regulations.)

- Read this "SAFETY PRECAUTIONS" carefully before servicing.
- The precautions described below include the important items regarding safety. Observe them without fail.
- After the servicing work, perform a trial operation to check for any problem.
- Turn off the main power supply switch (or breaker) before the unit maintenance.

■ Important information regarding the refrigerant used

This product contains fluorinated greenhouse gases.
 Do not vent gases in to the atmosphere. Refrigerant type: **R32**
 GWP⁽¹⁾ value: **675*** (ex. R32 ref. AR4)
⁽¹⁾GWP = global warming potential

The refrigerant quantity is indicated on the unit name plate.

* This value is based on F gas regulation 517/2014

CAUTION

New Refrigerant Air Conditioner Installation

- **THIS AIR CONDITIONER ADOPTS THE NEW HFC REFRIGERANT (R32) WHICH DOES NOT DESTROY OZONE LAYER.**

R32 refrigerant is apt to be affected by impurities such as water, oxidizing membrane, and oils because the working pressure of R32 refrigerant is approx. 1.6 times of refrigerant R22. Accompanied with the adoption of the new refrigerant, the refrigeration machine oil has also been changed. Therefore, during installation work, be sure that water, dust, former refrigerant, or refrigeration machine oil does not enter into the new type refrigerant R32 air conditioner circuit.

To prevent mixing of refrigerant or refrigerating machine oil, the sizes of connecting sections of charging port on main unit and installation tools are different from those used for the conventional refrigerant units.

Accordingly, special tools are required for the new refrigerant (R32) units. For connecting pipes, use new and clean piping materials with high pressure fittings made for R32 only, so that water and/or dust does not enter. Moreover, do not use the existing piping because there are some problems with pressure fittings and possible impurities in existing piping.

CAUTION

TO DISCONNECT THE APPLIANCE FROM THE MAIN POWER SUPPLY

This appliance must be connected to the main power supply by a circuit breaker or a switch with a contact separation of at least 3 mm.

DANGER

- **ASK AN AUTHORIZED DEALER OR QUALIFIED INSTALLATION PROFESSIONAL TO INSTALL/MAINTAIN THE AIR CONDITIONER.**

INAPPROPRIATE SERVICING MAY RESULT IN WATER LEAKAGE, ELECTRIC SHOCK OR FIRE.

- **TURN OFF MAIN POWER SUPPLY BEFORE ATTEMPTING ANY ELECTRICAL WORK. MAKE SURE ALL POWER SWITCHES ARE OFF. FAILURE TO DO SO MAY CAUSE ELECTRIC SHOCK.**



DANGER: HIGH VOLTAGE

The high voltage circuit is incorporated.

Be careful to do the check service, as the electric shock may be caused in case of touching parts on the P.C. board by hand.

- **CORRECTLY CONNECT THE CONNECTING CABLE. IF THE CONNECTING CABLE IS INCORRECTLY CONNECTED, ELECTRIC PARTS MAY BE DAMAGED.**
- **CHECK THAT THE EARTH WIRE IS NOT BROKEN OR DISCONNECTED BEFORE SERVICE AND INSTALLATION. FAILURE TO DO SO MAY CAUSE ELECTRIC SHOCK.**
- **DO NOT INSTALL NEAR CONCENTRATIONS OF COMBUSTIBLE GAS OR GAS VAPORS. FAILURE TO FOLLOW THIS INSTRUCTION CAN RESULT IN FIRE OR EXPLOSION.**
- **TO PREVENT THE INDOOR UNIT FROM OVERHEATING AND CAUSING A FIRE HAZARD, PLACE THE UNIT WELL AWAY (MORE THAN 2 M) FROM HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTORS, FURNACE, STOVES, ETC.**
- **WHEN MOVING THE AIR-CONDITIONER FOR INSTALLATION IN ANOTHER PLACE, BE VERY CAREFUL NOT TO ALLOW THE SPECIFIED REFRIGERANT (R32) TO BECOME MIXED WITH ANY OTHER GASEOUS BODY INTO THE REFRIGERATION CIRCUIT. IF AIR OR ANY OTHER GAS IS MIXED IN THE REFRIGERANT, THE GAS PRESSURE IN THE REFRIGERATION CIRCUIT WILL BECOME ABNORMALLY HIGH AND IT MAY RESULT IN THE PIPE BURSTING AND POSSIBLE PERSONNEL INJURIES.**
- **IN THE EVENT THAT THE REFRIGERANT GAS LEAKS OUT OF THE PIPE DURING THE SERVICE WORK AND THE INSTALLATION WORK, IMMEDIATELY LET FRESH AIR INTO THE ROOM. IF THE REFRIGERANT GAS IS HEATED, SUCH AS BY FIRE, GENERATION OF POISONOUS GAS MAY RESULT.**

WARNING

- Never modify this unit by removing any of the safety guards or bypassing any of the safety interlock switches.
- Do not install in a place which cannot bear the weight of the unit. Personal injury and property damage can result if the unit falls.
- Before doing the electrical work, attach an approved plug to the power supply cord. Also, make sure the equipment is properly earthed.
- Appliance shall be installed in accordance with national wiring regulations. If you detect any damage, do not install the unit. Contact your dealer immediately.
- Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Be aware that refrigerants may not contain an odour.
- Do not pierce or burn as the appliance is pressurized. Do not expose the appliance to heat, flame, sparks, or other sources or ignition. Else, it may explode and cause injury or death.
- For R32 model, use pipes, flare nut and tools which is specified for R32 refrigerant. Using of existing (R22) piping, flare nut and tools may cause abnormally high pressure in the refrigerant cycle (piping), and possibly result in explosion and injury.
- Thickness of copper pipes used R32 must be more than 0.8mm. Never use copper pipes thinner than 0.8mm.
- Do not perform flare connection inside a building or dwelling or room, when joining the heat exchanger of indoor unit with interconnection piping. Refrigerant connection inside a building or dwelling or room must be made by brazing or welding. Joint connection of indoor unit by flaring method can only be made at outdoor or at outside of building or dwelling or room. Flare connection may cause gas leak and flammable atmosphere.
- After completion of installation or service, confirm there is no leakage of refrigerant gas. It may generate toxic gas when the refrigerant contacts with fire.
- Comply with national gas regulations.
- Do not add any other devices without factory advice.

WARNING

- **After installation work, make sure below before operation.**
 - **Connection pipes are connected properly and no leakage.**
 - **Packed valves are fully open.**

Running compressor without open packed valves may cause abnormal high pressure and parts failure. Leakage at connection piping may suck air and make further high pressure cause burst and injure.

- **During pump down work make sure below process.**
 - **Don't mix air into the refrigerant cycle.**
 - **Stop the compressor before removing piping after packed valves are fully closed.**

Removing piping under the compressor running and packed valves open, air might be sucked and refrigeration cycle pressure becomes abnormally high, and it causes burst or injury on persons.

CAUTION

- Exposure of unit to water or other moisture before installation may result in an electrical short. Do not store in a wet basement or expose to rain or water.
- Do not install in a place that can increase the vibration of the unit. Do not install in a place that can amplify the noise level of the unit or where noise or discharged air might disturb neighbors.
- To avoid personal injury, be careful when handling parts with sharp edges.
- **Perform the specified installation work to guard against an earthquake.**
If the air conditioner is not installed appropriately, accidents may occur due to the falling unit.
- Please read this installation manual carefully before installing the unit. It contains further important instructions for proper installation, Improper installation may cause fire, burst, electric shock, injury and water leakage.

For Reference:

If a heating operation would be continuously performed for a long time under the condition that the outdoor temperature is 0°C or lower, drainage of defrosted water may be difficult due to freezing of the bottom plate, resulting in a trouble of the cabinet or fan.

It is recommended to procure an antifreeze heater locally for a safe installation of the air conditioner.

For details, contact the dealer.

2. SPECIFICATIONS

2-1. Specification

Unit model				Indoor	RAS-B05B2KV2G-E(B2KVG-E2)		RAS-B07B2KV2G-E(B2KVG-E2)		
				Outdoor	RAS-05B2AVG-E2		RAS-07B2AVG-E2		
Cooling capacity				(kW)	1.50		2.00		
Cooling capacity range				(kW)	0.58-2.00		0.76-2.40		
Heating capacity				(kW)	2.00		2.50		
Heating capacity range				(kW)	0.58-3.00		0.76-3.30		
Power supply				1Ph/50Hz/220-240V, 1Ph/60Hz/220-230V					
Electric characteristic	Indoor	Operation mode			Cooling	Heating	Cooling	Heating	
		Running current			(A)	0.19-0.17	0.19-0.17	0.22-0.20	0.22-0.20
		Power consumption			(W)	25	25	30	30
		Power factor			(%)	60	60	62	62
	Outdoor	Operation mode			Cooling	Heating	Cooling	Heating	
		Running current			(A)	1.81-1.67	2.26-2.07	2.53-2.32	3.03-2.75
		Power consumption			(W)	335	445	510	610
		Power factor			(%)	89	90	92	92
Starting current				(A)	-	-	-	-	
COP (Cooling / Heating)				3.95/4.26		3.70/3.91			
Operating noise	Indoor	High	(Cooling / Heating)	(dB-A)	39/38		40/39		
		Medium	(Cooling / Heating)	(dB-A)	31/31		31/31		
		Low	(Cooling / Heating)	(dB-A)	23/24		23/24		
	Outdoor			(Cooling / Heating)	(dB-A)	49/50		49/51	
Indoor unit	Unit model			RAS-B05B2KV2G-E(B2KVG-E2)		RAS-B07B2KV2G-E(B2KVG-E2)			
	Dimension	Height			(mm)	288		288	
		Width			(mm)	770		770	
		Depth			(mm)	225		225	
	Net weight			(kg)	9		9		
	Fan motor output			(W)	25		25		
	Air flow rate			(Cooling / Heating)	(m³ / hr)	490/490		490/500	
Outdoor unit	Unit model			RAS-05B2AVG-E2		RAS-07B2AVG-E2			
	Dimension	Height			(mm)	530		530	
		Width			(mm)	660		660	
		Depth			(mm)	240		240	
	Net weight			(kg)	20		20		
	Compressor	Motor output			(W)	450		450	
		Type			Single rotary type with DC-inverter variable speed control				
		Model			KSK66D15UDZB3				
	Fan motor output			(W)	43				
Air flow rate			(Cooling / Heating)	(m³ / hr)	1760/1760		1800/1980		
Piping connection	Type			Flare connection					
	Indoor unit	Liquid side			(mm)	Ø6.35		Ø6.35	
		Gas side			(mm)	Ø9.52		Ø9.52	
	Outdoor unit	Liquid side			(mm)	Ø6.35		Ø6.35	
		Gas side			(mm)	Ø9.52		Ø9.52	
	Maximum length			(m)	10		10		
	Maximum charge-less length			(m)	10		10		
	Maximum height difference			(m)	8		8		
Refrigerant	Name of refrigerant			R32		R32			
	Weight			(kg)	0.46		0.46		
Wiring connection		Power supply			3 Wires: Includes earth (Outdoor)				
		Interconnection			4 Wires: Includes earth				
Usable temperature range		Indoor	(Cooling / Heating)	(°C)	21-32/ 0-28		21-32/ 0-28		
		Outdoor	(Cooling / Heating)	(°C)	-15,46/-15,24		-15,46/-15,24		
Accessory	Indoor unit	Installation plate			1				
		Wireless remote controller			1				
		Batteries			2				
		Remote controller holder			1				
		Active Carbon Catechin filter			-				
		Mounting screw			6(Ø4x25L)				
		Remote controller holder Flat head wood screw			2(Ø3.1x16L)				
		Installation manual			1				
		Owner's manual			1				

* The specification may be subject to change without notice for purpose of improvement.

Unit model	Indoor			RAS-B10B2KV2G-E(B2KVG-E2)		RAS-B13B2KV2G-E(B2KVG-E2)	
	Outdoor			RAS-10B2AVG-E2		RAS-13B2AVG-E2	
Cooling capacity				(kW)	2.50		3.30
Cooling capacity range				(kW)	0.80-3.00		1.00-3.50
Heating capacity				(kW)	3.20		3.60
Heating capacity range				(kW)	0.76-3.90		0.76-4.30
Power supply				1Ph/50Hz/220-240V, 1Ph/60Hz/220-230V			
Electric characteristic	Indoor	Operation mode		Cooling	Heating	Cooling	Heating
		Running current (A)		0.25-0.23	0.25-0.23	0.28-0.26	0.28-0.26
		Power consumption (W)		35	35	40	40
		Power factor (%)		63	63	64	64
	Outdoor	Operation mode		Cooling	Heating	Cooling	Heating
		Running current (A)		3.45-3.17	3.90-3.57	5.52-5.04	4.71-4.29
		Power consumption (W)		715	805	1160	980
		Power factor (%)		94	94	96	95
		Starting current (A)		-	-	-	-
COP (Cooling / Heating)				3.33/3.81		2.75/3.53	
Operating noise	Indoor	High	(Cooling / Heating)	(dB-A)	42/41		43/42
		Medium	(Cooling / Heating)	(dB-A)	34/32		33/34
		Low	(Cooling / Heating)	(dB-A)	24/24		24/24
	Outdoor			(Cooling / Heating)	(dB-A)	49/51	
Indoor unit	Unit model			RAS-B10B2KV2G-E(B2KVG-E2)		RAS-B13B2KV2G-E(B2KVG-E2)	
	Dimension	Height (mm)		288		288	
		Width (mm)		770		770	
		Depth (mm)		225		225	
	Net weight (kg)		9		9		
	Fan motor output (W)		25		25		
	Air flow rate (Cooling / Heating) (m ³ / hr)		630/630		660/630		
Outdoor unit	Unit model			RAS-10B2AVG-E2		RAS-13B2AVG-E2	
	Dimension	Height (mm)		530		530	
		Width (mm)		660		660	
		Depth (mm)		240		240	
	Net weight (kg)		21		21		
	Compressor	Motor output (W)		650		650	
		Type		Single rotary type with DC-inverter variable speed control			
		Model		GSX073NKQF6JT8			
	Fan motor output (W)		43				
Air flow rate (Cooling / Heating) (m ³ / hr)		1800/1800		1980/1980			
Piping connection	Type			Flare connection			
	Indoor unit	Liquid side (mm)		Ø6.35		Ø6.35	
		Gas side (mm)		Ø9.52		Ø9.52	
	Outdoor unit	Liquid side (mm)		Ø6.35		Ø6.35	
		Gas side (mm)		Ø9.52		Ø9.52	
	Maximum length (m)		10		10		
	Maximum charge-less length (m)		10		10		
	Maximum height difference (m)		8		8		
Refrigerant	Name of refrigerant			R32		R32	
	Weight (kg)			0.51		0.58	
Wiring connection	Power supply		3 Wires: Includes earth (Outdoor)				
	Interconnection		4 Wires: Includes earth				
Usable temperature range		Indoor (Cooling / Heating)	(°C)	21-32/ 0-28		21-32/ 0-28	
		Outdoor (Cooling / Heating)	(°C)	-15,46/-15,24		-15,46/-15,24	
Accessory	Indoor unit	Installation plate		1			
		Wireless remote controller		1			
		Batteries		2			
		Remote controller holder		1			
		Active Carbon Catechin filter		-			
		Mounting screw		6(Ø4x25L)			
		Remote controller holder Flat head wood screw		2(Ø3.1x16L)			
		Installation manual		1			
		Owner's manual		1			

* The specification may be subject to change without notice for purpose of improvement.

Unit model		Indoor		RAS-B16B2KV2G-E(B2KVG-E2)		RAS-B18B2KV2G-E(B2KVG-E2)		
		Outdoor		RAS -16B2AVG-E2		RAS-18B2AVG-E2		
Cooling capacity				(kW)	4.20		5.00	
Cooling capacity range				(kW)	1.10-4.70		1.10-5.35	
Heating capacity				(kW)	5.00		5.40	
Heating capacity range				(kW)	0.90-6.00		1.10-6.00	
Power supply				1Ph/50Hz/220-240V , 1Ph/60Hz/220-230V				
Electric characteristic	Indoor	Operation mode		Cooling	Heating	Cooling	Heating	
		Running current		(A)	0.31-0.29	0.31-0.29	0.31-0.29	0.31-0.29
		Power consumption		(W)	45	45	45	45
		Power factor		(%)	65	65	65	65
	Outdoor	Operation mode		Cooling	Heating	Cooling	Heating	
		Running current		(A)	6.37-5.84	6.64-6.09	8.04-7.36	7.49-6.86
		Power consumption		(W)	1355	1405	1735	1625
		Power factor		(%)	97	96	98	99
Starting current				(A)	-	-	-	-
COP (Cooling / Heating)				3.00/3.45		2.81/3.23		
Operating noise	Indoor	High	(Cooling / Heating)	(dB-A)	45/44		47/48	
		Medium	(Cooling / Heating)	(dB-A)	35/35		40/40	
		Low	(Cooling / Heating)	(dB-A)	25/25		32/32	
	Outdoor	(Cooling / Heating)		(dB-A)	52/53		52/53	
Indoor unit	Unit model			RAS-B16B2KV2G-E(B2KVG-E2)		RAS-B18B2KV2G-E(B2KVG-E2)		
	Dimension	Height	(mm)	293		293		
		Width	(mm)	798		798		
		Depth	(mm)	230		230		
	Net weight			(kg)	10		10	
	Fan motor output			(W)	42		42	
	Air flow rate			(Cooling / Heating)	(m³ / hr)	780/770		840/840
Outdoor unit	Unit model			RAS-16B2AVG-E2		RAS-18B2AVG-E2		
	Dimension	Height	(mm)	550		550		
		Width	(mm)	780		780		
		Depth	(mm)	290		290		
	Net weight			(kg)	26		29	
	Compressor	Motor output		(W)	850		850	
		Type		Single rotary type with DC-inverter variable speed control				
		Model		KSK103D32UEZB31				
	Fan motor output			(W)	43			
Air flow rate			(Cooling / Heating)	(m³ / hr)	2160/2160		2160/2160	
Piping connection	Type			Flare connection		Flare connection		
	Indoor unit	Liquid side	(mm)	Ø6.35		Ø6.35		
		Gas side	(mm)	Ø12.7		Ø12.7		
	Outdoor unit	Liquid side	(mm)	Ø6.35		Ø6.35		
		Gas side	(mm)	Ø12.7		Ø12.7		
	Maximum length			(m)	15		15	
	Maximum charge-less length			(m)	10		10	
	Maximum height difference			(m)	8		8	
Refrigerant	Name of refrigerant			R32		R32		
	Weight			(kg)	0.68		0.93	
Wiring		Power supply		3 Wires: Includes earth (Outdoor)				
connection		Interconnection		4 Wires: Includes earth				
Usable temperature range		Indoor	(Cooling / Heating)	(°C)	21-32/0-28		21-32/0-28	
		Outdoor	(Cooling / Heating)	(°C)	-15,46/-15,24		-15,46/-15,24	
Accessory	Indoor unit	Installation plate		1		1		
		Wireless remote controller		1		1		
		Batteries		2		2		
		Remote controller holder		1		1		
		Active Carbon Catechin filter		-		-		
		Mounting screw		6(Ø4x25L)		6(Ø4x25L)		
		Remote controller holder Flat head wood screw		2(Ø3.1x16L)		2(Ø3.1x16L)		
		Installation manual		1		1		
		Owner's manual		1		1		


* The specification may be subject to change without notice for purpose of improvement.

Unit model	Indoor			RAS-B24B2KV2G-E(B2KVG-E2)			
	Outdoor			RAS-24B2AVG-E2			
Cooling capacity				(kW)	6.50		
Cooling capacity range				(kW)	1.10-7.05		
Heating capacity				(kW)	7.90		
Heating capacity range				(kW)	1.20-8.00		
Power supply				1Ph/50Hz/220-240V, 1Ph/60Hz/220-230V			
Electric characteristic	Indoor	Operation mode			Cooling	Heating	
		Running current			(A)	0.36-0.34	0.36-0.34
		Power consumption			(W)	50	50
		Power factor			(%)	62	62
	Outdoor	Operation mode			Cooling	Heating	
		Running current			(A)	10.99-10.11	8.94-8.19
		Power consumption			(W)	2400	1950
		Power factor			(%)	99	99
Starting current			(A)	-	-		
COP (Cooling / Heating)				2.65/3.50			
Operating noise	Indoor	High	(Cooling / Heating)	(dB-A)	48/48		
		Medium	(Cooling / Heating)	(dB-A)	42/42		
		Low	(Cooling / Heating)	(dB-A)	35/35		
	Outdoor	(Cooling / Heating)			(dB-A)	56/57	
Indoor unit	Unit model			RAS-B24B2KV2G-E(B2KVG-E2)			
	Dimension	Height			(mm)	320	
		Width			(mm)	1050	
		Depth			(mm)	250	
	Net weight			(kg)	14		
	Fan motor output			(W)	42		
	Air flow rate			(Cooling / Heating)	(m³ / hr)	1100/880	
Outdoor unit	Unit model			RAS-24B2AVG-E2			
	Dimension	Height			(mm)	550	
		Width			(mm)	780	
		Depth			(mm)	290	
	Net weight			(kg)	32		
	Compressor	Motor output			(W)	900	
		Type			Twin rotary type with DC-inverter variable speed control		
		Model			KSN140D33UFZA3		
	Fan motor output			(W)	43		
Air flow rate			(Cooling / Heating)	(m³ / hr)	2220/2220		
Piping connection	Type			Flare connection			
	Indoor unit	Liquid side			(mm)	Ø6.35	
		Gas side			(mm)	Ø12.70	
	Outdoor unit	Liquid side			(mm)	Ø6.35	
		Gas side			(mm)	Ø12.70	
	Maximum length			(m)	15		
	Maximum charge-less length			(m)	10		
Maximum height difference			(m)	8			
Refrigerant	Name of refrigerant			R32			
	Weight			(kg)	1.23		
Wiring connection		Power supply			3 Wires: Includes earth (Outdoor)		
		Interconnection			4 Wires: Includes earth		
Usable temperature range		Indoor	(Cooling / Heating)	(°C)	21-32/0-28		
		Outdoor	(Cooling / Heating)	(°C)	-15,46/-15,24		
Accessory	Indoor unit	Installation plate			1		
		Wireless remote controller			1		
		Batteries			2		
		Remote controller holder			1		
		Active Carbon Catechin filter			-		
		Mounting screw			6(Ø4x25L)		
		Remote controller holder			2(Ø3.1x16L)		
		Flat head wood screw			2(Ø3.1x16L)		
		Installation manual			1		
Owner's manual			1				


* The specification may be subject to change without notice for purpose of improvement.

2-2. Operation Characteristic Curve

<Cooling>

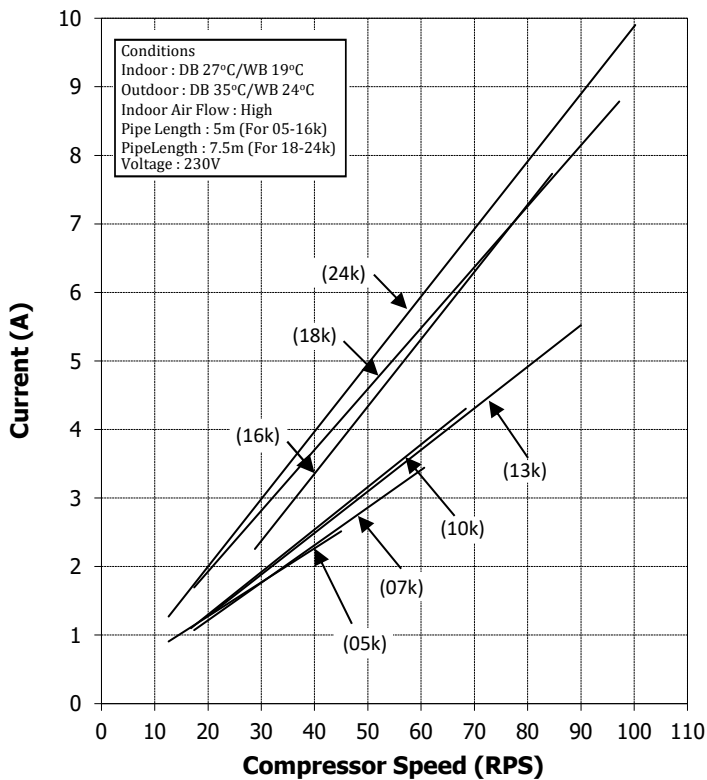


<Heating>

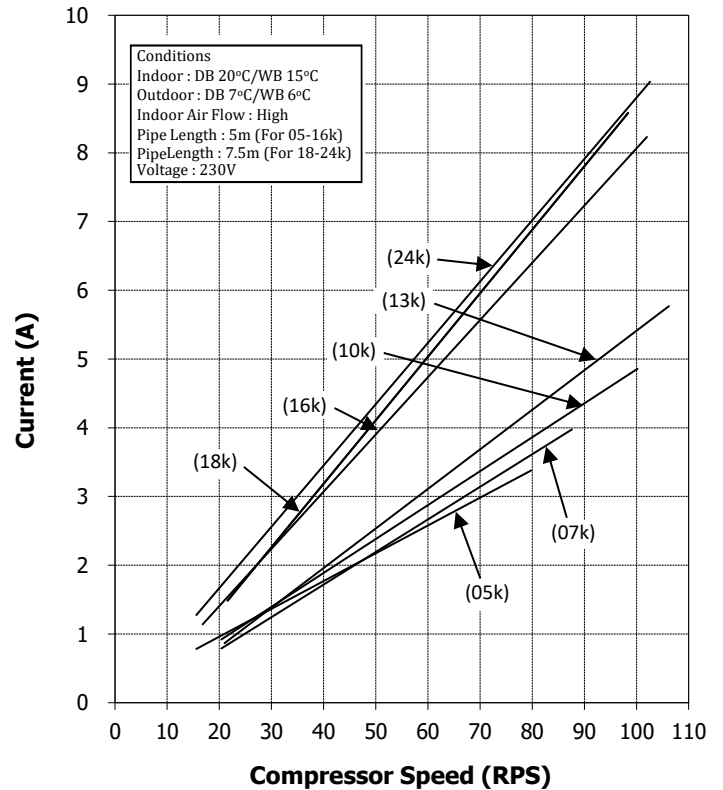


2-3. Capacity Variation ratio According to Temperature

<Cooling>

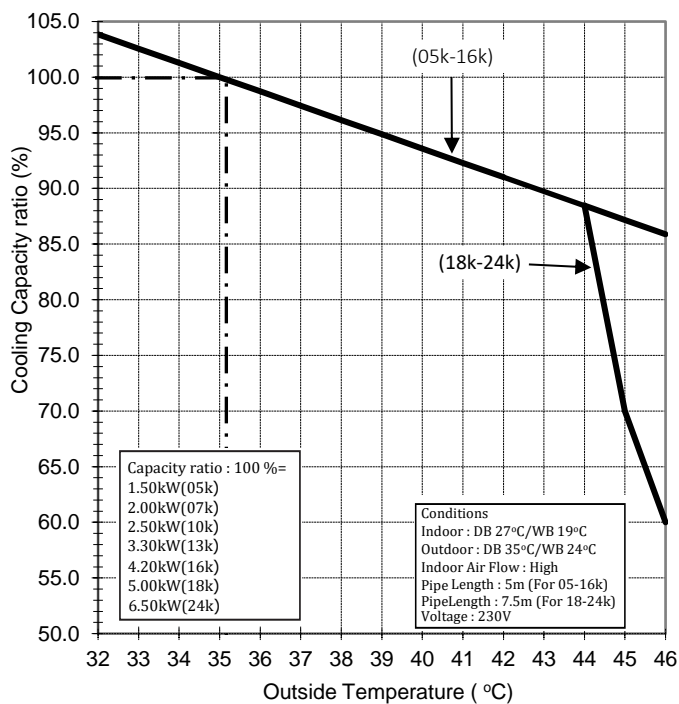

<Heating>

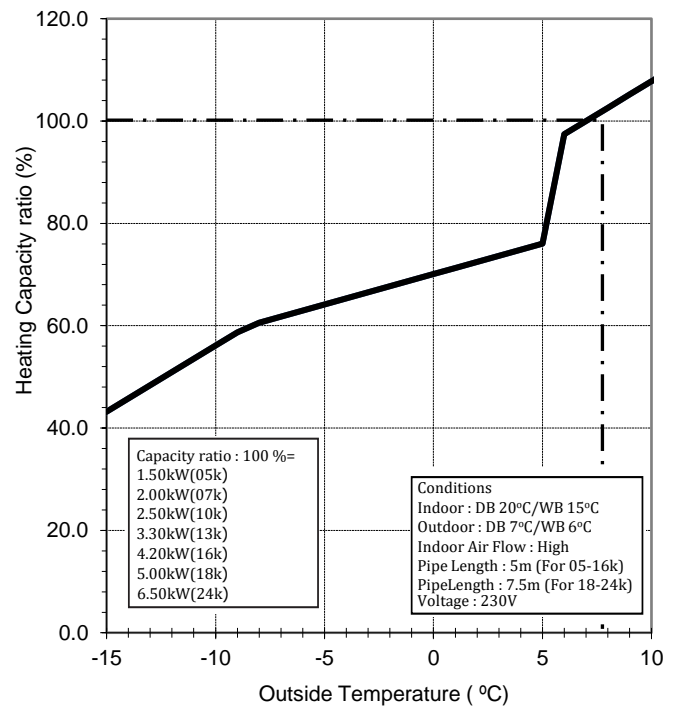

3. REFRIGERANT R32

This air conditioner adopts the new refrigerant HFC (R32) which does not damage the ozone layer.

The next section describes the precautions for air conditioner using the new refrigerant. Conforming to contents of the next section together with the general cautions included in this manual, perform the correct and safe work.

3-1. Safety During Installation/Service

The basic installation servicing work procedures are the same as conventional R410A models.

As R32's pressure is about 1.6 times higher than that of R22, improper installation/servicing may cause a serious trouble. By using tools and materials exclusive for R32, it is necessary to carry out installation/servicing safely while taking the following precautions into consideration.

1. Never use refrigerant other than R32 in an air conditioner which is designed to operate with R32. If other refrigerant than R32 is mixed, pressure in the refrigeration cycle becomes abnormally high, and it may cause personal injury, etc. by a rupture.
2. Confirm the used refrigerant name, and use tools and materials exclusive for the refrigerant.
The refrigerant name R32 is indicated on the visible place of the outdoor unit of the air conditioner using R32 as refrigerant. To prevent mischarging, the diameter of the service port differs from that of R22. R32 and other HFCs are heavier than air, and therefore they are inclined to settle near the floor surface.
If the gas fills up the room or the bottom part of a room, it may also cause oxygen deficiency and may reach its combustion concentration.

In order to prevent oxygen deficiency and R32 combustion, keep the room well-ventilated for a healthy work environment.

In particular, using HFCs in a basement room or confined area creates a higher risk; be sure to furnish the room with local exhaust ventilation. If a refrigerant leak is confirmed in a room an inadequately ventilated location, do not use a flame until the area has been ventilated appropriately and the work environment has been improved.

The same applies in case of brazing, ensure appropriate ventilation to prevent oxygen deficiency and R32 combustion.

Check that there are no dangerous or combustible items nearby, and ensure a fire extinguisher is close at hand.

Keep a sufficient distance away from causes of fire (ignition sources) such as gas-burning equipment and electric heaters in places where installation, repairs, or similar work on air-conditioning equipment is performed.

3. If a refrigeration gas leakage occurs during installation/servicing, be sure to ventilate fully. If the refrigerant gas comes into contact with fire, a poisonous gas may occur.
4. When installing or removing an air conditioner, do not allow air moisture dust or oil to remain in the refrigeration cycle. Otherwise, pressure in the refrigeration cycle may become abnormally high so that a rupture or personal injury may be caused.
5. After completion of installation work, check to make sure that there is no refrigeration gas leakage. If the refrigerant gas leaks into the room, coming into contact with fire in the fan-driven heater, space heater, etc., a poisonous gas may occur
6. When an air conditioning system charged with a large volume of refrigerant is installed in a small room, it is necessary to exercise care so that, even when refrigerant leaks, its concentration does not exceed the marginal level. If the refrigerant gas leakage occurs and its concentration exceeds the marginal level, an oxygen starvation accident may result.
7. Be sure to carry out installation or removal according to the installation manual. Improper installation may cause refrigeration trouble, water leakage, electric shock, fire, etc.
8. Unauthorized modifications to the air conditioner may be dangerous. If a breakdown occurs please call a qualified air conditioner technician or electrician. Improper repair's may result in water leakage, electric shock and fire, etc.

3-2. Refrigerant Piping Installation

3-2-1. Piping Materials and Joints Used

For the refrigerant piping installation, copper pipes and joints are mainly used. Copper pipes and joints suitable for the refrigerant must be chosen and installed. Furthermore, it is necessary to use clean copper pipes and joints whose interior surfaces are less affected by contaminants.

1. Copper Pipes

It is necessary to use seamless copper pipes which are made of either copper or copper alloy and it is desirable that the amount of residual oil is less than 40 mg/10 m. Do not use copper pipes having a collapsed, deformed or discolored portion (especially on the interior surface).

Otherwise, the expansion valve or capillary tube may become blocked with contaminants.

As an air conditioner using R32 incurs pressure higher than when using R22, it is necessary to choose adequate materials.

Thicknesses of copper pipes used with R32 are as shown in Table 3-2-1. Never use copper pipes thinner than 0.8 mm even when it is available on the market.

Table 3-2-1 Thicknesses of annealed copper pipes

		Thickness (mm)	
Nominal diameter	Outer diameter (mm)	R32(R410A)	R22
1/4	6.35	0.80	0.80
3/8	9.52	0.80	0.80
1/2	12.70	0.80	0.80
5/8	15.88	1.00	1.00

2. Joints

For copper pipes, flare joints or socket joints are used. Prior to use, be sure to remove all contaminants.

a) Flare Joints

Flare joints used to connect the copper pipes cannot be used for pipings whose outer diameter exceeds 20 mm. In such a case, socket joints can be used.

Sizes of flare pipe ends, flare joint ends and flare nuts are as shown in Tables 3-2-3 to 3-2-6 below.

b) Socket Joints

Socket joints are such that they are brazed for connections, and used mainly for thick pipings whose diameter is larger than 20 mm.

Thicknesses of socket joints are as shown in Table 3-2-2.

Table 3-2-2 Minimum thicknesses of socket joints

Nominal diameter	Reference outer diameter of copper pipe jointed (mm)	Minimum joint thickness (mm)
1/4	6.35	0.50
3/8	9.52	0.60
1/2	12.70	0.70
5/8	15.88	0.80

3-2-2. Processing of Piping Materials

When performing the refrigerant piping installation, care should be taken to ensure that water or dust does not enter the pipe interior, that no other oil than lubricating oils used in the installed air-water heat pump is used, and that refrigerant does not leak. When using lubricating oils in the piping processing, use such lubricating oils whose water content has been removed. When stored, be sure to seal the container with an airtight cap or any other cover.

1. Flare processing procedures and precautions

a) Cutting the Pipe

By means of a pipe cutter, slowly cut the pipe so that it is not deformed.

b) Removing Burrs and Chips

If the flared section has chips or burrs, refrigerant leakage may occur.

Carefully remove all burrs and clean the cut surface before installation.

c) Insertion of Flare Nut

d) Flare Processing

Make certain that a clamp bar and copper pipe have been cleaned.

By means of the clamp bar, perform the flare processing correctly.

Use either a flare tool for R32 or conventional flare tool.

Flare processing dimensions differ according to the type of flare tool. When using a conventional flare tool, be sure to secure "dimension A" by using a gauge for size adjustment.

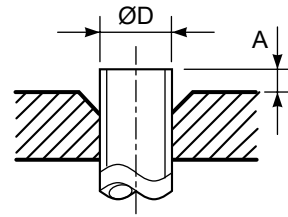


Fig. 3-2-1 Flare processing dimensions

Table 3-2-3 Dimensions related to flare processing for R32(R410A)

Nominal diameter	Outer diameter (mm)	Thickness (mm)	A (mm)		
			Flare tool for R32 clutch type	Conventional flare tool	
				Clutch type	Wing nut type
1/4	6.35	0.8	0 to 0.5	1.0 to 1.5	1.5 to 2.0
3/8	9.52	0.8	0 to 0.5	1.0 to 1.5	1.5 to 2.0
1/2	12.70	0.8	0 to 0.5	1.0 to 1.5	2.0 to 2.5
5/8	15.88	1.0	0 to 0.5	1.0 to 1.5	2.0 to 2.5

Table 3-2-4 Dimensions related to flare processing for R22

Nominal diameter	Outer diameter (mm)	Thickness (mm)	A (mm)		
			Flare tool for R22 clutch type	Conventional flare tool	
				Clutch type	Wing nut type
1/4	6.35	0.8	0 to 0.5	0.5 to 1.0	1.0 to 1.5
3/8	9.52	0.8	0 to 0.5	0.5 to 1.0	1.0 to 1.5
1/2	12.70	0.8	0 to 0.5	0.5 to 1.0	1.5 to 2.0
5/8	15.88	1.0	0 to 0.5	0.5 to 1.0	1.5 to 2.0

Table 3-2-5 Flare and flare nut dimensions for R32(R410A)

Nominal diameter	Outer diameter (mm)	Thickness (mm)	Dimension (mm)				Flare nut width (mm)
			A	B	C	D	
1/4	6.35	0.8	9.1	9.2	6.5	13	17
3/8	9.52	0.8	13.2	13.5	9.7	20	22
1/2	12.70	0.8	16.6	16.0	12.9	23	26
5/8	15.88	1.0	19.7	19.0	16.0	25	29

Table 3-2-6 Flare and flare nut dimensions for R22

Nominal diameter	Outer diameter (mm)	Thickness (mm)	Dimension (mm)				Flare nut width (mm)
			A	B	C	D	
1/4	6.35	0.8	9.0	9.2	6.5	13	17
3/8	9.52	0.8	13.0	13.5	9.7	20	22
1/2	12.70	0.8	16.2	16.0	12.9	20	24
5/8	15.88	1.0	19.7	19.0	16.0	23	27
3/4	19.05	1.0	23.3	24.0	19.2	34	36

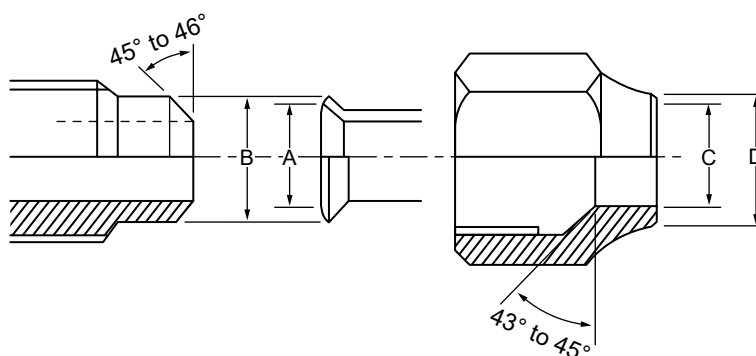


Fig. 3-2-2 Relations between flare nut and flare seal surface

2. Flare Connecting Procedures and Precautions

- Make sure that the flare and union portions do not have any scar or dust, etc.
- Correctly align the processed flare surface with the union axis.
- Tighten the flare with designated torque by means of a torque wrench. The tightening torque for R32 is the same as that for conventional R22. Incidentally, when the torque is weak, the gas leakage may occur. When it is strong, the flare nut may crack and may be made non-removable. When choosing the tightening torque, comply with values designated by manufacturers. Table 3-2-7 shows reference values.

NOTE :

When applying oil to the flare surface, be sure to use oil designated by the manufacturer.
If any other oil is used, the lubricating oils may deteriorate and cause the compressor to burn out.

Table 3-2-7 Tightening torque of flare for R32(R410A) [Reference values]

Nominal diameter	Outer diameter (mm)	Tightening torque N•m (kgf•cm)	Tightening torque of torque wrenches available on the market N•m (kgf•cm)
1/4	6.35	14 to 18 (140 to 180)	16 (160), 18 (180)
3/8	9.52	33 to 42 (330 to 420)	42 (420)
1/2	12.70	50 to 62 (500 to 620)	55 (550)
5/8	15.88	63 to 77 (630 to 770)	65 (650)

3-3. Tools

3-3-1. Required Tools

The service port diameter of packed valve of the outdoor unit in the air-water heat pump using R32 is changed to prevent mixing of other refrigerant. To reinforce the pressure-resisting strength, flare processing dimensions and opposite side dimension of flare nut (For Ø12.7 copper pipe) of the refrigerant piping are lengthened.

The used refrigerating oil is changed, and mixing of oil may cause a trouble such as generation of sludge, clogging of capillary, etc. Accordingly, the tools to be used are classified into the following three types.

1. Tools exclusive for R32 (Those which cannot be used for conventional refrigerant (R22))
2. Tools exclusive for R32, but can be also used for conventional refrigerant (R22)
3. Tools commonly used for R32 and for conventional refrigerant (R22)

The table below shows the tools exclusive for R32 and their interchangeability.

Tools exclusive for R32 (The following tools for R410A are required.)

Tools whose specifications are changed for R32 and their interchangeability

No.	Used tool	Usage	R32(R410A) air-water heat pump installation		Conventional air-water heat pump installation
			Existence of new equipment for R32	Whether conven- tional equipment can be used	Whether new equipment can be used with conventional refrigerant
1	Flare tool	Pipe flaring	Yes	*(Note 1)	○
2	Copper pipe gauge for adjusting projection margin	Flaring by conventional flare tool	Yes	*(Note 1)	*(Note 1)
3	Torque wrench (For Ø12.7)	Connection of flare nut	Yes	×	×
4	Gauge manifold	Evacuating, refrigerant charge, run check, etc.	Yes	×	×
5	Charge hose				
6	Vacuum pump adapter	Vacuum evacuating	Yes	×	○
7	Electronic balance for refrigerant charging	Refrigerant charge	Yes	×	○
8	Leakage detector	Gas leakage check	Yes	×	○

(Note 1) When flaring is carried out for R32(R410A) using the conventional flare tools, adjustment of projection margin is necessary. For this adjustment, a copper pipe gauge, etc. are necessary.

General tools (Conventional tools can be used.)

In addition to the above exclusive tools, the following equipments which serve also for R22 are necessary as the general tools.


- | | | |
|--|-----------------------------|---|
| 1. Vacuum pump
Use vacuum pump by attaching
vacuum pump adapter. | 4. Reamer | 9. Hole core drill (Ø65) |
| 2. Torque wrench (For Ø6.35, Ø9.52) | 5. Pipe bender | 10. Hexagon wrench
(Opposite side 4mm) |
| 3. Pipe cutter | 6. Level vial | 11. Tape measure |
| | 7. Screwdriver (+, -) | 12. Metal saw |
| | 8. Spanner or Monkey wrench | |

Also prepare the following equipments for other installation method and run check.

- | | |
|----------------|---------------------------------|
| 1. Clamp meter | 3. Insulation resistance tester |
| 2. Thermometer | 4. Electroscop |

3-4. Recharging of Refrigerant

When it is necessary to recharge refrigerant, charge the specified amount of new refrigerant according to the following steps.

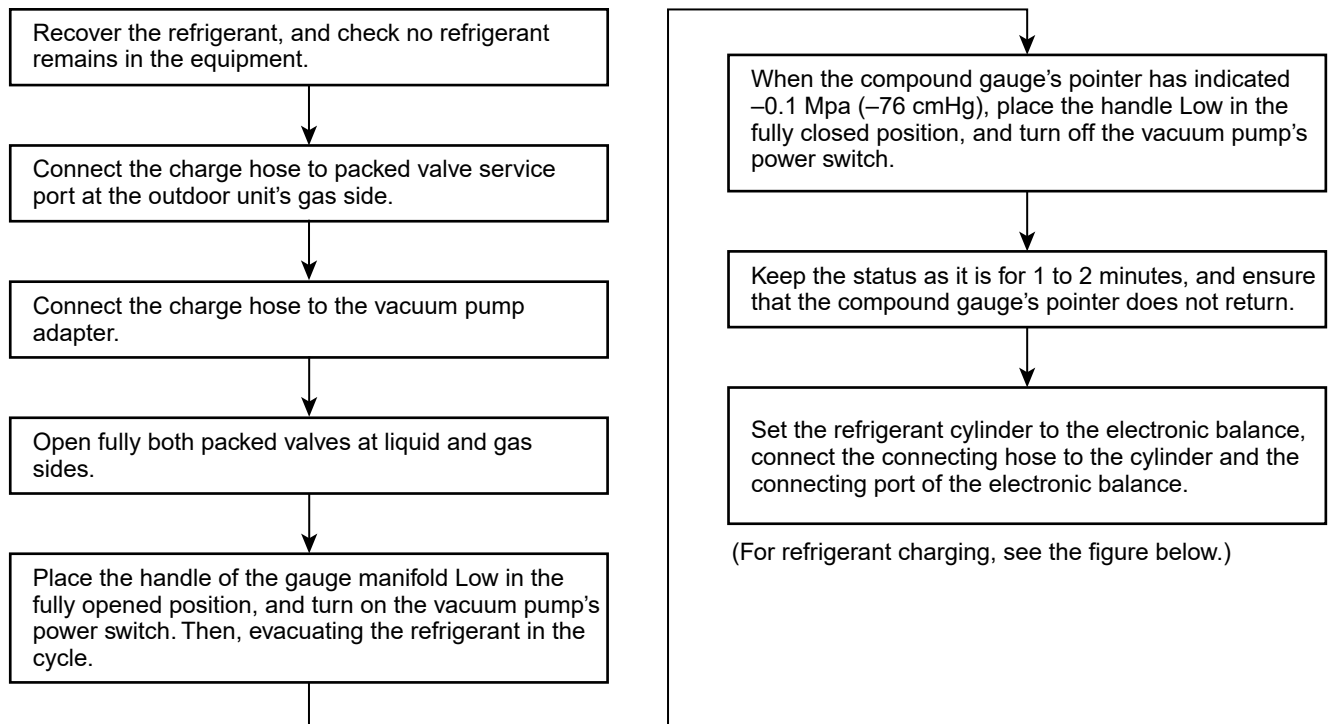

1. Never charge refrigerant exceeding the specified amount.
2. If the specified amount of refrigerant cannot be charged, charge refrigerant **bit by bit** in COOL mode.
3. Do not carry out additional charging.

When additional charging is carried out if refrigerant leaks, the refrigerant composition changes in the refrigeration cycle, that is characteristics of the air conditioner changes, refrigerant exceeding the specified amount is charged, and working pressure in the refrigeration cycle becomes abnormally high pressure, and may cause a rupture or personal injury.

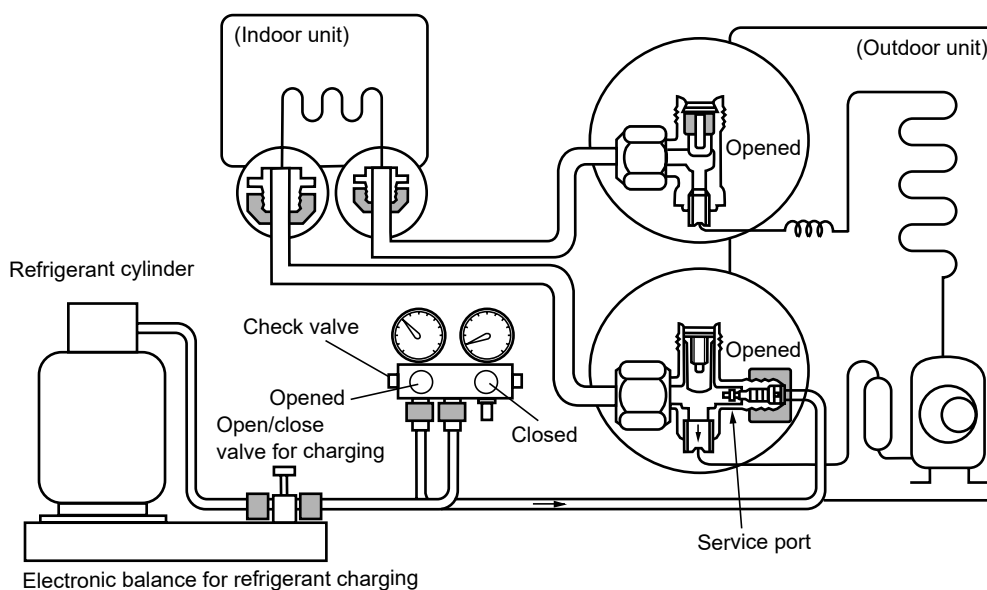


Fig. 3-4-1 Configuration of refrigerant charging

3-5. Brazing of Pipes

3-5-1. Materials for Brazing

1. Silver brazing filler

Silver brazing filler is an alloy mainly composed of silver and copper. It is used to join iron, copper or copper alloy, and is relatively expensive though it excels in solderability.

2. Phosphor bronze brazing filler

Phosphor bronze brazing filler is generally used to join copper or copper alloy.

3. Low temperature brazing filler

Low temperature brazing filler is generally called solder, and is an alloy of tin and lead. Since it is weak in adhesive strength, do not use it for refrigerant pipes.

1. Phosphor bronze brazing filler tends to react with sulfur and produce a fragile compound water solution, which may cause a gas leakage. Therefore, use any other type of brazing filler at a hot spring resort, etc., and coat the surface with a paint.
2. When performing brazing again at time of servicing, use the same type of brazing filler.

3-5-2. Flux

1. Reason why flux is necessary

- By removing the oxide film and any foreign matter on the metal surface, it assists the flow of brazing filler.
- In the brazing process, it prevents the metal surface from being oxidized.
- By reducing the brazing filler's surface tension, the brazing filler adheres better to the treated metal.

2. Characteristics required for flux

- Activated temperature of flux coincides with the brazing temperature.
- Due to a wide effective temperature range, flux is hard to carbonize.
- It is easy to remove slag after brazing.
- The corrosive action to the treated metal and brazing filler is minimum.
- It excels in coating performance and is harmless to the human body.

As the flux works in a complicated manner as described above, it is necessary to select an adequate type of flux according to the type and shape of treated metal, type of brazing filler and brazing method, etc.

3. Types of flux

• Noncorrosive flux

Generally, it is a compound of borax and boric acid.

It is effective in case where the brazing temperature is higher than 800°C.

• Activated flux

Most of fluxes generally used for silver brazing are this type.

It features an increased oxide film removing capability due to the addition of compounds such as potassium fluoride, potassium chloride and sodium fluoride to the borax-boric acid compound.

4. Piping materials for brazing and used brazing filler/flux

Piping material	Used brazing filler	Used flux
Copper - Copper	Phosphor copper	Do not use
Copper - Iron	Silver	Paste flux
Iron - Iron	Silver	Vapor flux

1. Do not enter flux into the refrigeration cycle.
2. When chlorine contained in the flux remains within the pipe, the lubricating oil deteriorates. Therefore, use a flux which does not contain chlorine.
3. When adding water to the flux, use water which does not contain chlorine (e.g. distilled water or ion-exchange water).
4. Remove the flux after brazing.

3-5-3. Brazing

As brazing work requires sophisticated techniques, experiences based upon a theoretical knowledge, it must be performed by a person qualified.

In order to prevent the oxide film from occurring in the pipe interior during brazing, it is effective to proceed with brazing while letting dry Nitrogen gas (N₂) flow.

Never use gas other than Nitrogen gas.

1. Brazing method to prevent oxidation

- 1) Attach a reducing valve and a flow-meter to the Nitrogen gas cylinder.
- 2) Use a copper pipe to direct the piping material, and attach a flow-meter to the cylinder.
- 3) Apply a seal onto the clearance between the piping material and inserted copper pipe for Nitrogen in order to prevent backflow of the Nitrogen gas.
- 4) When the Nitrogen gas is flowing, be sure to keep the piping end open.
- 5) Adjust the flow rate of Nitrogen gas so that it is lower than 0.05 m³/Hr or 0.02 MPa (0.2kgf/cm²) by means of the reducing valve.
- 6) After performing the steps above, keep the Nitrogen gas flowing until the pipe cools down to a certain extent (temperature at which pipes are touchable with hands).
- 7) Remove the flux completely after brazing.

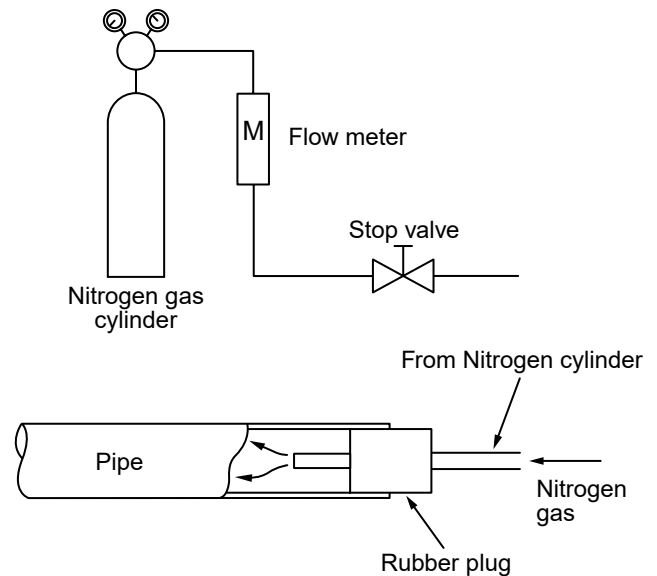



Fig. 3-5-1 Prevention of oxidation during brazing

4. CONSTRUCTION VIEWS

4-1. Indoor Unit

RAS-B05B2KV2G-E, RAS-B07B2KV2G-E,
RAS-B10B2KV2G-E, RAS-B13B2KV2G-E

(Unit : mm)

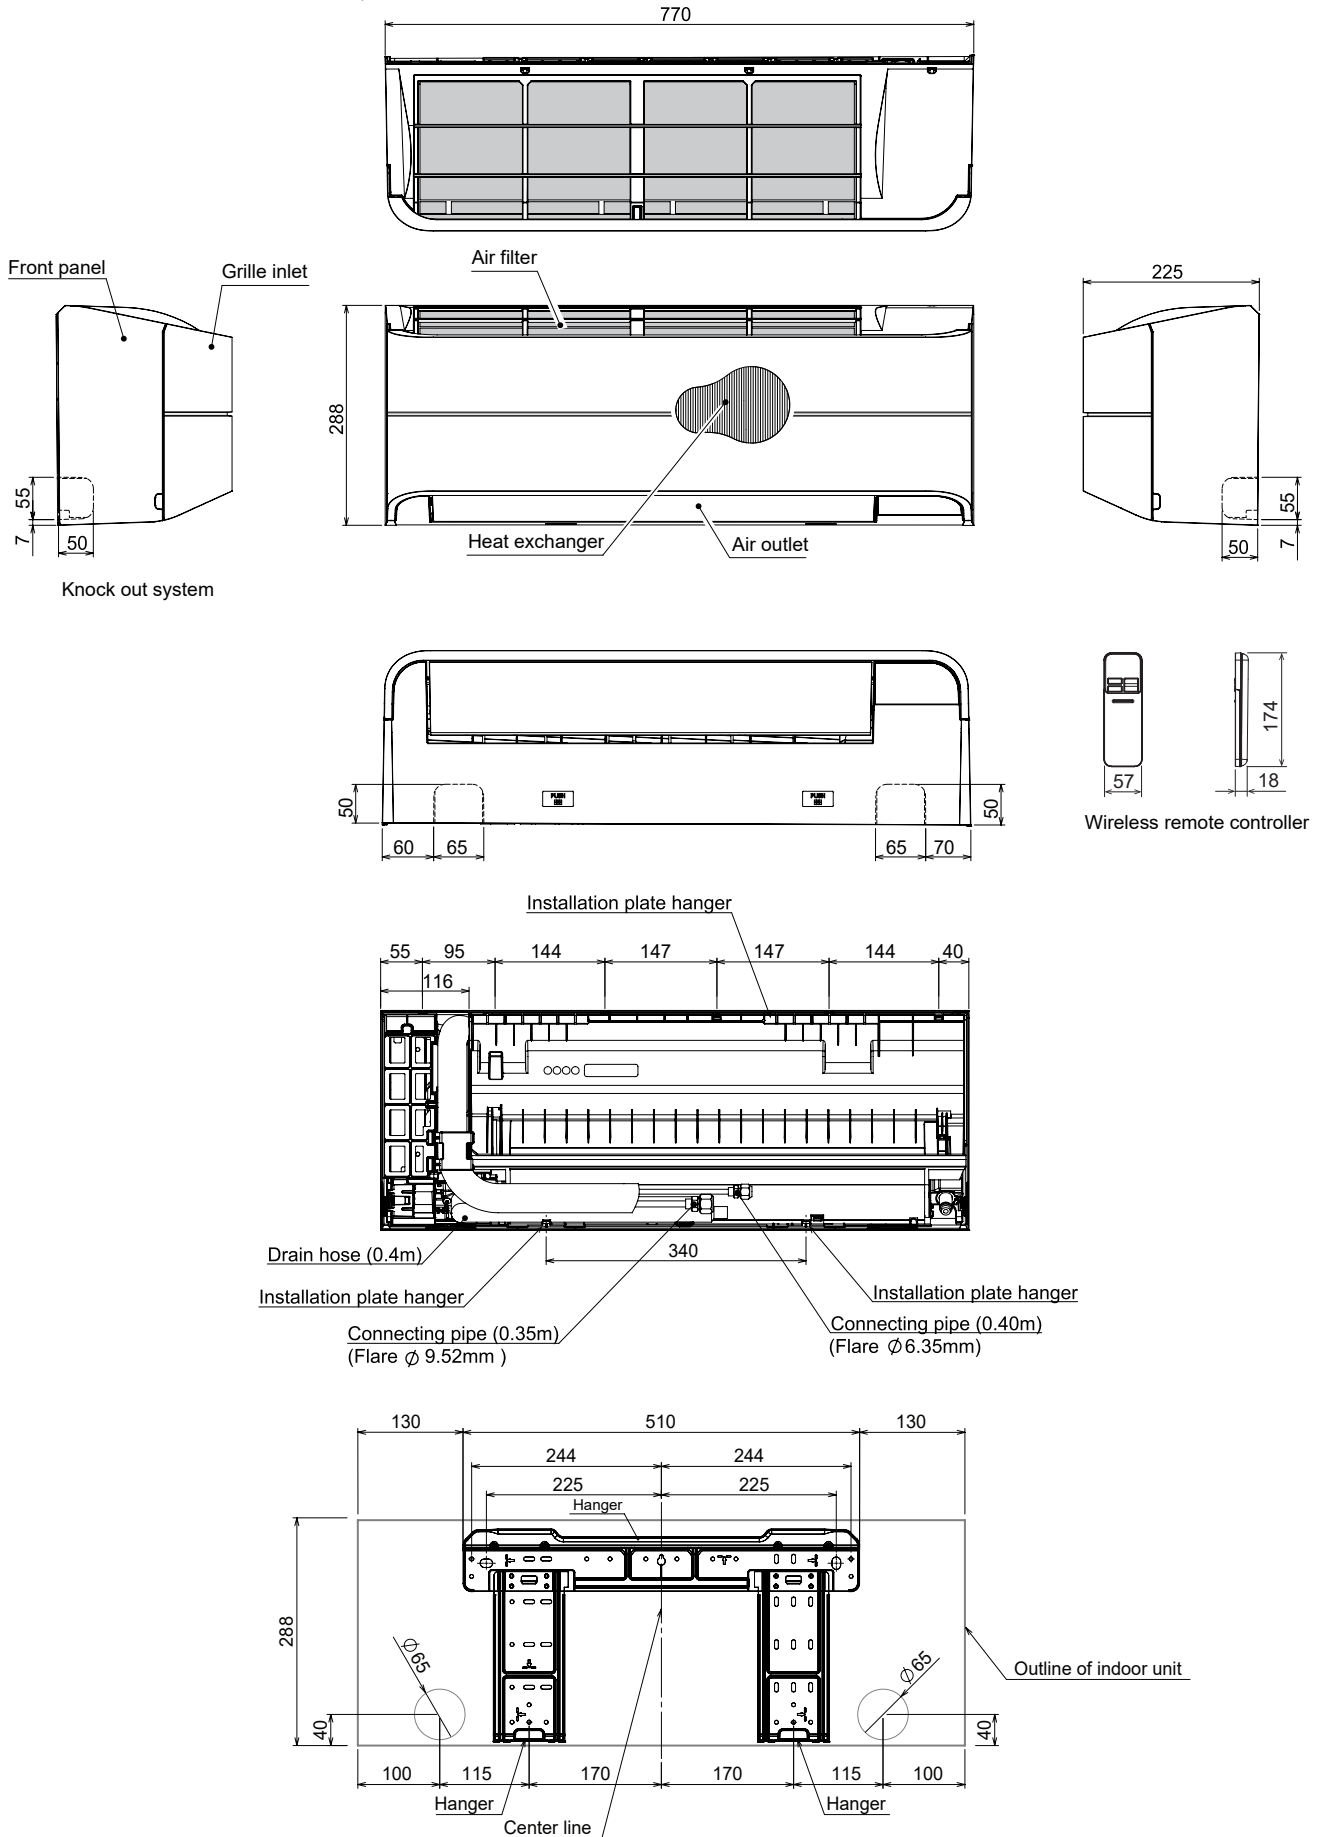


(Unit : mm)



RAS-B24B2KV2G-E

(Unit : mm)



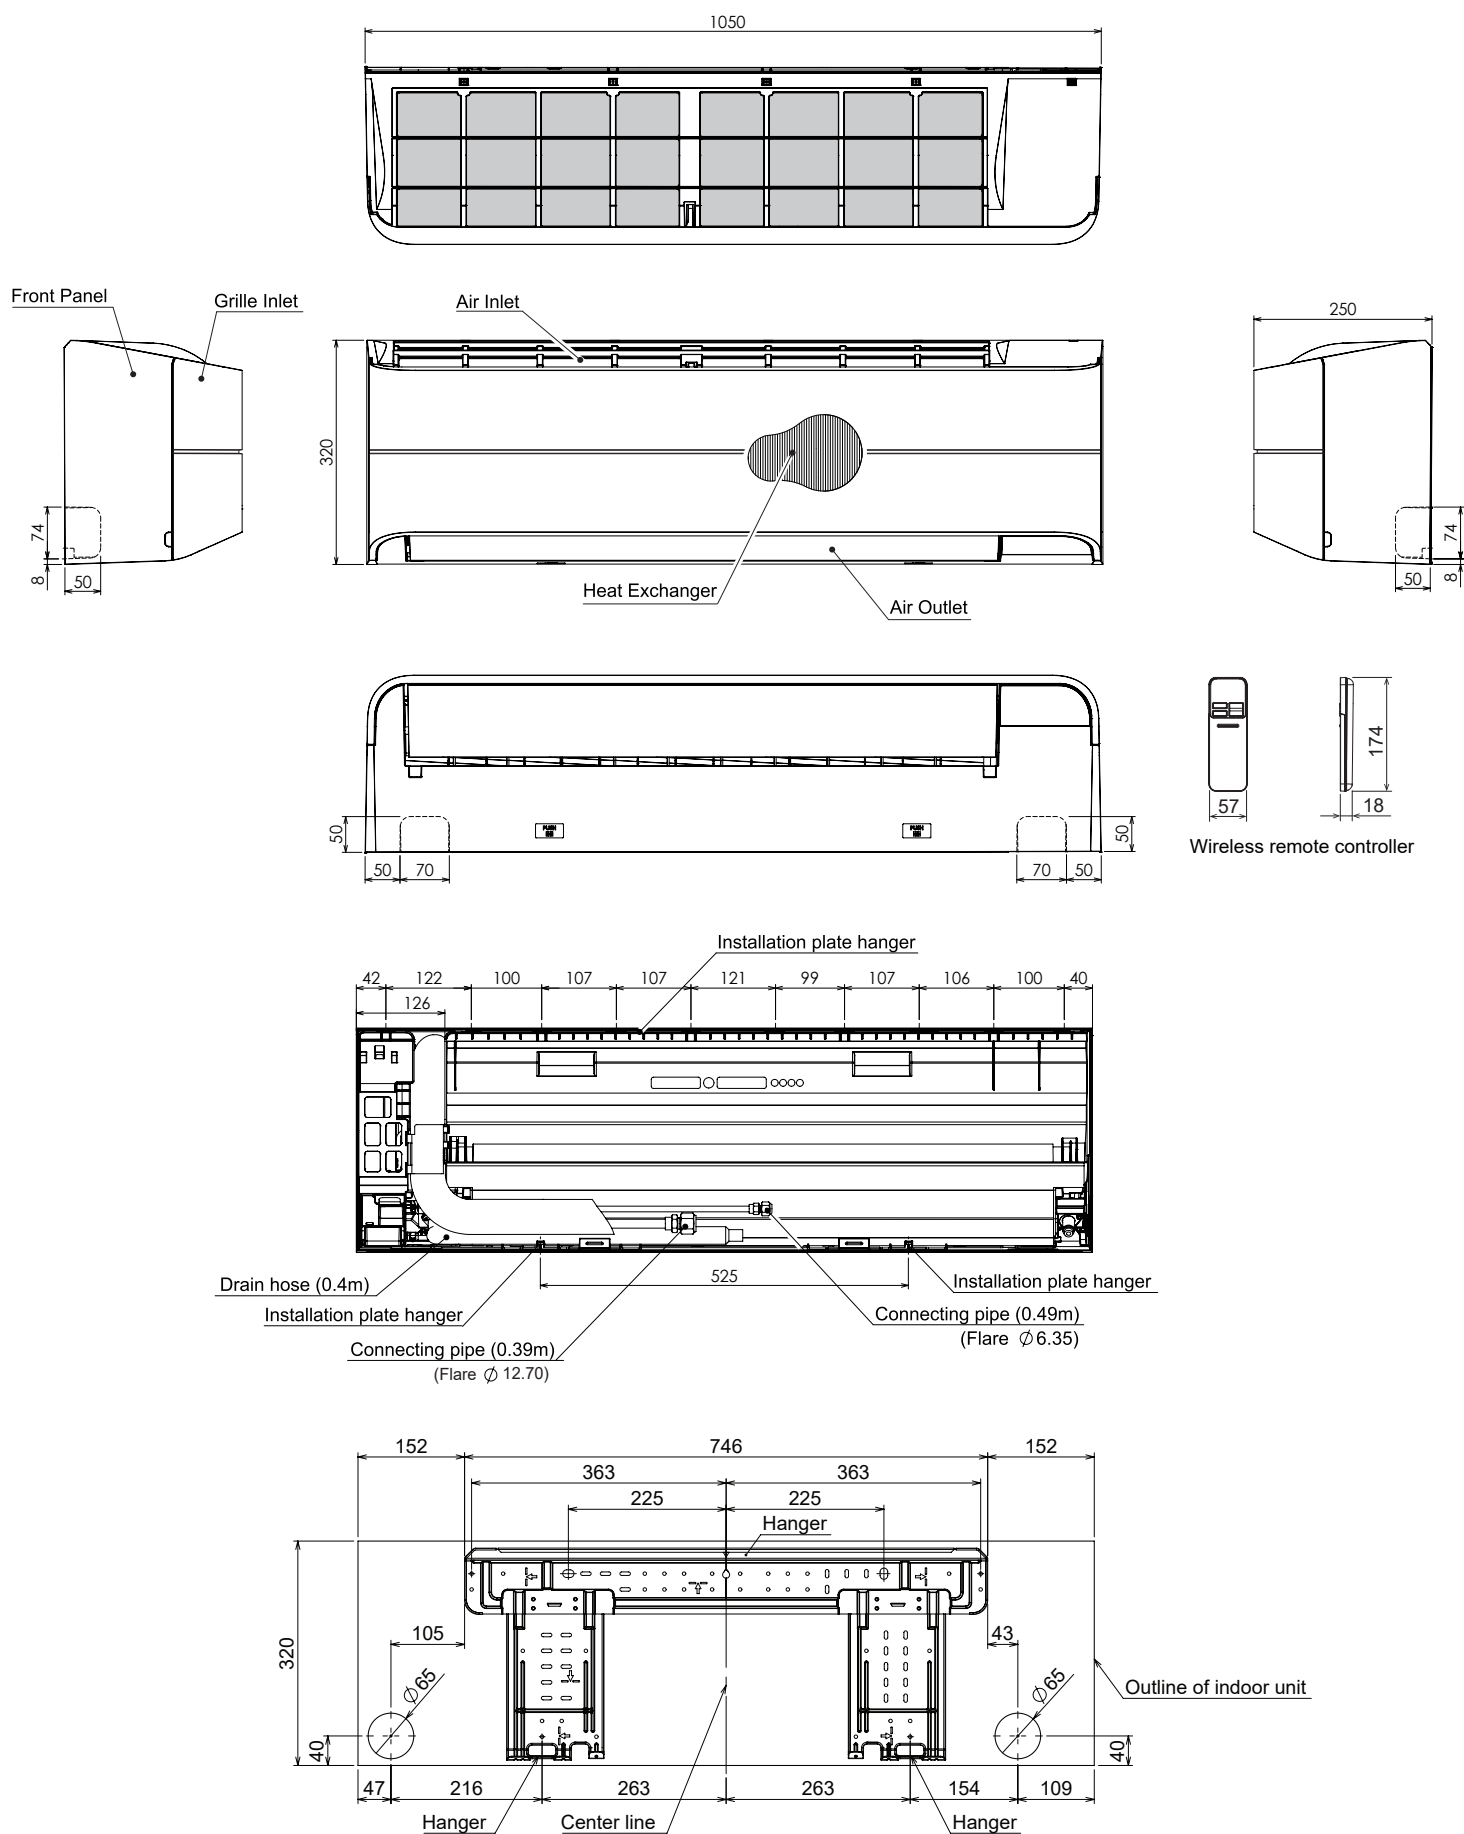


(Unit : mm)




RAS-B16B2KVG-E2, RAS-B18B2KVG-E2

(Unit : mm)

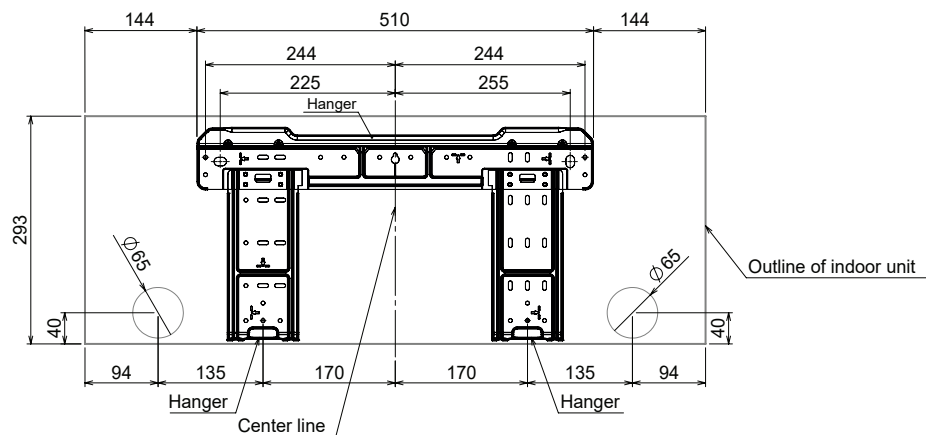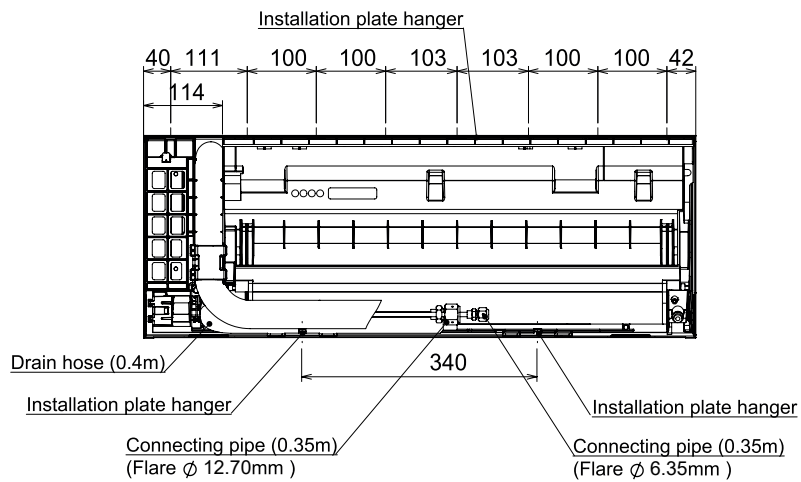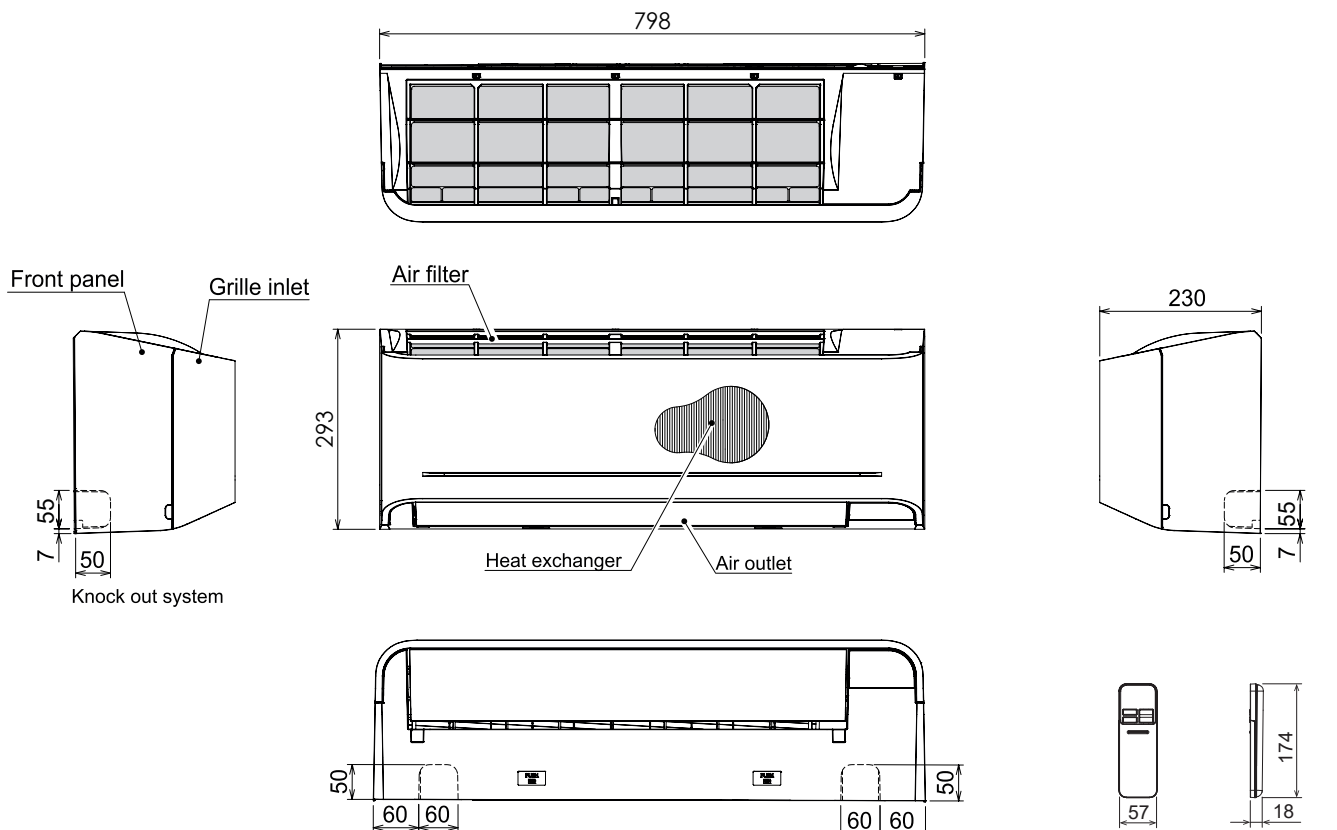

RAS-B24B2KVG-E2





(Unit : mm)

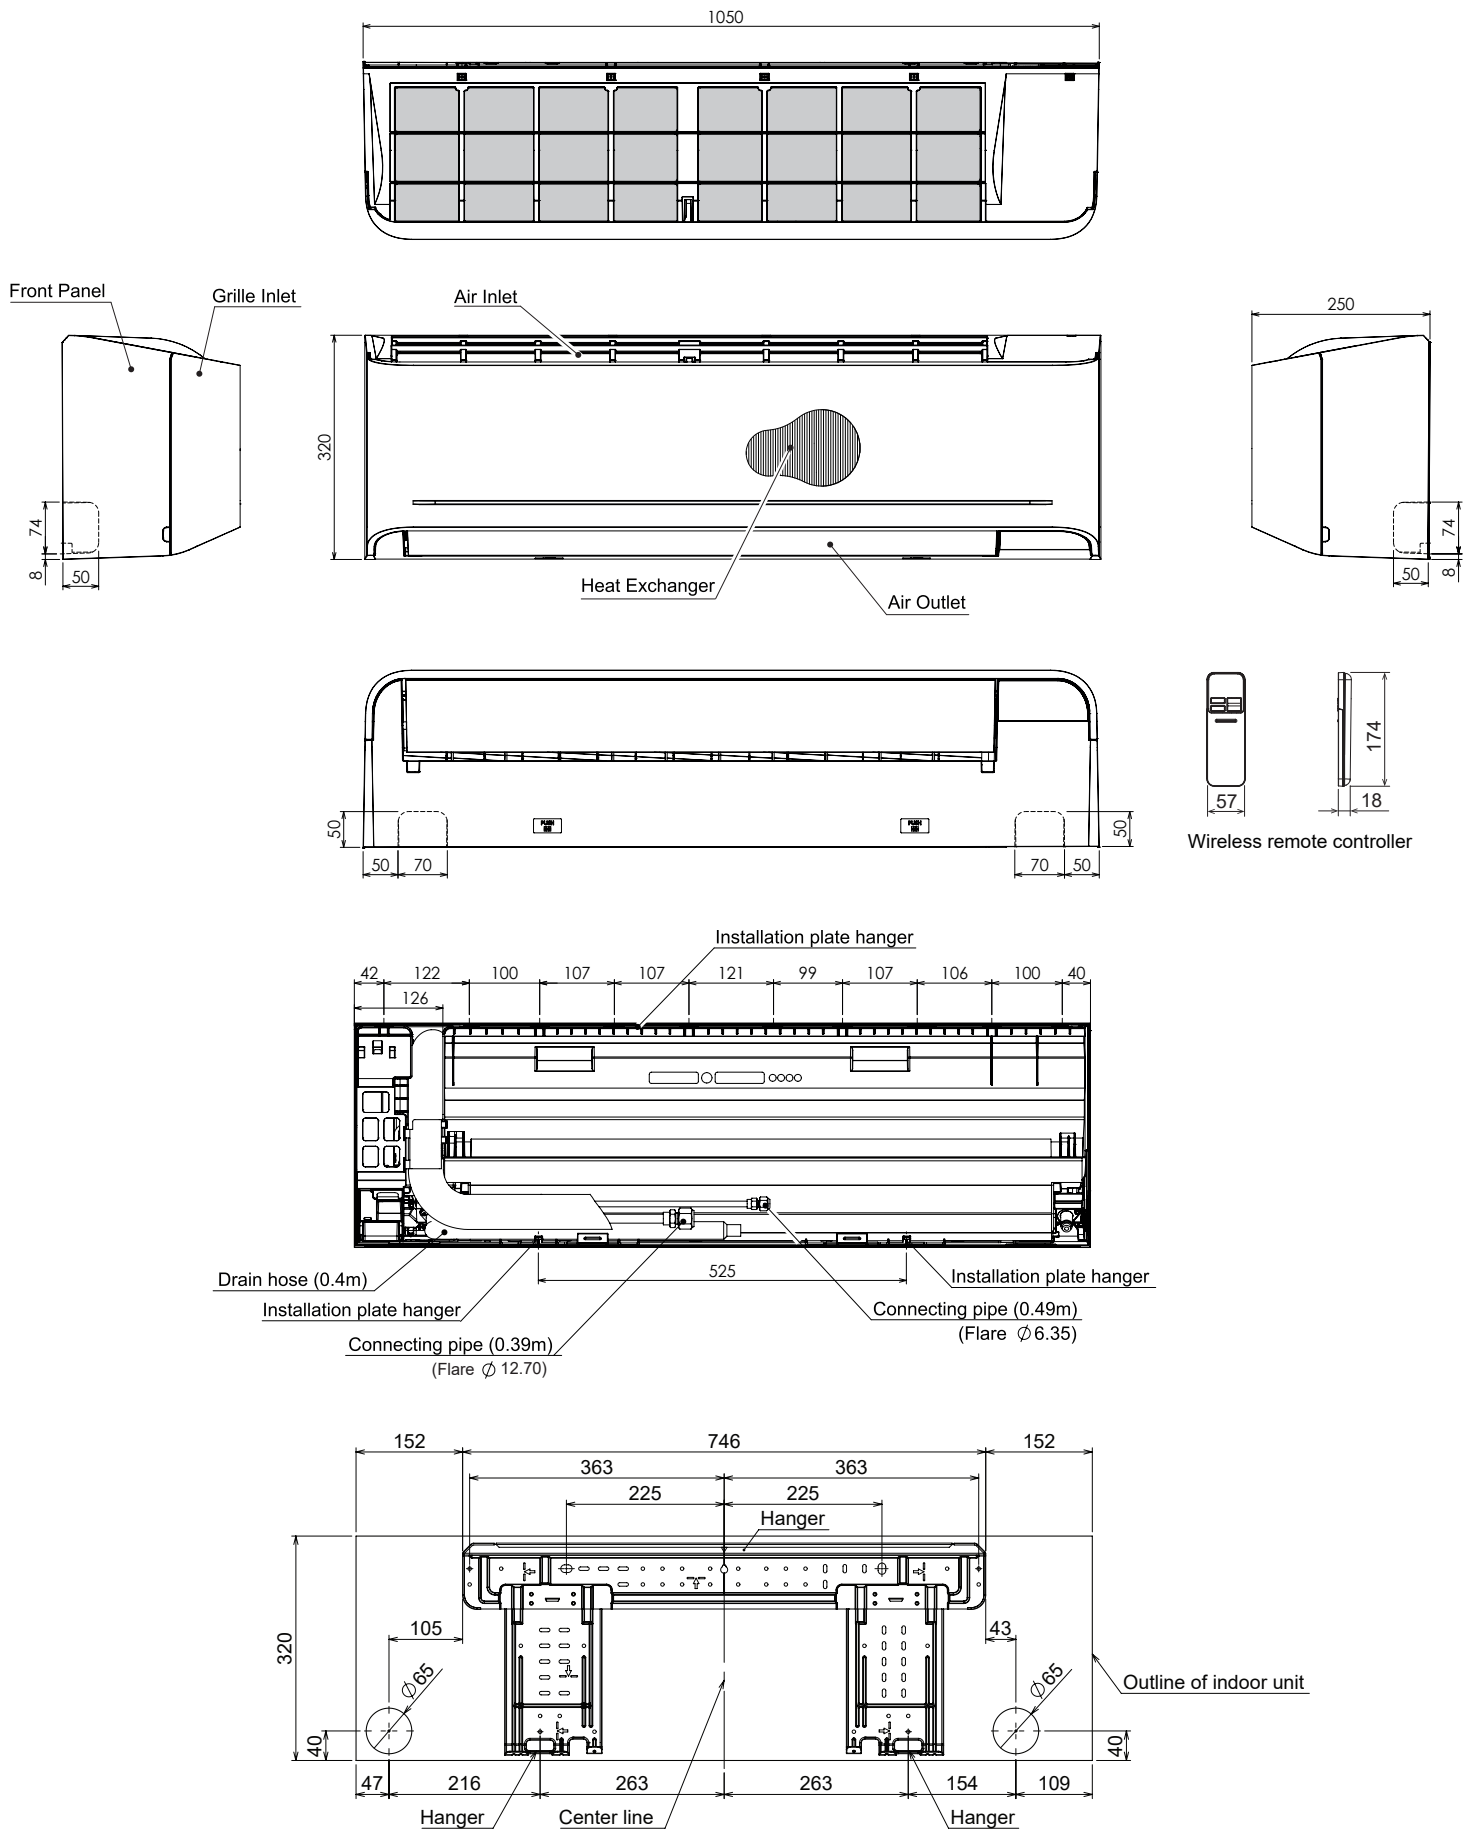

4-2. Outdoor Unit





(For 05k, 07k, 10k, 13k)

(Unit : mm)

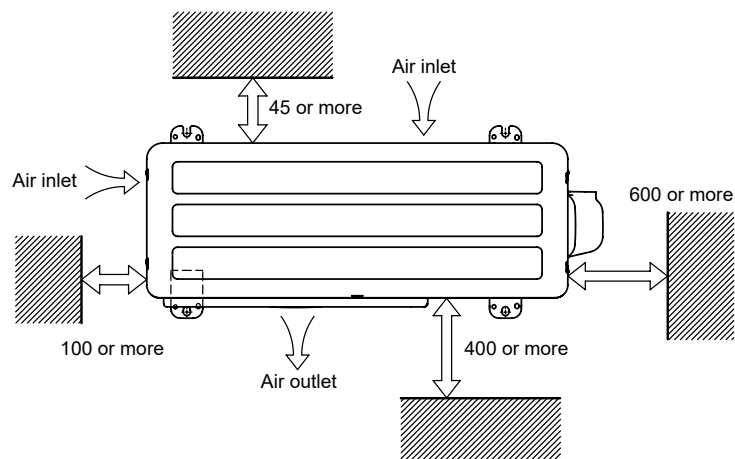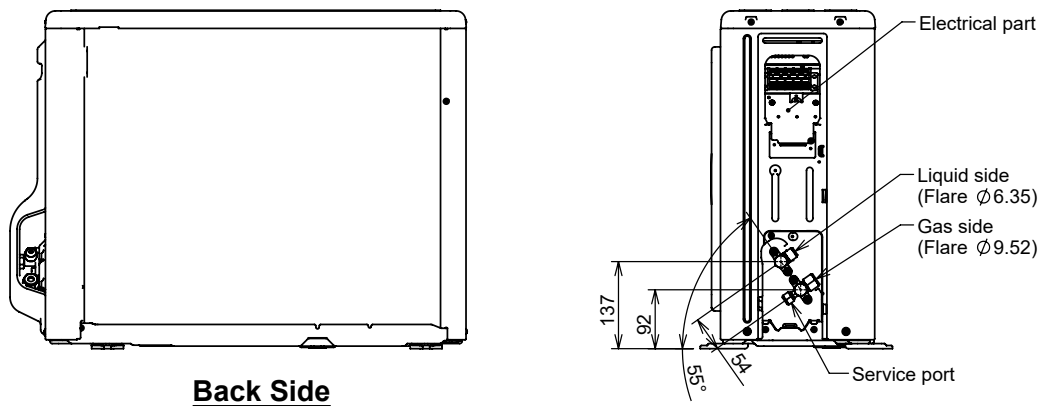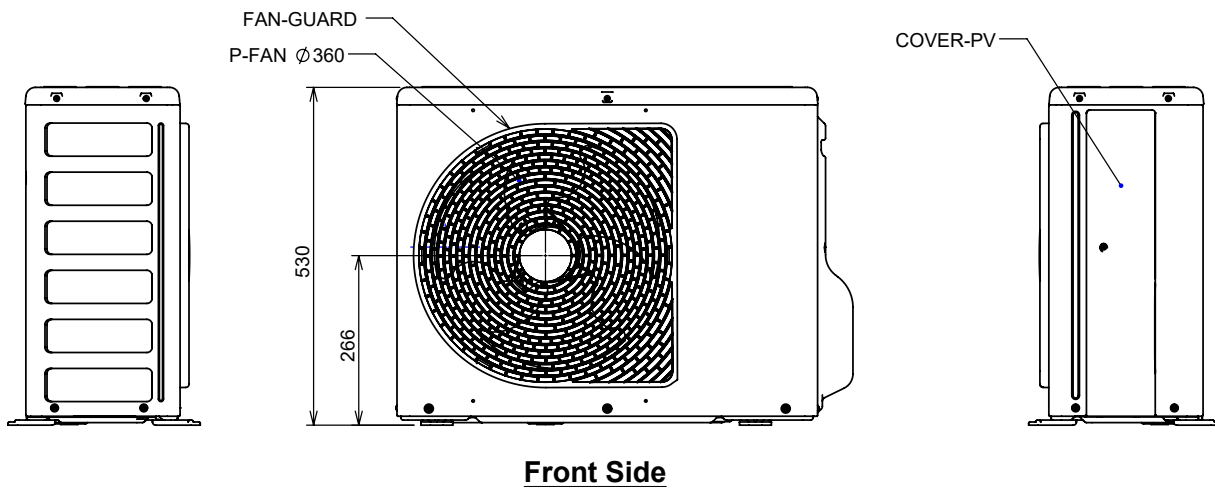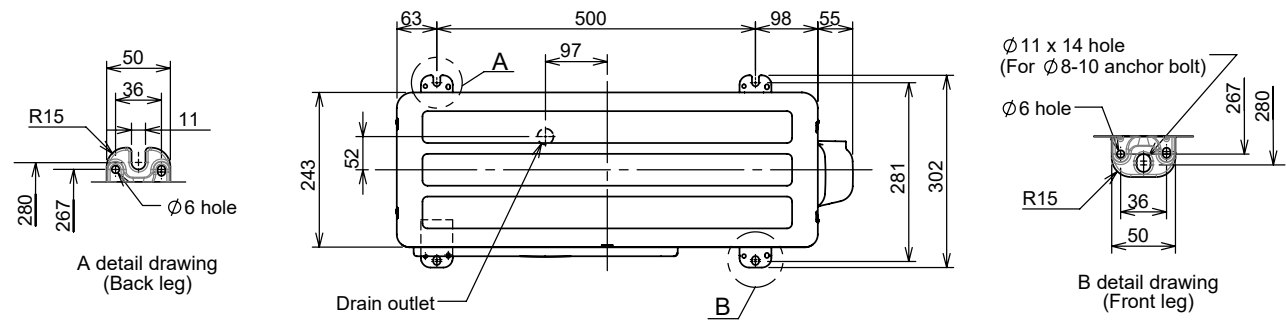




(For 16k, 18k, 24k)

(Unit : mm)

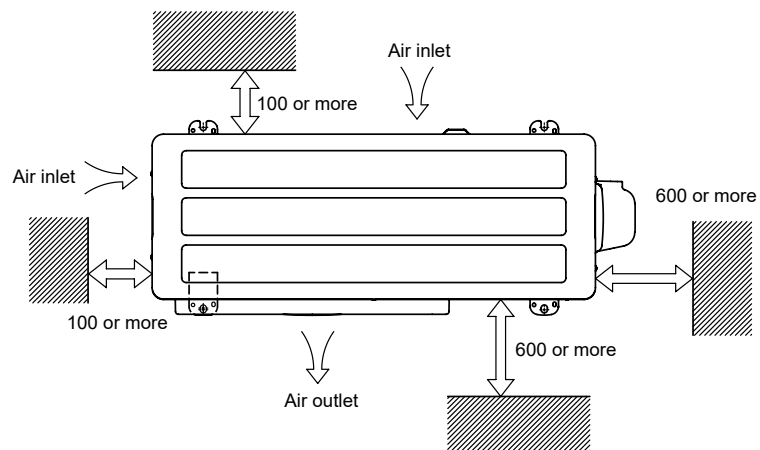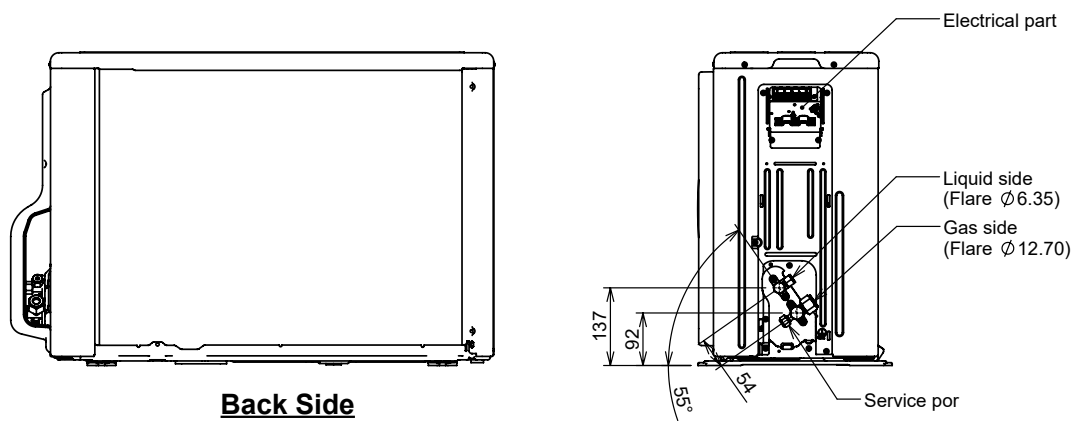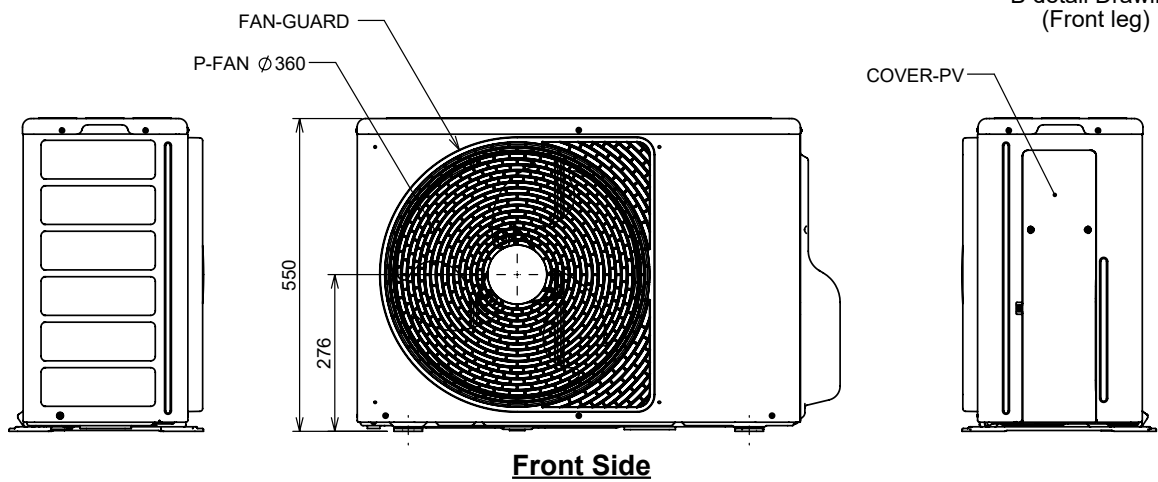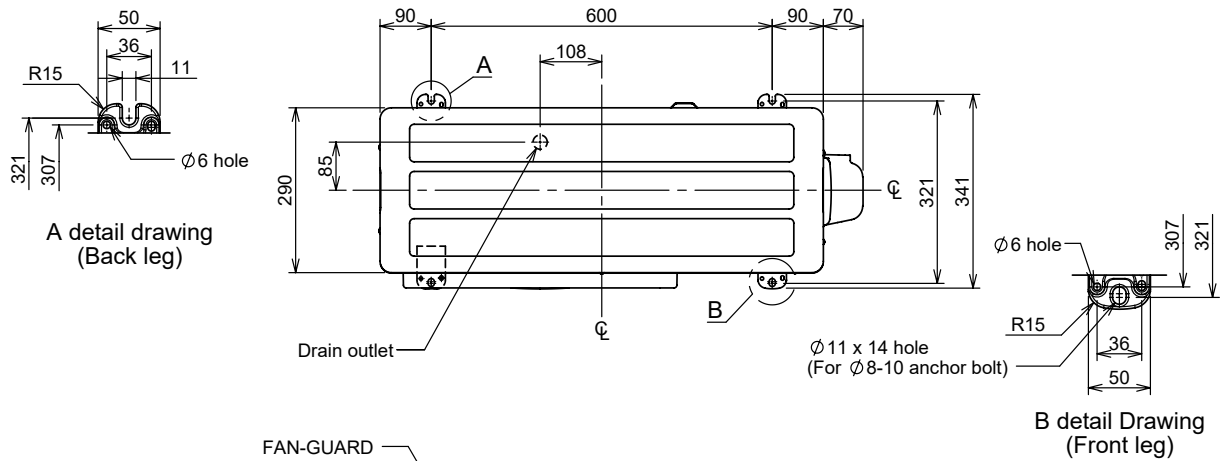




5. WIRING DIAGRAM

(For 05k, 07k)

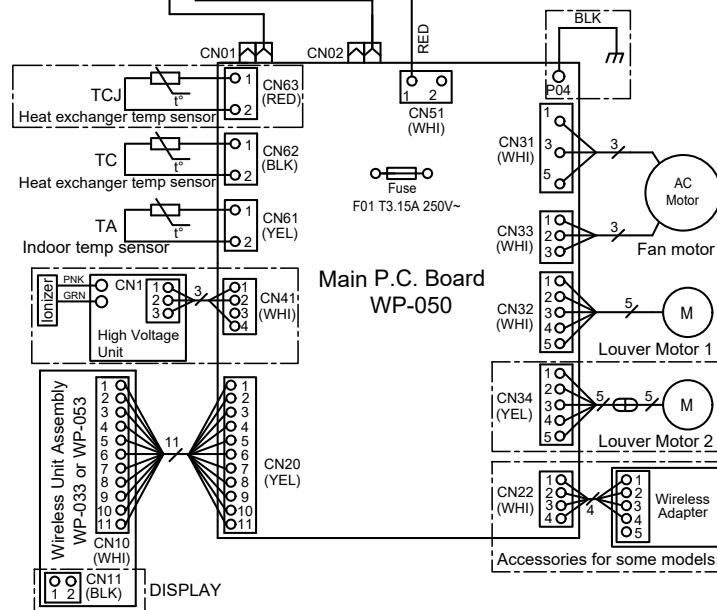
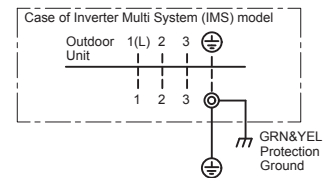
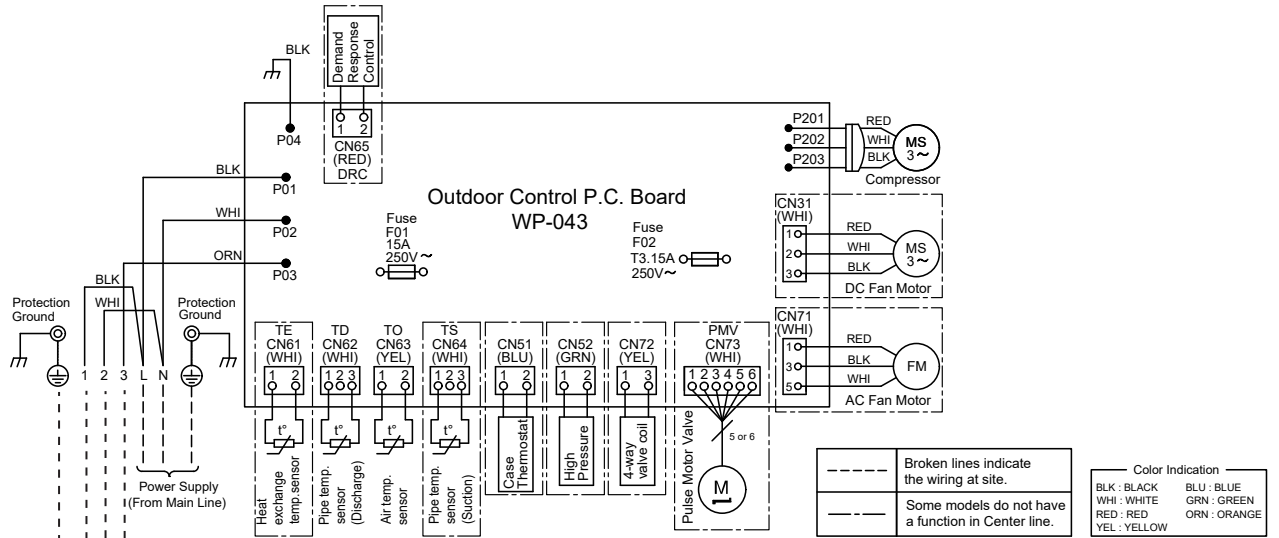


-----	Broken lines indicate the wiring at site.	BLK : BLACK	RED : RED
-----	Some models do not have a function in Center line.	WHI : WHITE	YEL : YELLOW
		GRN : GREEN	BLU : BLUE
		GRN&YEL : GREEN&YELLOW	ORN : ORANGE




(For 10k, 13k)

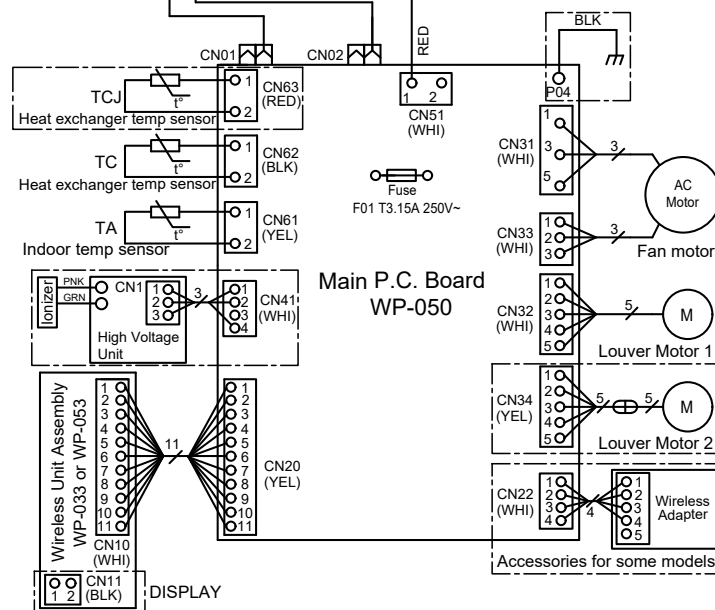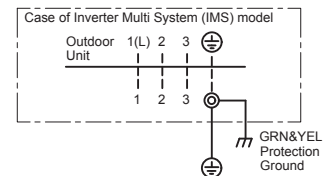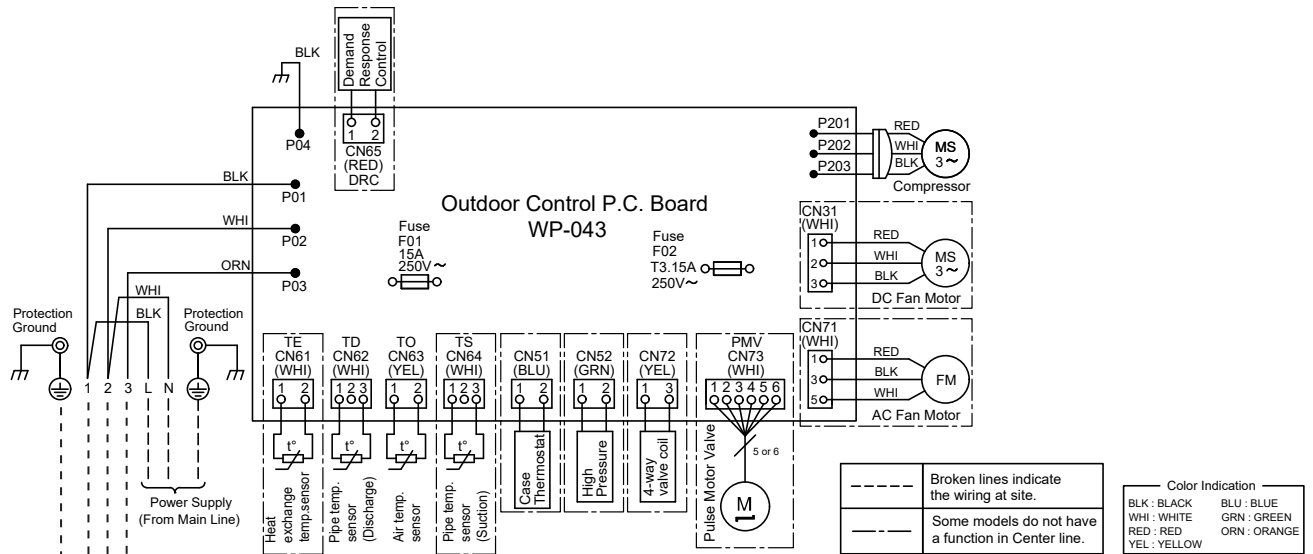

(For 16k, 18k)

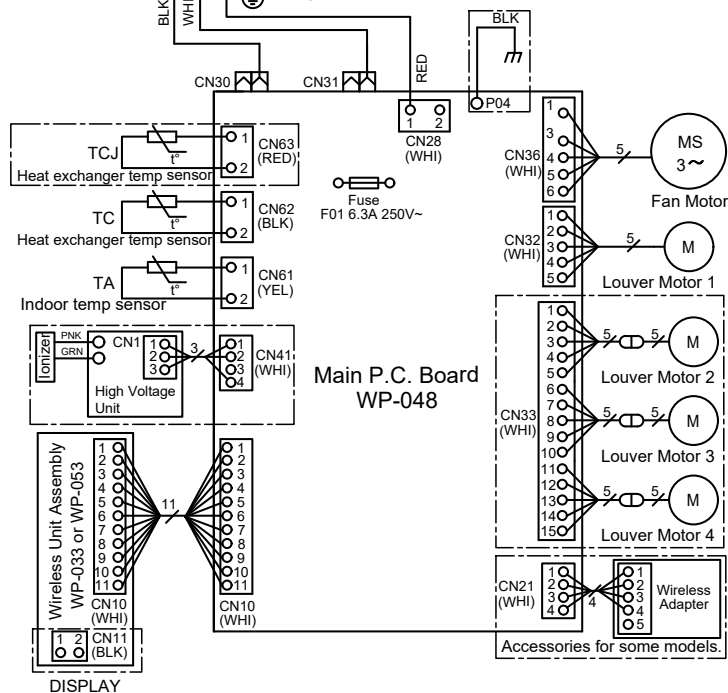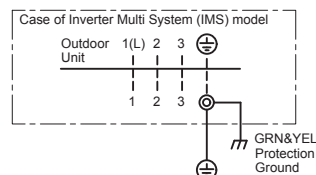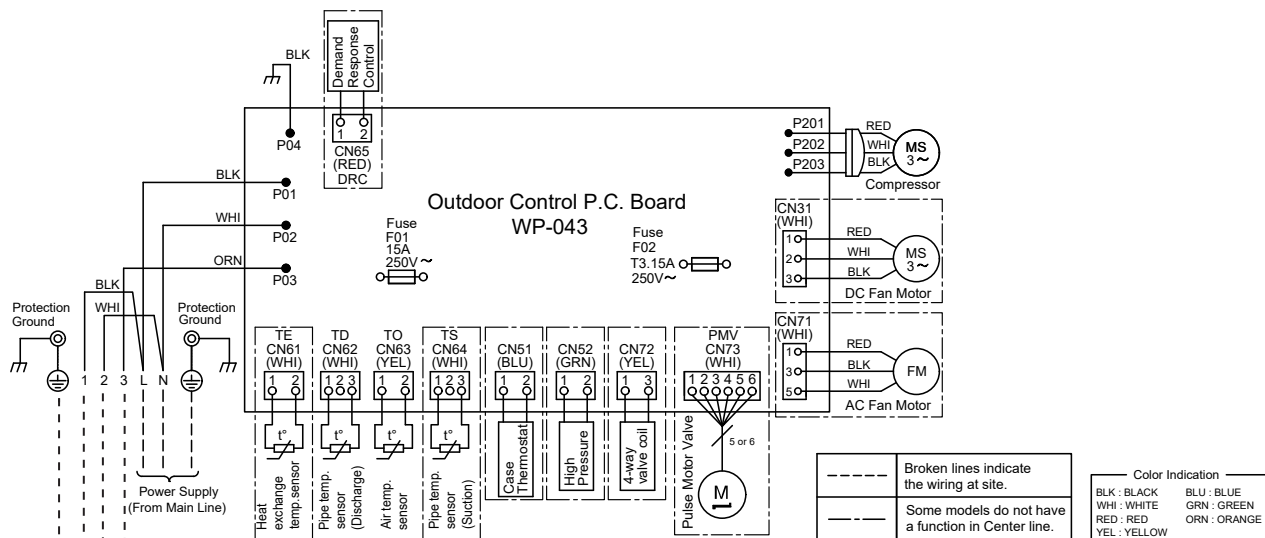

(For 24k)

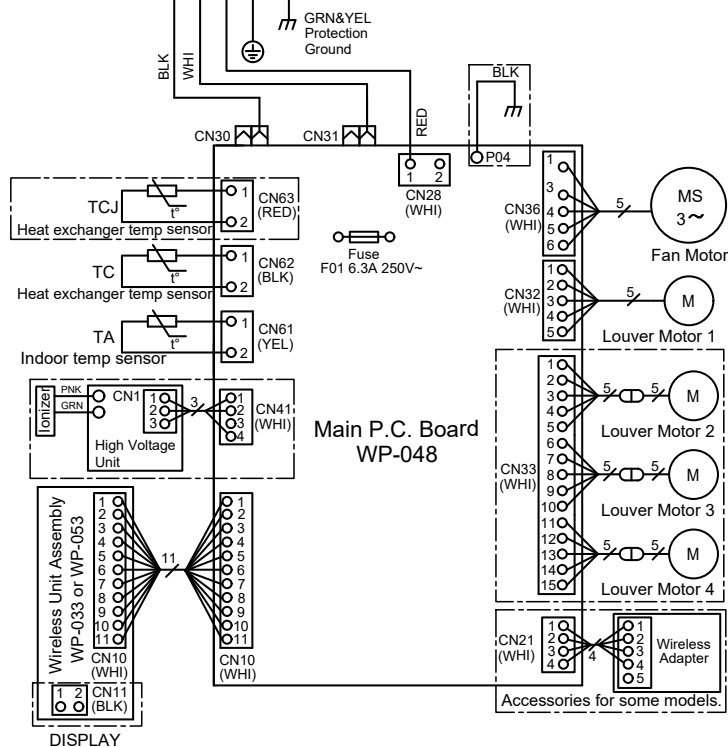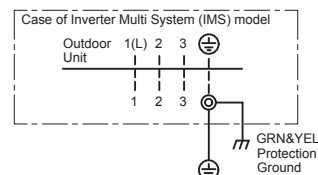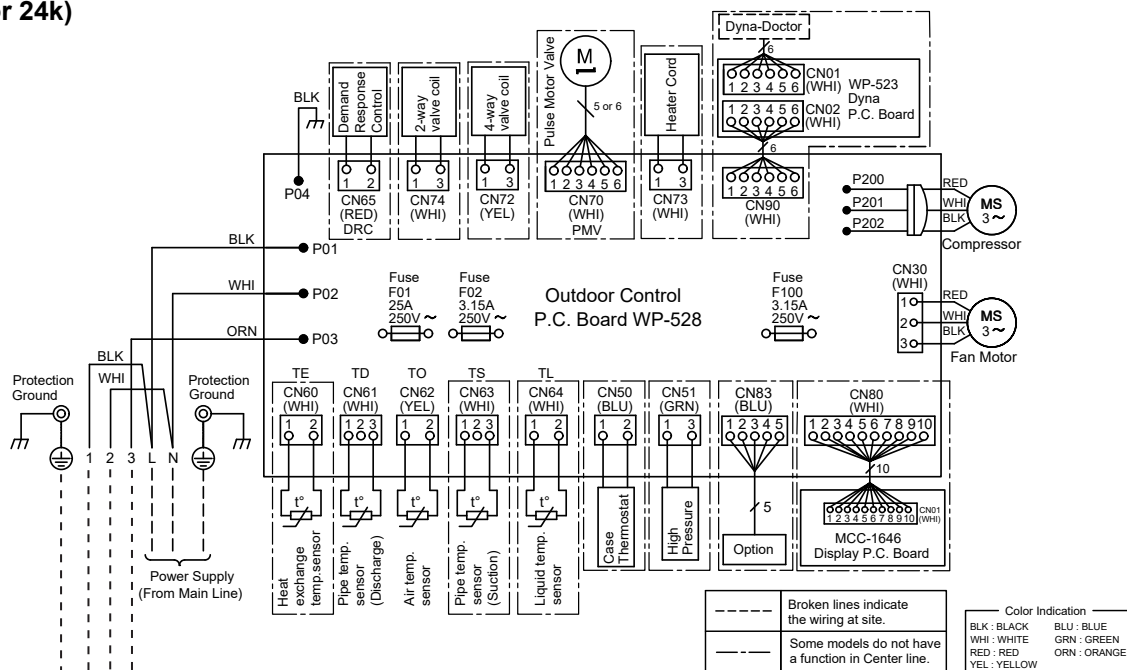

-----	Broken lines indicate the wiring at site.	BLK : BLACK	RED : RED
-----	Some models do not have a function in Center line.	PNK : PINK	WHI : WHITE
		GRN : GREEN	YEL : YELLOW
		GRN&YEL : GREEN&YELLOW	

6. SPECIFICATIONS OF ELECTRICAL PARTS

6-1. Indoor Unit


No.	Parts name		Type name	Specifications
1	Fan Motor	05k, 07k, 10k, 13k	SJM-240-25	AC 220-240V, 25W
		16k, 18k, 24k	WDF-340-30CA	DC 280-340V, 42W
2	Room temp. sensor (TA-sensor)		(-)	10kΩ at 25°C
3	Heat exchanger temp. sensor (TC-sensor)		(-)	10kΩ at 25°C
4	Heat exchanger temp. sensor (TCJ-sensor)		(-)	10kΩ at 25°C
5	Louver motor	05k, 07k, 10k, 13k	MSBPC20F04	Output (Rated) 4 phase, DC12V
		16k, 18k, 24k	24BYJ48-STHL	

6-2. Outdoor Unit


No.	Parts name		Type name	Specifications
1	Compressor	05k, 07k	KSK66D15UDZB3	3-Phases (6-Poles) ; 540W
		10k, 13k	GSX073NKQF6JT8	3-Phases (8-Poles) ; 650W
		16k, 18k	KSK103D32UEZB31	3-Phases (8-Poles) ; 850W
		24k	KSN140D33UFZA3	3-Phases (6-Poles) ; 1115W
2	Fan Motor		LDF-340-A43AA1-1	DC 140-340V ; 43W
3	4-Way valve coil		SQ-A2522G-000352	AC 220-240V
4	Discharge temp. sensor	(TD sensor)	(Inverter attached)	49kΩ at 25°C
5	Outside air temp. sensor	(TO sensor)	(Inverter attached)	10kΩ at 25°C
6	Heat Exchanger temp. sensor	(TE sensor)	(Inverter attached)	10kΩ at 25°C
7	Terminal block	(5 poles)	JX109-5A	AC 250V, 20A

7. REFRIGERANT CYCLE DIAGRAM


7-1. Refrigerant Cycle Diagram (05k)

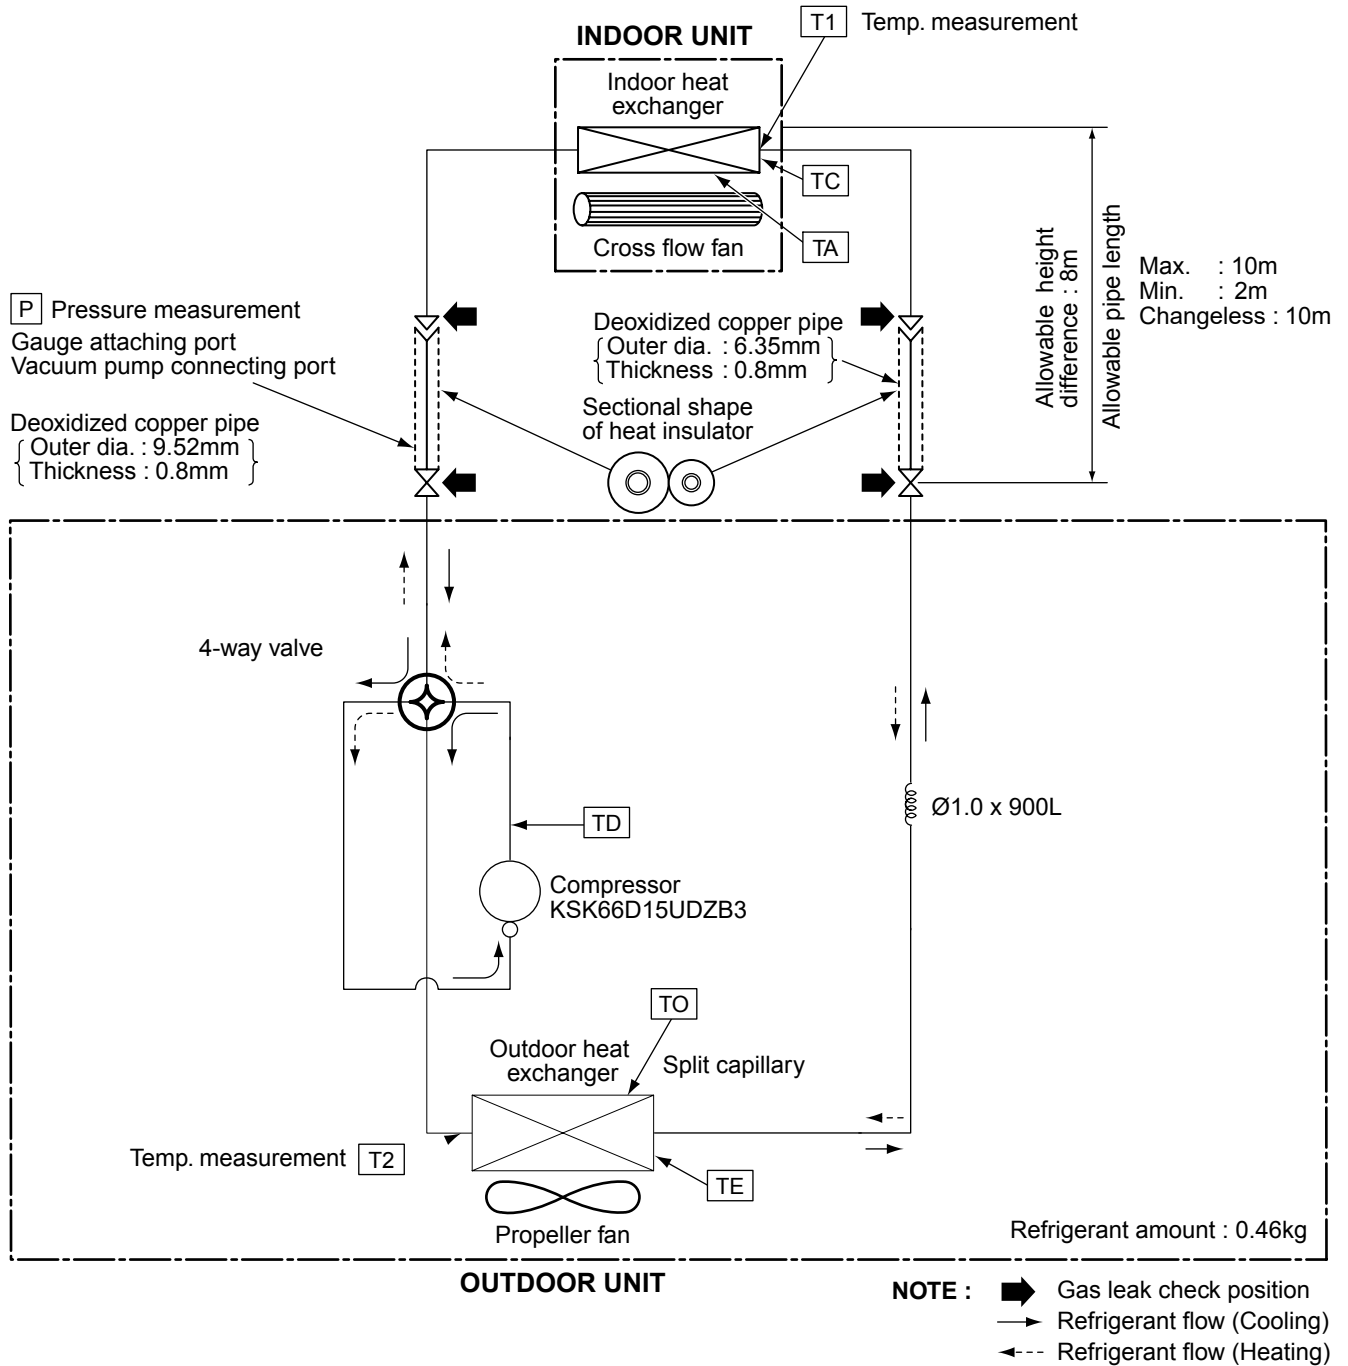


(07k)

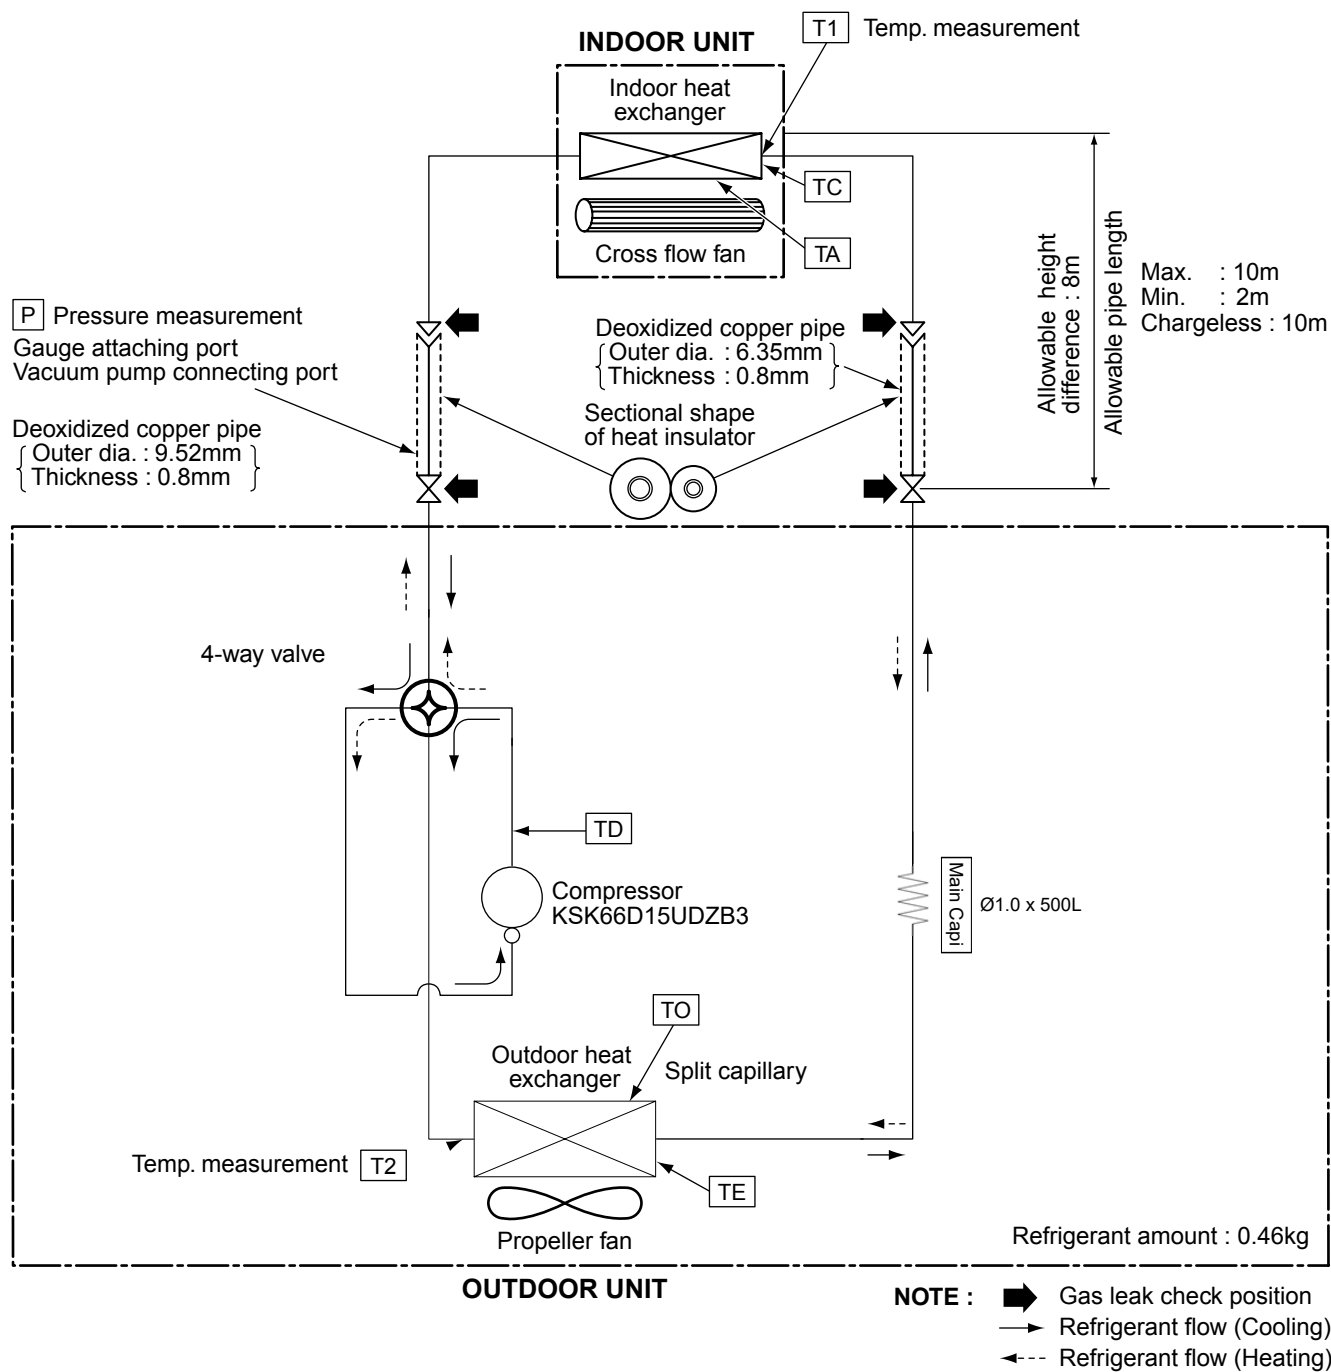


(10k)

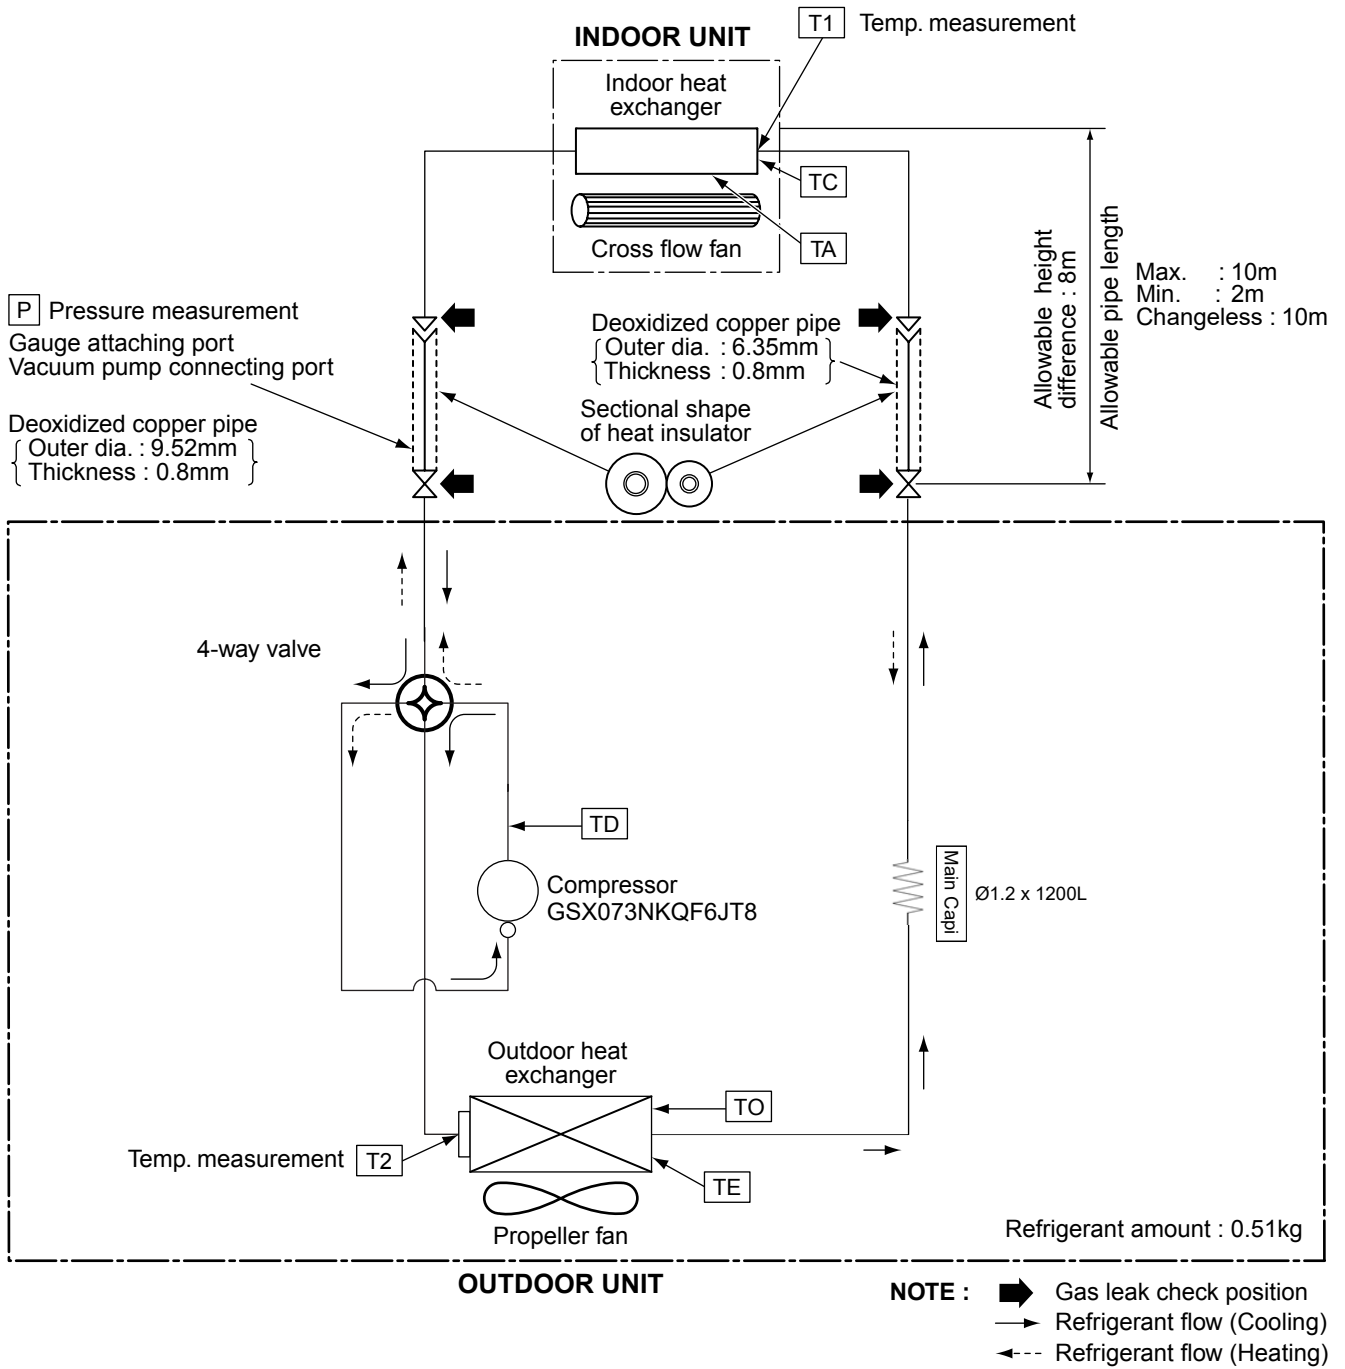

(13k)

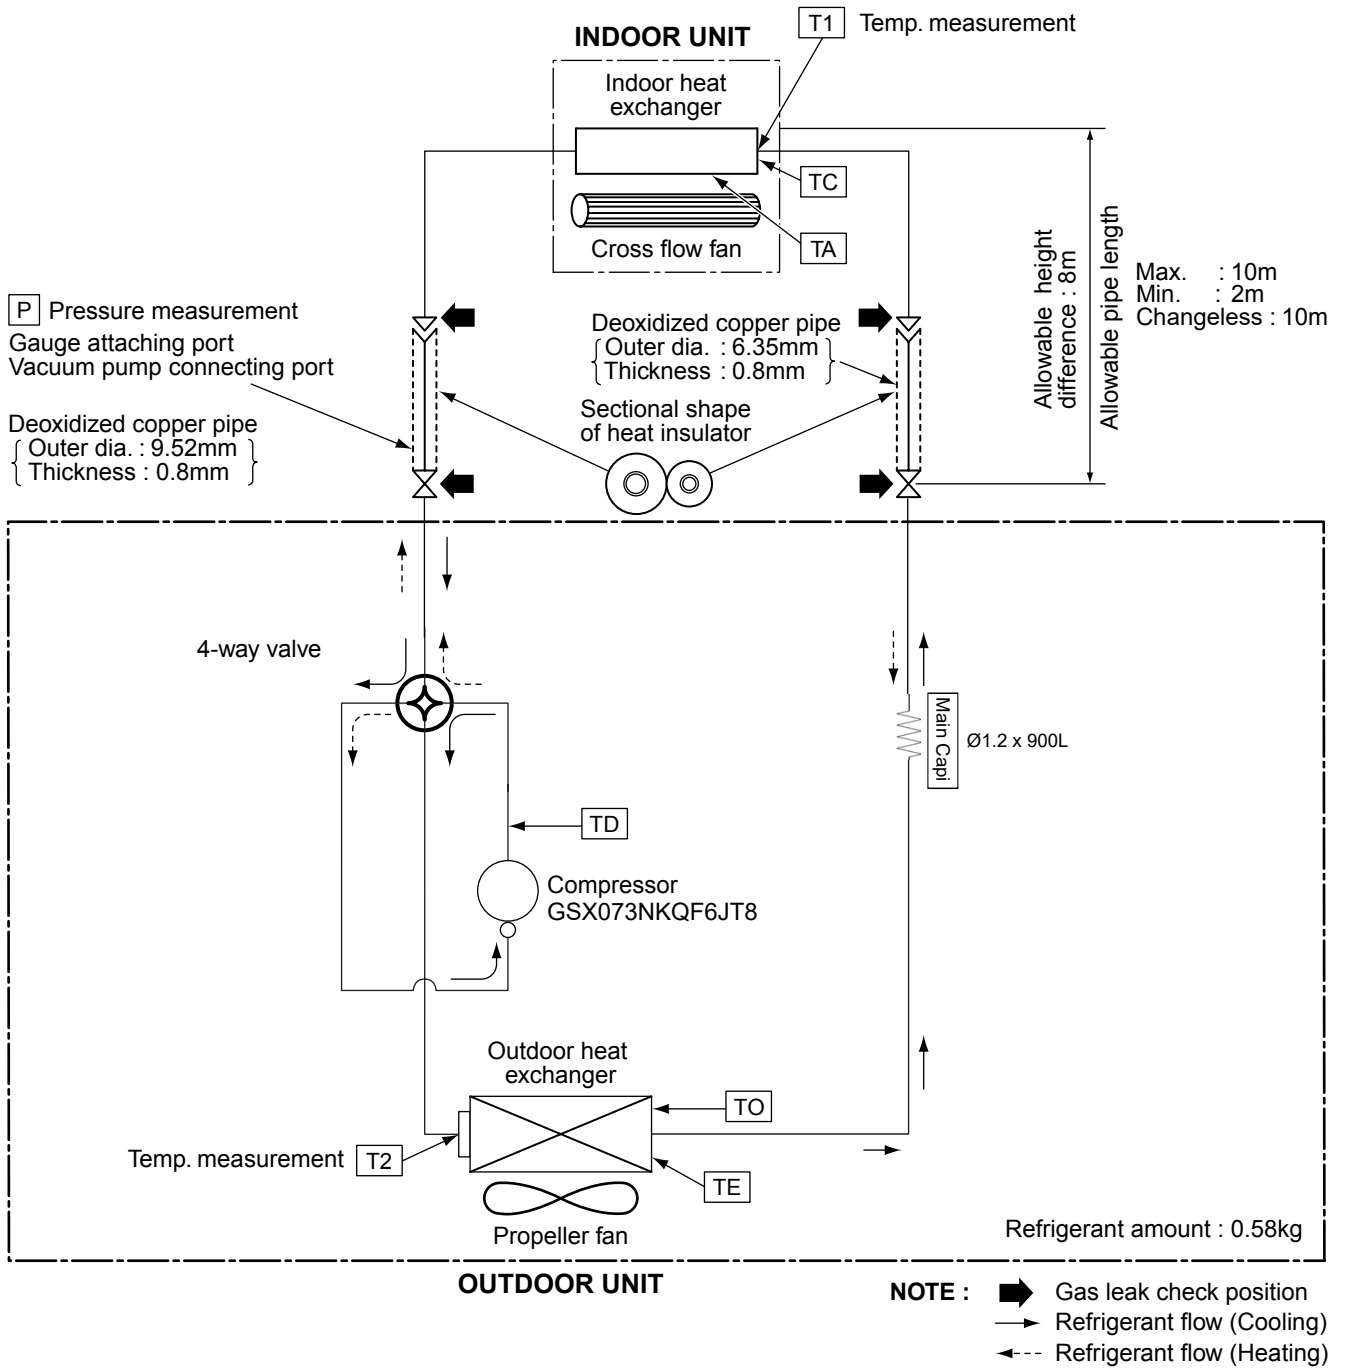


(16k)

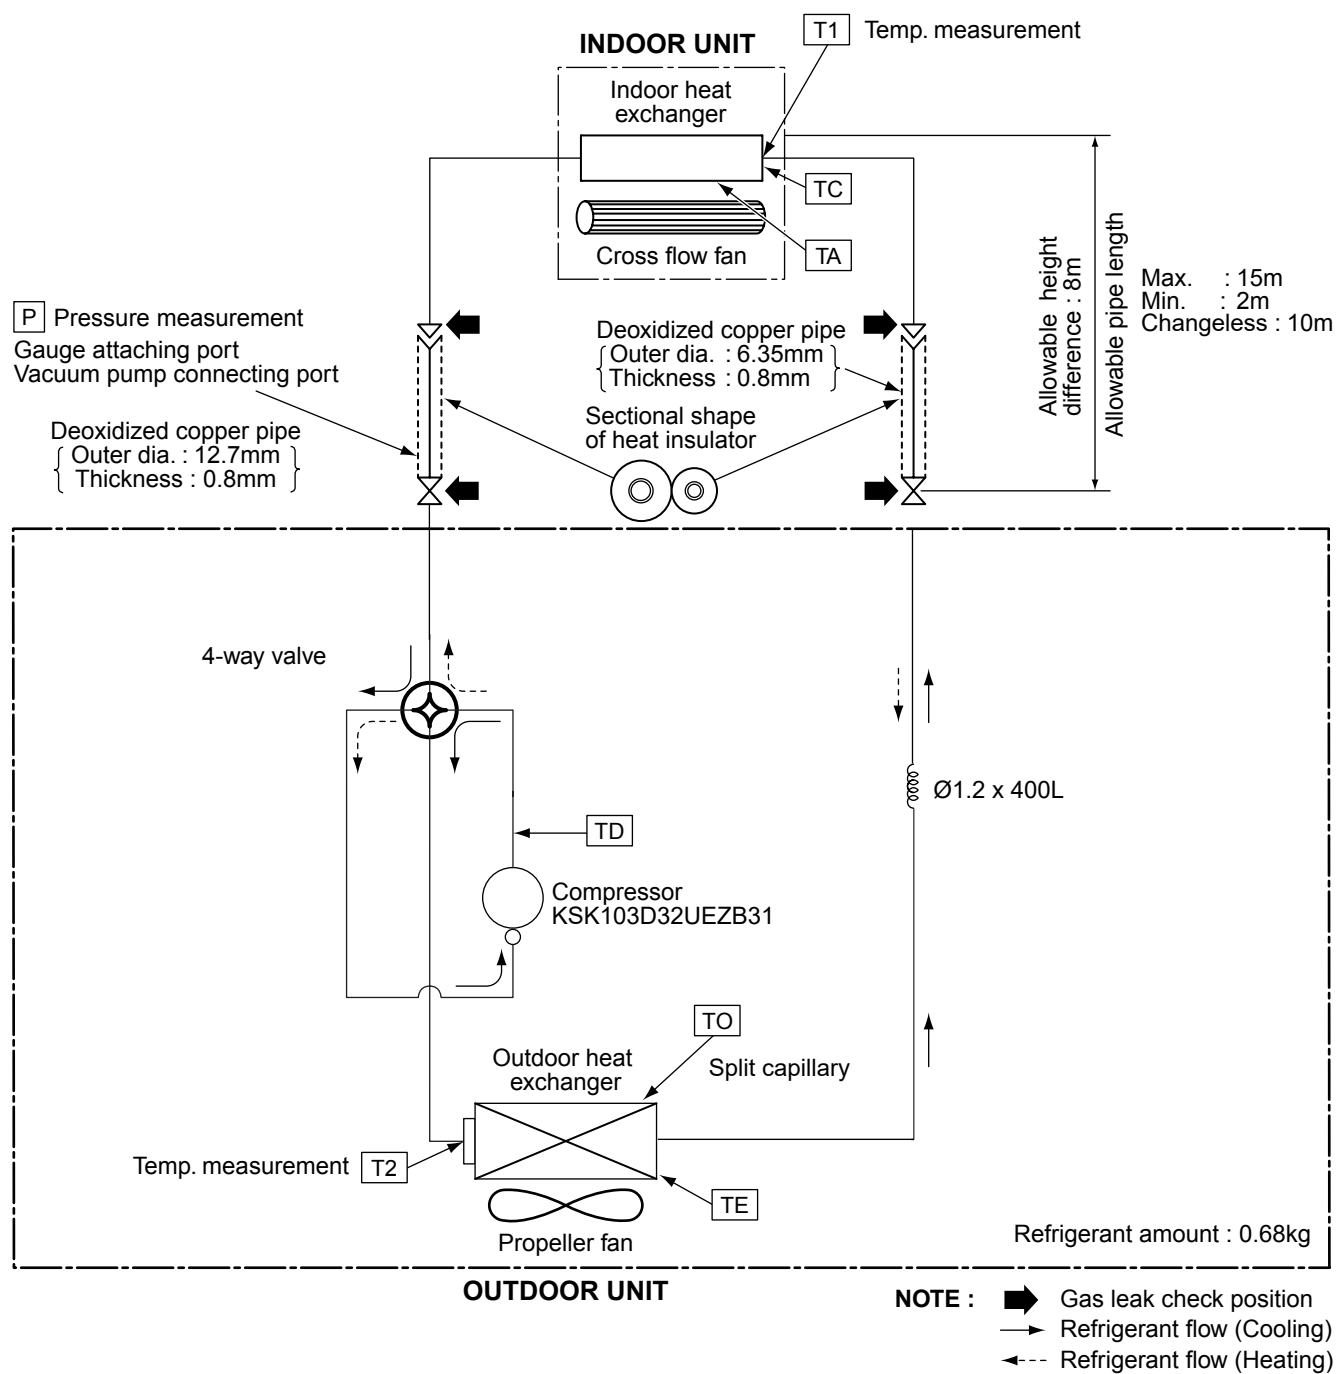

NOTE :

- The maximum pipe length of this air conditioner is 15 m. When the pipe length exceeds 15m, the additional charging of refrigerant, 20g per 1m for the part of pipe exceeded 15m is required. (Max. 100g)


(18k)

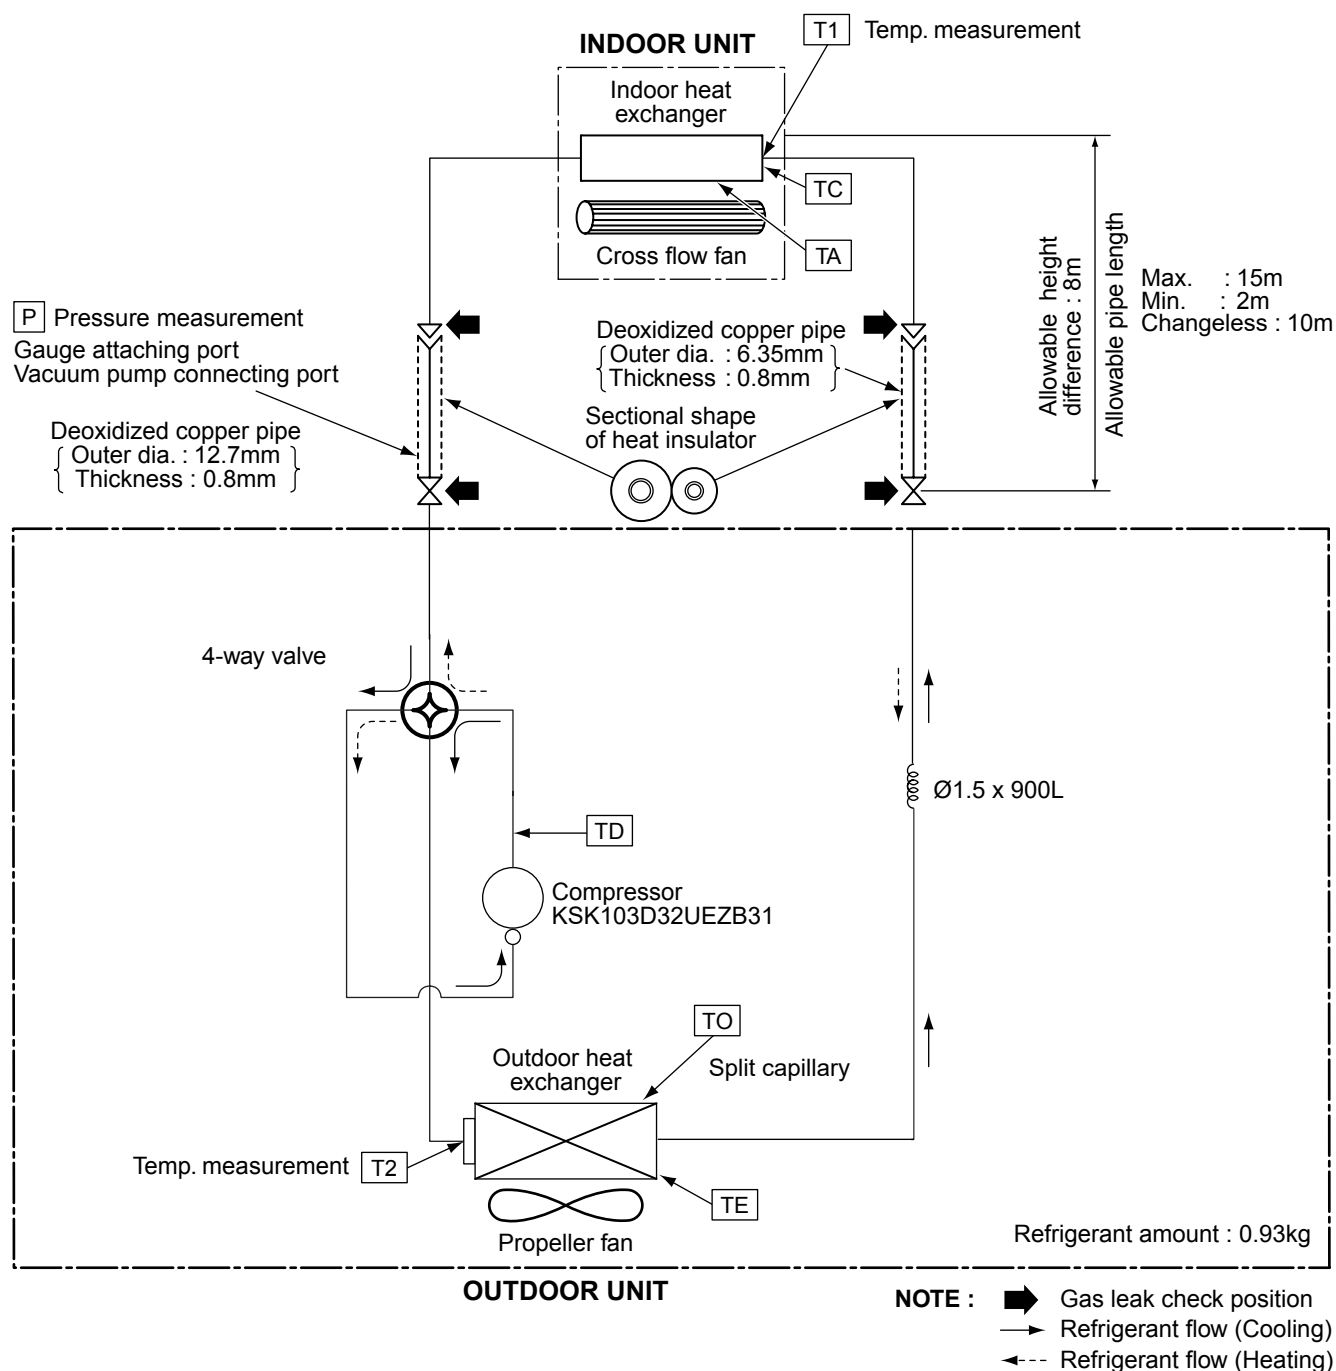

NOTE :

- The maximum pipe length of this air conditioner is 15 m. When the pipe length exceeds 15m, the additional charging of refrigerant, 20g per 1m for the part of pipe exceeded 15m is required. (Max. 100g)

(24k)

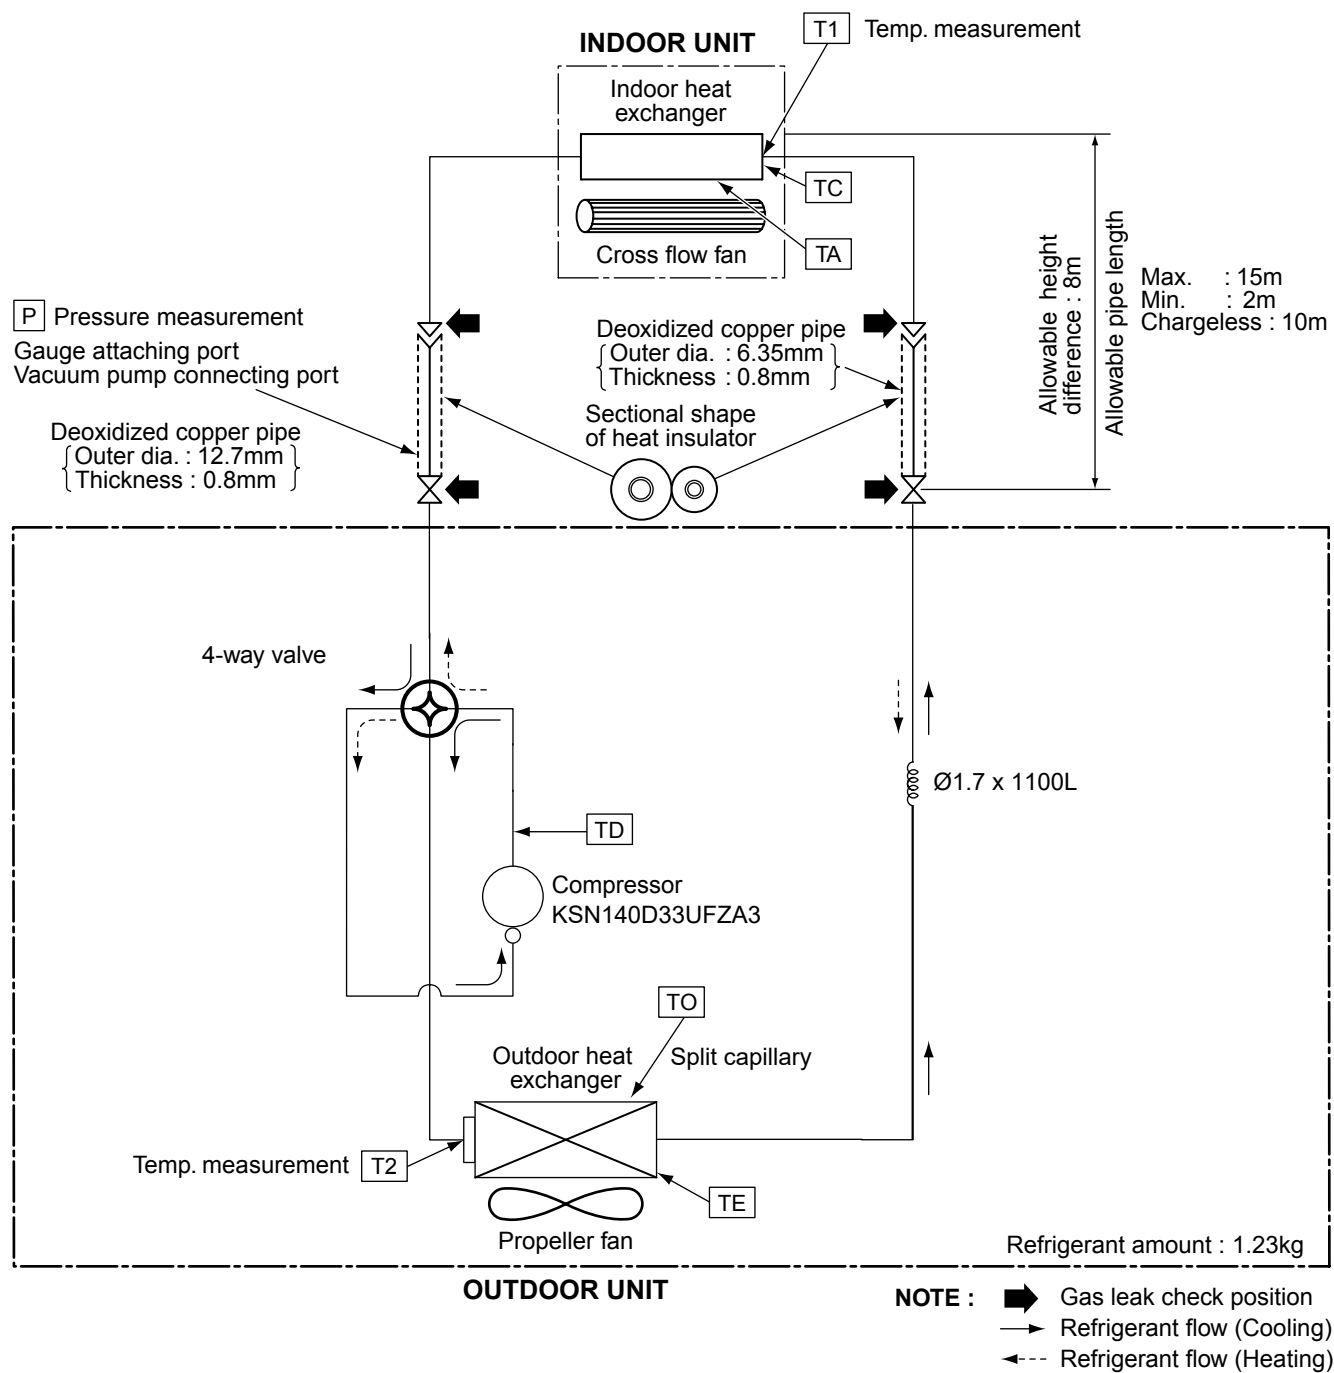

NOTE :

- The maximum pipe length of this air conditioner is 15 m. When the pipe length exceeds 10m, the additional charging of refrigerant, 20g per 1m for the part of pipe exceeded 10m is required. (Max. 100g)

7-2. Operation Data

<Cooling>

Temperature condition(°C)		Model name RAS-	Standard pressure P (MPa)	Heat exchanger pipe temp.		Indoor fan mode	Outdoor fan mode	Compressor revolution (rps)	Connecting piping (m)
Indoor	Outdoor			T1 (°C)	T2 (°C)				
27/19	35/24	05k	1.2 to 1.3	16 to 17	44 to 45	High	High	34	5.0
		07k	1.2 to 1.3	14 to 15	47 to 48	High	High	49	
		10k	1.1 to 1.2	12 to 13	49 to 50	High	High	57	
		13k	1.0 to 1.1	9 to 11	53 to 54	High	High	88	
		16k	1.0 to 1.1	11 to 12	50 to 52	High	High	73	
		18k	0.8 to 1.0	8 to 9	47 to 48	High	High	94	7.5
		24k	0.9 to 1.0	9 to 10	52 to 53	High	High	95	

<Heating>


Temperature condition(°C)		Model name RAS-	Standard pressure P (MPa)	Heat exchanger pipe temp.		Indoor fan mode	Outdoor fan mode	Compressor revolution (rps)	Connecting piping (m)
Indoor	Outdoor			T1 (°C)	T2 (°C)				
20/15	7/6	05k	2.2 to 2.3	34 to 35	1 to 2	High	High	52	5.0
		07k	2.3 to 2.4	37 to 38	0 to 1	High	High	68	
		10k	2.3 to 2.4	41 to 42	0 to 1	High	High	79	
		13k	2.4 to 2.5	42 to 44	0 to 1	High	High	89	
		16k	2.7 to 2.8	42 to 44	0 to 1	High	High	96	
		18k	2.9 to 3.0	44 to 46	1 to 2	High	High	93	7.5
		24k	2.8 to 3.0	43 to 44	0 to 1	High	High	95	

NOTES :


Measure surface temperature of heat exchanger pipe around center of heat exchanger path U bent.
(Thermistor thermometer)

8. CONTROL BLOCK DIAGRAM

8-1. Indoor Unit

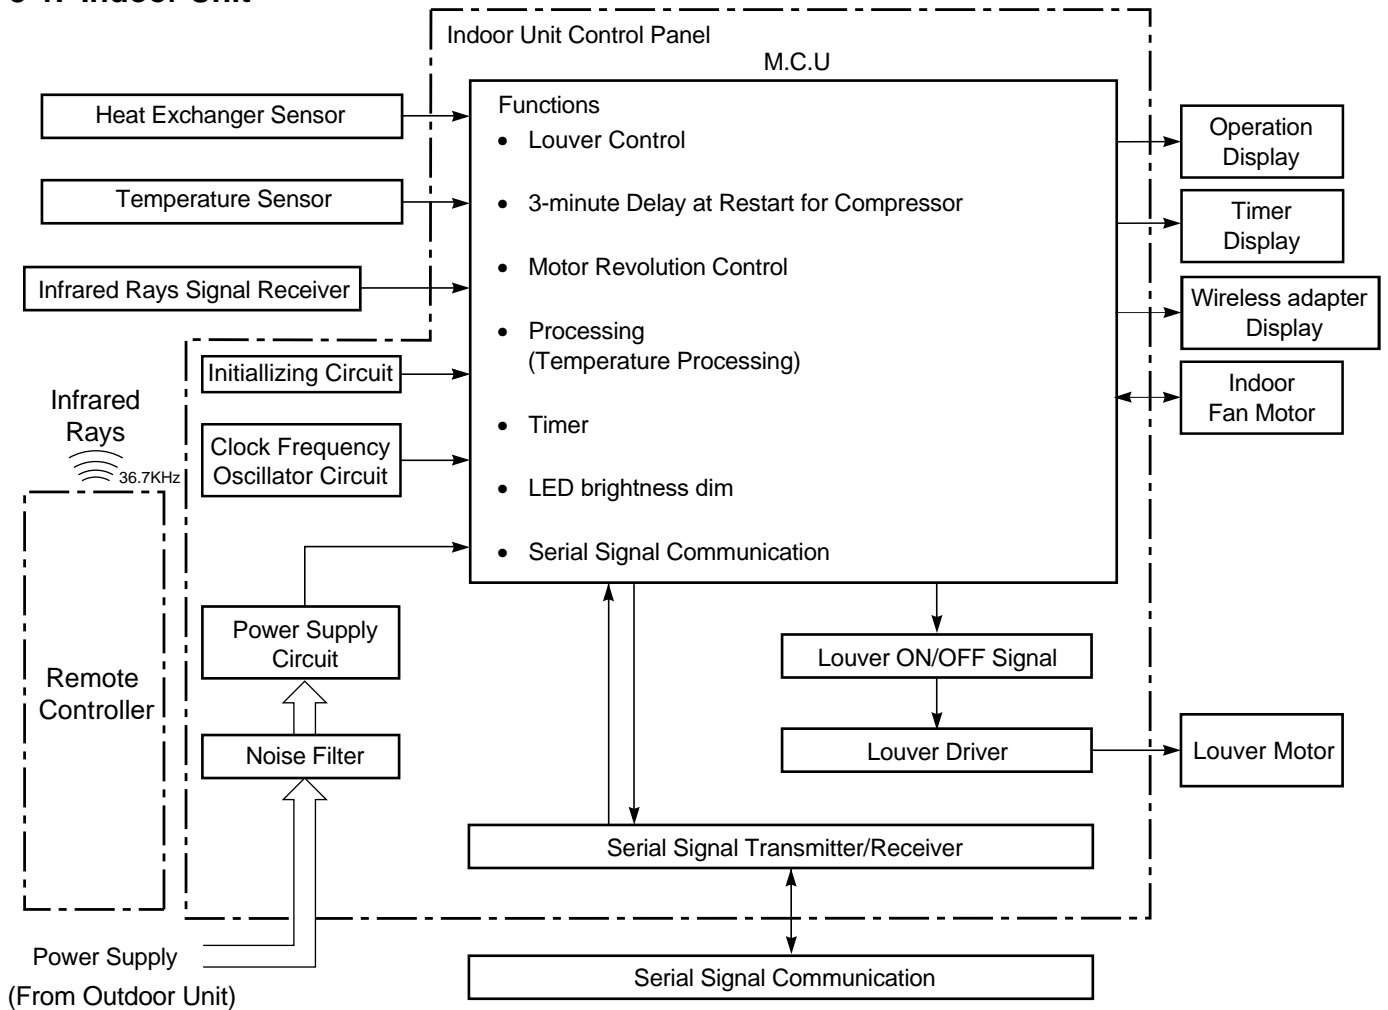


REMOTE CONTROLLER

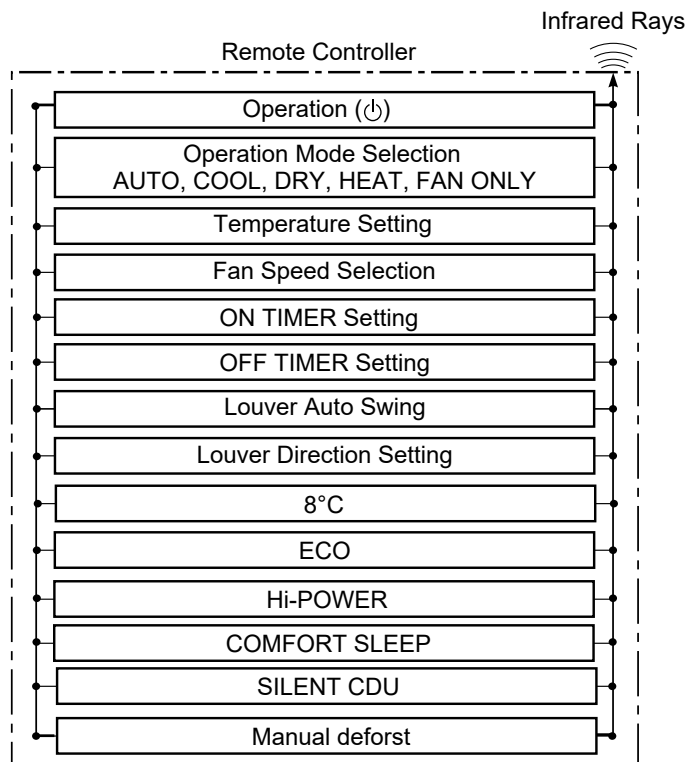


8-2. Outdoor Unit (Inverter Assembly)

(For 05k, 07k, 10k, 13k, 16, 18k)

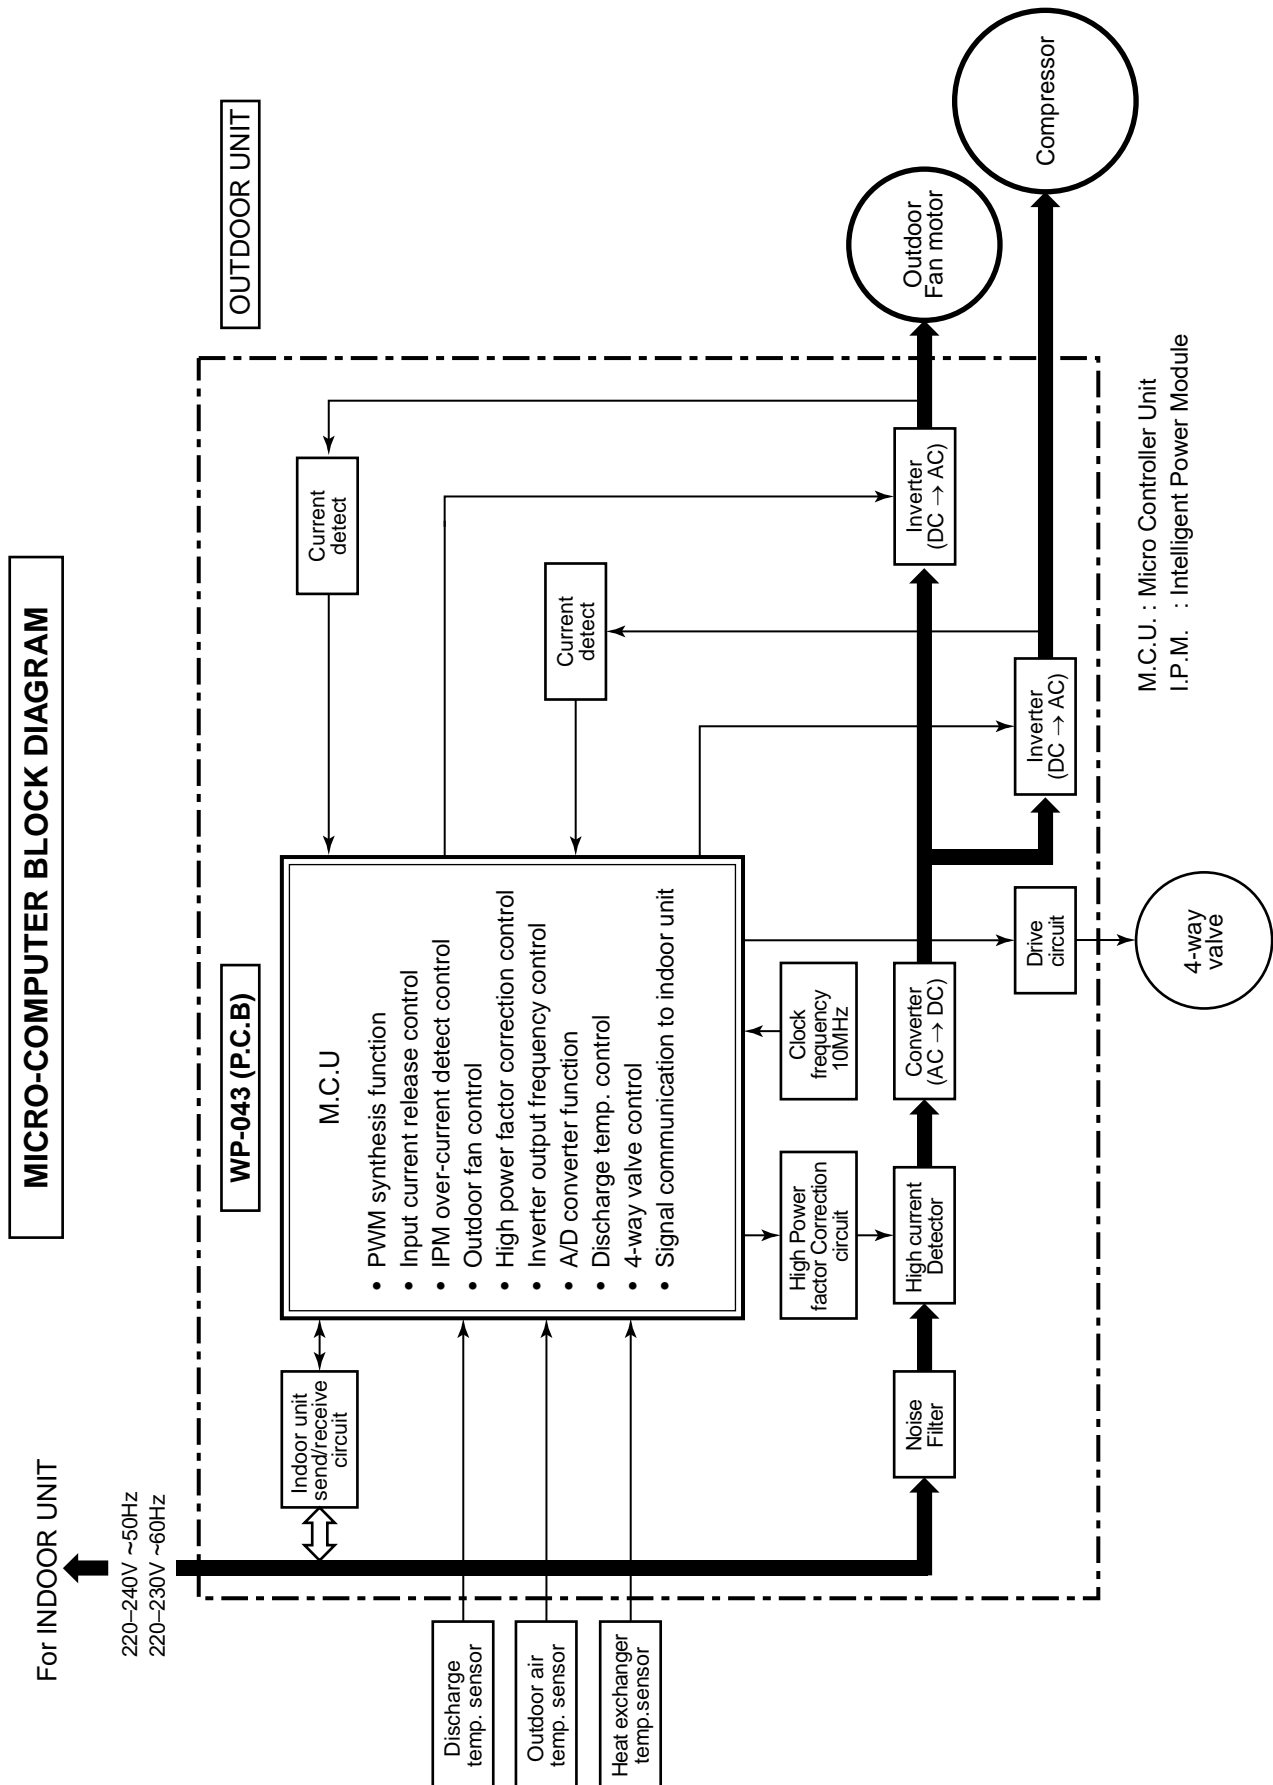

(For 24k)

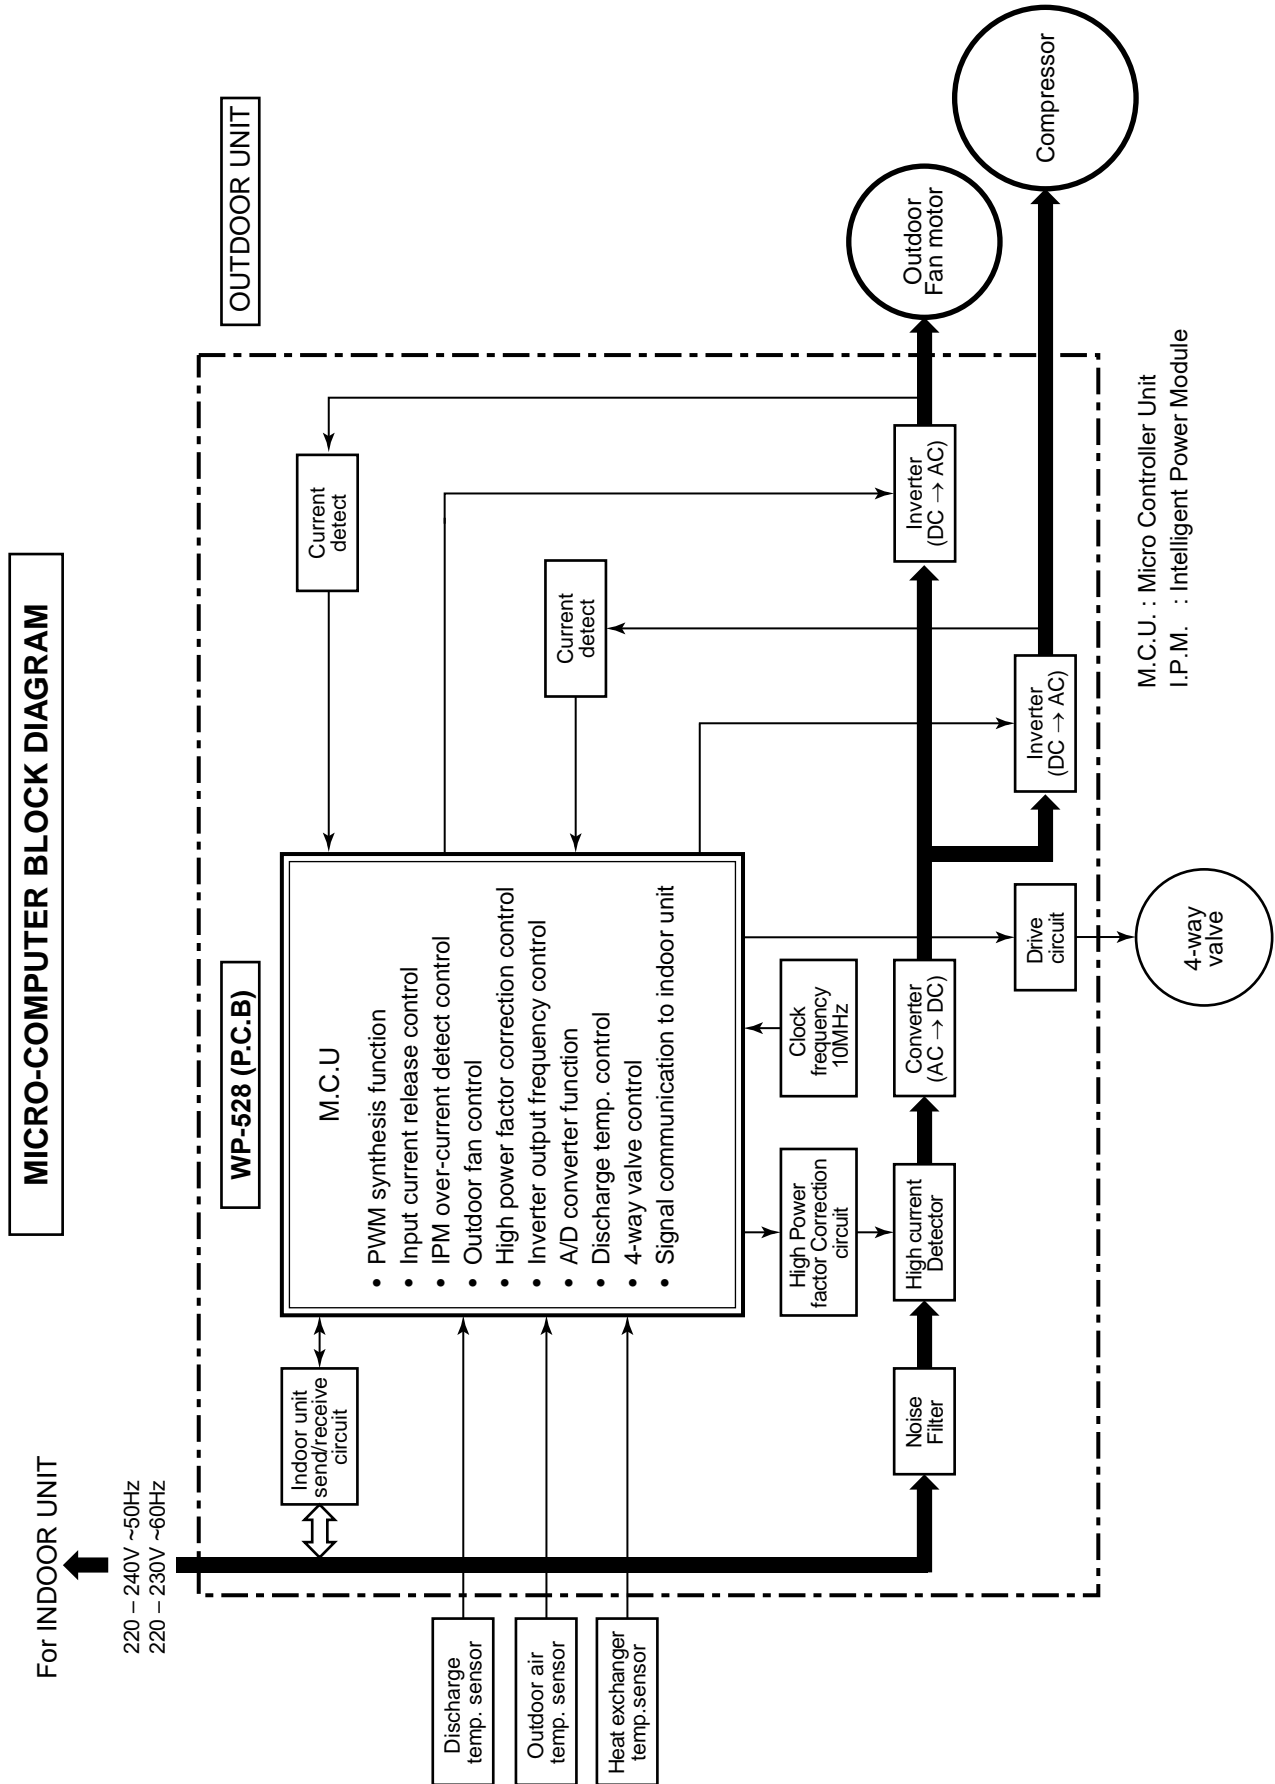

9. OPERATION DESCRIPTION

9-1. Outline of Air Conditioner Control

This air conditioner is a capacity-variable type air conditioner. Its system can control the speed of compressor motor according to load. The drive circuit for the indoor motor is mounted in the indoor unit. The drive circuits for outdoor motor and compressor are mounted in the outdoor unit.

The entire air conditioner is mainly controlled by the indoor unit controller. The indoor unit controller drives the indoor fan motor based upon command sent from the remote controller. Moreover, it also determines required speed of compressor motor and then transfers the operation command to the outdoor unit controller.

The outdoor unit controller receives operation command from the indoor unit and controls revolution speed of the compressor motor.

The outdoor unit controller controls speed of compressor motor by controlling output voltage of the inverter and switching timing of supply power (current transfer timing), so that compressor motor operates according to the operation command. And then, the outdoor unit controller transfers the operating status back to the indoor unit controller.

1. Role of indoor unit controller

The indoor unit controller judges the operation commands from the remote controller and assumes the following functions.

- Judgment of suction air temperature of the indoor heat exchanger by using the indoor temp. sensor. (TA sensor)
- Judgment of the indoor heat exchanger temperature by using heat exchanger sensor (TC sensor) (Prevent-freezing control, etc.)
- Louver motor control
- Indoor fan motor operation control
- LED (Light Emitting Diode) display control
- Transferring of operation command signal (Serial signal) to the outdoor unit
- Reception of information of operation status (Serial signal including outside temp. data) from the outdoor unit and judgment/display of error

2. Role of outdoor unit controller

Receiving the operation command signal (Serial signal) from the indoor unit controller, the outdoor unit performs compressor operation control as followed to judgment of serial signal from indoor side.

- Detection of inverter input current and current release operation
- Over-current detection and prevention operation to IGBT module (Compressor stop function)
- Compressor and outdoor fan stop function when serial signal is off (when the serial signal does not reach the board assembly of outdoor control by trouble of the signal system)
- Transferring of operation information (Serial signal) from outdoor unit controller to indoor unit controller
- Detection of outdoor temperature and operation revolution control
- Defrost control in heating operation (Temp. measurement by outdoor heat exchanger and control for 4-way valve and outdoor fan)

3. Contents of operation command signal (Serial signal) from indoor unit controller to outdoor unit controller

The following three types of signals are sent from the indoor unit controller.

- Operation mode set on the remote controller
- Compressor revolution command signal defined by indoor temperature and set temperature (Correction along with variation of room temperature and correction of indoor heat exchanger temperature are added.)
- Temperature of indoor heat exchanger
- For these signals ([Operation mode] and [Compressor revolution] indoor heat exchanger temperature), the outdoor unit controller monitors the input current to the inverter, and performs the followed operation within the range that current does not exceed the allowable value.

4. Contents of operation command signal (Serial signal) from outdoor unit controller to indoor unit controller

The following signals are sent from the outdoor unit controller.

- The current operation mode
 - The current compressor revolution
 - Outdoor temperature
 - Existence of protective circuit operation
- For transferring of these signals, the indoor unit controller monitors the contents of signals, and judges existence of trouble occurrence. Contents of judgment are described below.
- Whether distinction of the current operation status meets to the operation command signal
 - Whether protective circuit operates
- When no signal is received from the outdoor unit controller, it is assumed as a trouble.

9-2. Operation Description

1. Basic operation	46
1. Operation control	46
2. Cooling/Heating operation	47
3. AUTO operation	47
4. DRY operation	47
2. Indoor fan motor control	48
3. Outdoor fan motor control	51
4. Capacity control	52
5. Current release control	53
6. Release protective control by temperature of indoor heat exchanger	54
7. Defrost control (Only in heating operation)	55
8. Louver control	56
1) Louver position	56
2) Air direction adjustment	56
3) Swing	56
9. ECO operation	57
10. Temporary operation	58
11. Discharge temperature control	58
12. High pressure control	58
13. Self-Cleaning function	59
14. Remote-A or B selection	61
15. Hi-POWER Mode	61
16. Silent Operation	62
17. 8°C heating /Frost protective operation.....	62
18. QUIET Mode	63
19. Display lamp brightness adjustment	63
20. Comfort Sleep Mode	64
21. Operation mode select table	64
22. Short Timer	65

9-3. Auto Restart Function

9-3-1. How to Cancel the Auto Restart Function	66
9-3-2. How to Set the Auto Restart Function	67
9-3-3. Power Failure During Timer Operation	67

9-4. Remote Controller and Its Functions

9-4-1. Parts Name of Remote Controller	68
9-4-2. Operation of Remote Controller	68
9-4-3. Name and Functions of Indications on Remote Controller	73

Item	Operation flow and applicable data, etc.	Description
1. Basic operation	<p>1. Operation control</p> <p>Receiving the user's operation condition setup, the operation statuses of indoor/outdoor units are controlled.</p> <ol style="list-style-type: none"> 1) The operation conditions are selected by the remote controller as shown in the below. 2) A signal is sent by ON button of the remote controller. 3) The signal is received by a sensor of the indoor unit and processed by the indoor controllers as shown in the below. 4) The indoor controller controls the indoor fan motor and louver motor. 5) The indoor controller sends the operation command to the outdoor controller, and sends/receives the control status with a serial signal. 6) The outdoor controller controls the operation as shown in the left, and also controls the compressor outdoor fan motor and 4-way valve. 	
<p style="text-align: center;">Remote controller</p> <p style="text-align: center;">Indoor unit</p> <p style="text-align: center;">Outdoor unit</p>		

Item	Operation flow and applicable data, etc.	Description
1. Basic operation	2. Cooling/Heating operation <p>The operations are performed in the following parts by controls according to cooling/heating conditions.</p> <ol style="list-style-type: none"> 1) Receiving the operation ON signal of the remote controller, the cooling or heating operation signal starts being transferred from the indoor controller to the outdoor unit. 2) At the indoor unit side, the indoor fan is operated according to the contents of “2. Indoor fan motor control” and the louver according to the contents of “8. Louver control”, respectively. 3) The outdoor unit controls the outdoor fan motor, compressor, pulse Modulating valve and 4-way valve according to the operation signal sent from the indoor unit. 	
	3. AUTO operation <p>Selection of operation mode As shown in the following figure, the operation starts by selecting automatically the status of room temperature (T_a) when starting AUTO operation.</p> <p>*1. When reselecting the operation mode, the fan speed is controlled by the previous operation mode.</p>	<ol style="list-style-type: none"> 1) Detects the room temperature (T_a) when the operation started. 2) Selects an operation mode from T_a in the left figure. 3) Fan operation continues until an operation mode is selected. 4) When AUTO operation has started within 2 hours after heating operation stopped and if the room temperature is 20°C or more, the fan operation is performed with "Super Ultra LOW" mode for 3 minutes. Then, select an operation mode. 5) If the status of compressor-OFF continues for 15 minutes the room temperature after selecting an operation mode (COOL/HEAT), reselect an operation mode.
	4. DRY operation <p>DRY operation is performed according to the difference between room temperature and the setup temperature as shown below.</p> <p>In DRY operation, fan speed is controlled in order to prevent lowering of the room temperature and to avoid air flow from blowing directly to persons.</p>	<ol style="list-style-type: none"> 1) Detects the room temperature (T_a) when the DRY operation started. 2) Starts operation under conditions in the left figure according to the temperature difference between the room temperature and the setup temperature (T_{sc}). Setup temperature (T_{sc}) = Set temperature on remote controller (T_s) + (0.0 to 1.0) 3) When the room temperature is lower 1°C or less than the setup temperature, turn off the compressor.

Item	Operation flow and applicable data, etc.	Description																
2. Indoor fan motor control	<p><In cooling operation> (This operation controls the fan speed at indoor unit side.) The indoor fan (cross flow fan) is operated by the phase-control induction motor. The fan rotates in 5 stages in MANUAL mode, and in 5 stages in AUTO mode, respectively. (Table 1)</p> <div><div><div>COOL ON</div><div>Fan speed setup</div><div>AUTO</div></div><div><div>MANUAL</div><div><table><tr><th>Indication</th><th>Fan speed</th></tr><tr><td>L </td><td>W7</td></tr><tr><td>L+ </td><td>(L + M) / 2</td></tr><tr><td>M </td><td>WA</td></tr><tr><td>M+ </td><td>(M + H) / 2</td></tr><tr><td>H </td><td>WD</td></tr></table></div></div></div> <p>(Fig. 1)</p> <div><p>(Fig. 2)</p><table><tr><th colspan="2">Air volume AUTO</th></tr><tr><td></td><td><div><div>M+(WC)</div><div>*3</div><div>*4</div><div>*5</div><div>L(W7)</div></div><div><div>*3 : Fan speed = (M + -L) x 3/4 + L</div><div>*4 : Fan speed = (M + -L) x 2/4 + L</div><div>*5 : Fan speed = (M + -L) x 1/4 + L</div><div>(Linear approximation from M+ and L)</div></div></td></tr></table></div>	Indication	Fan speed	L	W7	L+	(L + M) / 2	M	WA	M+	(M + H) / 2	H	WD	Air volume AUTO			<div><div>M+(WC)</div><div>*3</div><div>*4</div><div>*5</div><div>L(W7)</div></div> <div><div>*3 : Fan speed = (M + -L) x 3/4 + L</div><div>*4 : Fan speed = (M + -L) x 2/4 + L</div><div>*5 : Fan speed = (M + -L) x 1/4 + L</div><div>(Linear approximation from M+ and L)</div></div>	<div><p>* Symbols</p><p>UH : Ultra High H : High M+ : Medium+ M : Medium L+ : Low+ L : Low L- : Low- UL : Ultra Low SUL : Super Ultra Low</p></div> <div><p>* The fan speed broadly varies due to position of the louver, etc. The described value indicates one under condition of inclining downward blowing.</p><p>1) When setting the fan speed to L, L+, M, M+ or H on the remote controller, the operation is performed with the constant speed shown in Fig. 1.</p><p>2) When setting the fan speed to AUTO on the remote controller, revolution of the fan motor is controlled to the fan speed level shown in Fig. 2 and Table 1 according to the setup temperature, room temperature, and heat exchanger temperature.</p><p>3) When operating fan speed L, might hear the sound of the compressor. This is normal because the pressure in the system becomes unbalanced. Once the system balances, the sound will become quieter.</p></div>
Indication	Fan speed																	
L	W7																	
L+	(L + M) / 2																	
M	WA																	
M+	(M + H) / 2																	
H	WD																	
Air volume AUTO																		
	<div><div>M+(WC)</div><div>*3</div><div>*4</div><div>*5</div><div>L(W7)</div></div> <div><div>*3 : Fan speed = (M + -L) x 3/4 + L</div><div>*4 : Fan speed = (M + -L) x 2/4 + L</div><div>*5 : Fan speed = (M + -L) x 1/4 + L</div><div>(Linear approximation from M+ and L)</div></div>																	

(Table 1) Indoor fan air flow rate

Fan speed level	Mode			05k				07k			
				Cooling		Heating		Cooling		Heating	
	Cool	Heat	Dry	Fan speed (rpm)	Air flow rate m ³ /hr	Fan speed (rpm)	Air flow rate m ³ /hr	Fan speed (rpm)	Air flow rate m ³ /hr	Fan speed (rpm)	Air flow rate m ³ /hr
WF		UH		1230	510	1190	490	1250	530	1230	510
WE	UH	H		1230	510	1190	490	1250	530	1230	510
WD		M+	UH	1190	490	1100	462	1210	510	1150	489
WC	M+	H		1110	467	950	383	1100	465	1000	408
WB		M	M+	960	388	870	340	1000	408	900	350
WA	M		M	870	340	800	304	900	350	800	304
W9		L+		800	304	750	275	800	304	750	275
W8	L+	L	L+	750	275	600	190	750	275	620	200
W7	L	L-		600	190	550	170	620	200	550	170
W6	L-		L	550	170	500	147	500	147	500	147
W5	UL	UL	L-	500	147	500	147	500	147	500	147
W4			UL	500	147	500	147	500	147	500	147
W3	SUL		SUL	500	147	500	147	500	147	500	147
W2		SUL		500	147	500	147	500	147	500	147
W1				500	147	500	147	500	147	500	147

Item	Operation flow and applicable data, etc.							Description			
2. Indoor fan motor control											
Fan speed level	Mode			10k				13k			
				Cooling		Heating		Cooling		Heating	
Cool	Heat	Dry	Fan speed (rpm)	Air flow rate m³/hr	Fan speed (rpm)	Air flow rate m³/hr	Fan speed (rpm)	Air flow rate m³/hr	Fan speed (rpm)	Air flow rate m³/hr	
WF		UH		1280	660	1230	630	1300	680	1230	630
WE	UH	H		1280	660	1230	630	1300	680	1230	630
WD	H	M+	UH	1230	630	1100	540	1280	660	1100	540
WC	M+		H	1150	560	980	478	1150	560	980	478
WB		M	M+	1050	490	850	393	1050	490	850	393
WA	M		M	950	454	730	312	950	454	730	312
W9		L+		850	393	700	292	850	393	700	292
W8	L+	L	L+	720	310	600	230	720	310	600	230
W7	L	L-		600	230	550	200	600	230	550	200
W6	L-		L	550	200	500	178	550	200	500	178
W5	UL	UL	L-	500	178	500	178	500	178	500	178
W4			UL	500	178	500	178	500	178	500	178
W3	SUL		SUL	500	178	500	178	500	178	500	178
W2		SUL		500	178	500	178	500	178	500	178
W1				500	178	500	178	500	178	500	178
Fan speed level	Mode			16k				18k			
				Cooling		Heating		Cooling		Heating	
Cool	Heat	Dry	Fan speed (rpm)	Air flow rate m³/hr	Fan speed (rpm)	Air flow rate m³/hr	Fan speed (rpm)	Air flow rate m³/hr	Fan speed (rpm)	Air flow rate m³/hr	
WF		UH		1250	820	1190	770	1300	860	1270	850
WE	UH	H		1250	820	1190	770	1300	860	1270	850
WD	H	M+	UH	1200	780	1120	755	1250	820	1150	755
WC	M+		H	1050	700	1000	680	1150	755	1110	745
WB		M	M+	950	620	880	550	1100	745	1030	660
WA	M		M	850	540	880	550	1000	630	930	600
W9		L+		850	540	750	450	950	620	850	520
W8	L+	L	L+	720	430	620	340	850	520	820	500
W7	L	L-		600	330	600	330	800	480	750	420
W6	L-		L	520	230	600	330	650	370	700	420
W5	UL	UL	L-	520	230	600	330	580	300	650	370
W4			UL	520	230	520	230	580	300	600	330
W3	SUL		SUL	520	230	520	230	540	270	520	230
W2		SUL		520	230	520	230	520	230	520	230
W1				500	210	500	210	500	210	500	210
Fan speed level	Mode			24k							
				Cooling		Heating					
Cool	Heat	Dry	Fan speed (rpm)	Air flow rate m³/hr	Fan speed (rpm)	Air flow rate m³/hr					
WF		UH		1200	1100	1030	880				
WE	UH	H		1200	1100	1030	880				
WD	H	M+	UH	1150	1080	950	840				
WC	M+		H	1000	860	910	810				
WB		M	M+	950	840	910	810				
WA	M		M	930	820	870	780				
W9		L+		930	820	850	740				
W8	L+	L	L+	850	740	790	660				
W7	L	L-		790	660	710	570				
W6	L-		L	710	570	710	570				
W5	UL	UL	L-	630	470	640	490				
W4			UL	630	470	640	490				
W3	SUL		SUL	550	370	550	370				
W2		SUL		520	340	520	340				
W1				500	310	500	310				

Item	Operation flow and applicable data, etc.	Description											
2. Indoor fan motor control	<p><In heating operation></p> <div><div><div>HEAT ON</div><div>Fan speed setup</div><div>AUTO</div><div>TC ≥ 42°C</div><div>YES</div><div>Min air flow rate control</div><div>NO</div></div><div><div>MANUAL</div><div><table><thead><tr><th>Indication</th><th>Fan speed</th></tr></thead><tbody><tr><td>L </td><td>W8</td></tr><tr><td>L+ </td><td>(L + M) / 2</td></tr><tr><td>M </td><td>WA</td></tr><tr><td>M+ </td><td>(M + H) / 2</td></tr><tr><td>H </td><td>WE</td></tr></tbody></table></div><div><div><div><div>Tc</div><div><div>52</div><div>51</div><div>42</div><div>41</div></div><div><div>Limited to Min WD tap</div><div>No limit</div></div></div><div><div>*</div><div>* Fan speed = (TC - (42 + a)) / 10 x (WD - W8) + W8 a : In up operation 1, in down operation 0</div></div></div></div></div><div>(Fig. 3)</div><div>(Fig. 4)</div></div> <div>1) When setting the fan speed to L, L+, M, M+ or H on the remote controller, the operation is performed with the constant speed shown in Fig. 3 and Table 1.</div> <div>2) When setting the fan speed to AUTO on the remote controller, revolution of the fan motor is controlled to the fan speed level shown in Fig. 5 according to the set temperature and room temperature.</div> <div>3) Min air flow rate is controlled by temperature of the indoor heat exchanger (Tc) as shown in Fig. 4.</div> <div>4) Cold draft prevention, the fan speed is controlled by temperature of the indoor heat exchanger (Tc) as shown in Fig. 6.</div> <div>5) In order to prevent Cold draft when compressor step during heating operation. Then louver will move to upper position and fan speed will reduce or off.</div> <div>6) When operating fan speed L, might hear the sound of the compressor. This is normal because the pressure in the system becomes unbalanced. Once the system balances, the sound will become quieter.</div>	Indication	Fan speed	L	W8	L+	(L + M) / 2	M	WA	M+	(M + H) / 2	H	WE
Indication	Fan speed												
L	W8												
L+	(L + M) / 2												
M	WA												
M+	(M + H) / 2												
H	WE												
<div>Cold draft preventive control</div> <div><div><div>Basic fan control</div><div><div>TA [°C]</div><div>TSC</div><div>-0.5</div><div>-1.0</div><div>-1.5</div><div>-2.0</div><div>-2.5</div><div>-5.0</div><div>-5.5</div></div><div><div>b</div><div>c</div><div>d</div><div>e</div><div>f</div><div>g</div></div><div><div>Fan speed</div><div>AUTO</div><div>L+ (W9)</div><div>*1</div><div>*2</div><div>*3</div><div>M+ (WD)</div><div>H (WE)</div></div></div><div><div>*1: Fan speed = (M + -L+) x 1 ÷ 4 + L+</div><div>*2: Fan speed = (M + -L+) x 2 ÷ 4 + L+</div><div>*3: Fan speed = (M + -L+) x 3 ÷ 4 + L+</div><div>(Calculated with linear approximation from M+ and L+)</div></div></div> <div>(Fig. 5)</div> <div><div><div>Tc</div><div>46</div><div>45</div><div>33</div><div>32</div><div>*A+4</div><div>*A-4</div><div>34</div><div>33</div><div>21</div><div>20</div><div>*A+4</div><div>*A-4</div><div>*A+4</div><div>*A-4</div></div><div><div>H (WE)</div><div>Line-approximate H and SUL with Tc.</div><div>SUL (W2)</div><div>Stop</div></div><div><div>Fan speed MANUAL in starting</div><div>Fan speed AUTO in stability</div><div>Fan speed AUTO in starting</div></div></div> <div><div>* No limitation while fan speed MANUAL mode is in stability.</div><div>* A: When Tsc ≥ 24, A is 24, and when Tsc < 24, A is Tsc</div><div>Tsc: Set value</div></div> <div>(Fig. 6)</div>													
<div>[In starting and in stability]</div> <table><tr><td></td><td>In starting</td><td>In stability</td></tr><tr><td>FAN AUTO</td><td><div>• Until 12 minutes passed after operation start</div><div>• When 12 to 25 minutes passed after operation start and room temp. is 3°C or lower than set temp.</div></td><td><div>• When 12 to 25 minutes passed after operation start and room temp. is higher than (set temp. -3°C)</div><div>• When 25 minutes or more passed after operation start</div></td></tr><tr><td>FAN Manual</td><td>Room temp. < Set temp. -4°C</td><td>Room temp. ≥ Set temp. -3.5°C</td></tr></table>				In starting	In stability	FAN AUTO	<div>• Until 12 minutes passed after operation start</div> <div>• When 12 to 25 minutes passed after operation start and room temp. is 3°C or lower than set temp.</div>	<div>• When 12 to 25 minutes passed after operation start and room temp. is higher than (set temp. -3°C)</div> <div>• When 25 minutes or more passed after operation start</div>	FAN Manual	Room temp. < Set temp. -4°C	Room temp. ≥ Set temp. -3.5°C		
	In starting	In stability											
FAN AUTO	<div>• Until 12 minutes passed after operation start</div> <div>• When 12 to 25 minutes passed after operation start and room temp. is 3°C or lower than set temp.</div>	<div>• When 12 to 25 minutes passed after operation start and room temp. is higher than (set temp. -3°C)</div> <div>• When 25 minutes or more passed after operation start</div>											
FAN Manual	Room temp. < Set temp. -4°C	Room temp. ≥ Set temp. -3.5°C											



Item	Operation flow and applicable data, etc.	Description																																																																																																																																																																										
3. Outdoor fan motor control	<p>The blowing air volume at the outdoor unit side is controlled. Receiving the operation command from the controller of indoor unit, the controller of outdoor unit controls fan speed.</p> <p>* For the fan motor, a DC motor with non-stage variable speed system is used. However, it is limited to 8 stages for reasons of controlling.</p> <div><div><div>Air conditioner ON (Remote controller)</div><div>Indoor unit controller</div><div>1) Outdoor unit operation command (Outdoor fan control)</div><div>2) Fan speed ≥ 400 when the motor stopped.</div><div>YES</div><div>OFF status of fan motor continues.</div><div>NO</div><div>Fan motor ON</div><div>3) Fan lock</div><div>YES</div><div>Air conditioner OFF</div><div>Alarm display</div><div>NO</div><div>4) Motor operates as shown in the table below.</div></div></div> <div><div><div>In cooling operation</div><table><tr><td rowspan="6">Compressor speed</td><td>RAS-05B2AVG-E2</td><td>Hz < 21.6</td><td>21.6 ≤ Hz < 33.6</td><td>33.6 ≤ Hz</td></tr><tr><td>RAS-07B2AVG-E2</td><td>Hz < 24.0</td><td>24.0 ≤ Hz < 46.0</td><td>46.0 ≤ Hz</td></tr><tr><td>RAS-10B2AVG-E2</td><td>Hz < 24.0</td><td>24.0 ≤ Hz < 55.2</td><td>55.2 ≤ Hz</td></tr><tr><td>RAS-13B2AVG-E2</td><td>Hz < 22.8</td><td>22.8 ≤ Hz < 79.8</td><td>79.8 ≤ Hz</td></tr><tr><td>RAS-16B2AVG-E2</td><td>Hz < 25.2</td><td>25.2 ≤ Hz < 66.0</td><td>66.0 ≤ Hz</td></tr><tr><td>RAS-18B2AVG-E2</td><td>Hz < 27.6</td><td>27.6 ≤ Hz < 66.0</td><td>66.0 ≤ Hz</td></tr><tr><td>RAS-24B2AVG-E2</td><td>Hz < 28.8</td><td>28.8 ≤ Hz < 55.2</td><td>55.2 ≤ Hz</td></tr><tr><td>Fan speed range</td><td></td><td>MIN</td><td>MAX</td><td>MIN</td><td>MAX</td><td>MIN</td><td>MAX</td></tr><tr><td rowspan="5">To</td><td>To ≥ 38°C</td><td>f6</td><td>fB</td><td>f8</td><td>fE</td><td>fA</td><td>fE</td></tr><tr><td>To ≥ 28°C</td><td>f5</td><td>fA</td><td>f7</td><td>fB</td><td>f9</td><td>fE</td></tr><tr><td>To ≥ 15°C</td><td>f3</td><td>f7</td><td>f5</td><td>f9</td><td>f7</td><td>fB</td></tr><tr><td>To ≥ 5.5°C</td><td>f2</td><td>f5</td><td>f4</td><td>f7</td><td>f6</td><td>f9</td></tr><tr><td>To ≥ 0°C</td><td>f1</td><td>f3</td><td>f3</td><td>f5</td><td>f4</td><td>f7</td></tr><tr><td>To ≥ 0°C</td><td>f1</td><td>f2</td><td>f2</td><td>f4</td><td>f3</td><td>f5</td><td></td></tr><tr><td>When To is abnormal</td><td></td><td>OFF</td><td>fB</td><td>OFF</td><td>fE</td><td>f1</td><td>fE</td></tr></table></div><div><div>In heating operation</div><table><tr><td rowspan="6">Compressor speed</td><td>RAS-05B2AVG-E2</td><td>Hz < 24.0</td><td>24.0 ≤ Hz < 51.0</td><td>51.0 ≤ Hz</td></tr><tr><td>RAS-07B2AVG-E2</td><td>Hz < 28.8</td><td>28.8 ≤ Hz < 67.2</td><td>67.2 ≤ Hz</td></tr><tr><td>RAS-10B2AVG-E2</td><td>Hz < 25.2</td><td>25.2 ≤ Hz < 75.6</td><td>75.6 ≤ Hz</td></tr><tr><td>RAS-13B2AVG-E2</td><td>Hz < 25.2</td><td>25.2 ≤ Hz < 84.0</td><td>84.0 ≤ Hz</td></tr><tr><td>RAS-16B2AVG-E2</td><td>Hz < 31.8</td><td>31.8 ≤ Hz < 60.6</td><td>60.6 ≤ Hz</td></tr><tr><td>RAS-18B2AVG-E2</td><td>Hz < 31.8</td><td>31.8 ≤ Hz < 60.6</td><td>60.6 ≤ Hz</td></tr><tr><td>RAS-24B2AVG-E2</td><td>Hz < 32.4</td><td>32.4 ≤ Hz < 60.6</td><td>60.6 ≤ Hz</td></tr><tr><td>Fan speed range</td><td></td><td>MIN</td><td>MAX</td><td>MIN</td><td>MAX</td><td>MIN</td><td>MAX</td></tr><tr><td rowspan="5">To</td><td>To ≥ 10°C</td><td></td><td>f7</td><td></td><td>f8</td><td></td><td>f9</td></tr><tr><td>To ≥ 5°C</td><td></td><td>f9</td><td></td><td>fB</td><td></td><td>fE</td></tr><tr><td>To ≥ -3°C</td><td></td><td>fE</td><td></td><td>fE</td><td></td><td>fE</td></tr><tr><td>To ≥ -10°C</td><td></td><td>fE</td><td></td><td>fE</td><td></td><td>fE</td></tr><tr><td>To < -10°C</td><td></td><td>fE</td><td></td><td>fE</td><td></td><td>fE</td></tr><tr><td>When To is abnormal</td><td></td><td></td><td>fE</td><td></td><td>fF</td><td></td><td>fF</td></tr></table></div></div>	Compressor speed	RAS-05B2AVG-E2	Hz < 21.6	21.6 ≤ Hz < 33.6	33.6 ≤ Hz	RAS-07B2AVG-E2	Hz < 24.0	24.0 ≤ Hz < 46.0	46.0 ≤ Hz	RAS-10B2AVG-E2	Hz < 24.0	24.0 ≤ Hz < 55.2	55.2 ≤ Hz	RAS-13B2AVG-E2	Hz < 22.8	22.8 ≤ Hz < 79.8	79.8 ≤ Hz	RAS-16B2AVG-E2	Hz < 25.2	25.2 ≤ Hz < 66.0	66.0 ≤ Hz	RAS-18B2AVG-E2	Hz < 27.6	27.6 ≤ Hz < 66.0	66.0 ≤ Hz	RAS-24B2AVG-E2	Hz < 28.8	28.8 ≤ Hz < 55.2	55.2 ≤ Hz	Fan speed range		MIN	MAX	MIN	MAX	MIN	MAX	To	To ≥ 38°C	f6	fB	f8	fE	fA	fE	To ≥ 28°C	f5	fA	f7	fB	f9	fE	To ≥ 15°C	f3	f7	f5	f9	f7	fB	To ≥ 5.5°C	f2	f5	f4	f7	f6	f9	To ≥ 0°C	f1	f3	f3	f5	f4	f7	To ≥ 0°C	f1	f2	f2	f4	f3	f5		When To is abnormal		OFF	fB	OFF	fE	f1	fE	Compressor speed	RAS-05B2AVG-E2	Hz < 24.0	24.0 ≤ Hz < 51.0	51.0 ≤ Hz	RAS-07B2AVG-E2	Hz < 28.8	28.8 ≤ Hz < 67.2	67.2 ≤ Hz	RAS-10B2AVG-E2	Hz < 25.2	25.2 ≤ Hz < 75.6	75.6 ≤ Hz	RAS-13B2AVG-E2	Hz < 25.2	25.2 ≤ Hz < 84.0	84.0 ≤ Hz	RAS-16B2AVG-E2	Hz < 31.8	31.8 ≤ Hz < 60.6	60.6 ≤ Hz	RAS-18B2AVG-E2	Hz < 31.8	31.8 ≤ Hz < 60.6	60.6 ≤ Hz	RAS-24B2AVG-E2	Hz < 32.4	32.4 ≤ Hz < 60.6	60.6 ≤ Hz	Fan speed range		MIN	MAX	MIN	MAX	MIN	MAX	To	To ≥ 10°C		f7		f8		f9	To ≥ 5°C		f9		fB		fE	To ≥ -3°C		fE		fE		fE	To ≥ -10°C		fE		fE		fE	To < -10°C		fE		fE		fE	When To is abnormal			fE		fF		fF	<p>1) The operation command sent from the remote controller is processed by the indoor unit controller and transferred to the controller of the outdoor unit.</p> <p>2) When strong wind blows at outdoor side, the operation of air conditioner continues with the fan motor stopped.</p> <p>3) Whether the fan is locked or not is detected, and the operation of air conditioner stops and an alarm is displayed if the fan is locked.</p> <p>4) According to each operation mode, by the conditions of outdoor temperature (To) and compressor revolution, the speed of the outdoor fan shown in the table is selected.</p>
Compressor speed	RAS-05B2AVG-E2		Hz < 21.6	21.6 ≤ Hz < 33.6	33.6 ≤ Hz																																																																																																																																																																							
	RAS-07B2AVG-E2		Hz < 24.0	24.0 ≤ Hz < 46.0	46.0 ≤ Hz																																																																																																																																																																							
	RAS-10B2AVG-E2		Hz < 24.0	24.0 ≤ Hz < 55.2	55.2 ≤ Hz																																																																																																																																																																							
	RAS-13B2AVG-E2		Hz < 22.8	22.8 ≤ Hz < 79.8	79.8 ≤ Hz																																																																																																																																																																							
	RAS-16B2AVG-E2		Hz < 25.2	25.2 ≤ Hz < 66.0	66.0 ≤ Hz																																																																																																																																																																							
	RAS-18B2AVG-E2	Hz < 27.6	27.6 ≤ Hz < 66.0	66.0 ≤ Hz																																																																																																																																																																								
RAS-24B2AVG-E2	Hz < 28.8	28.8 ≤ Hz < 55.2	55.2 ≤ Hz																																																																																																																																																																									
Fan speed range		MIN	MAX	MIN	MAX	MIN	MAX																																																																																																																																																																					
To	To ≥ 38°C	f6	fB	f8	fE	fA	fE																																																																																																																																																																					
	To ≥ 28°C	f5	fA	f7	fB	f9	fE																																																																																																																																																																					
	To ≥ 15°C	f3	f7	f5	f9	f7	fB																																																																																																																																																																					
	To ≥ 5.5°C	f2	f5	f4	f7	f6	f9																																																																																																																																																																					
	To ≥ 0°C	f1	f3	f3	f5	f4	f7																																																																																																																																																																					
To ≥ 0°C	f1	f2	f2	f4	f3	f5																																																																																																																																																																						
When To is abnormal		OFF	fB	OFF	fE	f1	fE																																																																																																																																																																					
Compressor speed	RAS-05B2AVG-E2	Hz < 24.0	24.0 ≤ Hz < 51.0	51.0 ≤ Hz																																																																																																																																																																								
	RAS-07B2AVG-E2	Hz < 28.8	28.8 ≤ Hz < 67.2	67.2 ≤ Hz																																																																																																																																																																								
	RAS-10B2AVG-E2	Hz < 25.2	25.2 ≤ Hz < 75.6	75.6 ≤ Hz																																																																																																																																																																								
	RAS-13B2AVG-E2	Hz < 25.2	25.2 ≤ Hz < 84.0	84.0 ≤ Hz																																																																																																																																																																								
	RAS-16B2AVG-E2	Hz < 31.8	31.8 ≤ Hz < 60.6	60.6 ≤ Hz																																																																																																																																																																								
	RAS-18B2AVG-E2	Hz < 31.8	31.8 ≤ Hz < 60.6	60.6 ≤ Hz																																																																																																																																																																								
RAS-24B2AVG-E2	Hz < 32.4	32.4 ≤ Hz < 60.6	60.6 ≤ Hz																																																																																																																																																																									
Fan speed range		MIN	MAX	MIN	MAX	MIN	MAX																																																																																																																																																																					
To	To ≥ 10°C		f7		f8		f9																																																																																																																																																																					
	To ≥ 5°C		f9		fB		fE																																																																																																																																																																					
	To ≥ -3°C		fE		fE		fE																																																																																																																																																																					
	To ≥ -10°C		fE		fE		fE																																																																																																																																																																					
	To < -10°C		fE		fE		fE																																																																																																																																																																					
When To is abnormal			fE		fF		fF																																																																																																																																																																					

Outdoor fan speed (rpm)




Model name	Fan speed range															
	f0	f1	f2	f3	f4	f5	f6	f7	f8	f9	fA	fB	fC	fD	fE	fF
RAS-05B2AVG-E2	0	380	380	390	460	520	520	620	720	750	790	790	800	890	890	890
RAS-07B2AVG-E2	0	380	380	390	460	520	520	620	720	750	790	790	800	900	900	900
RAS-10B2AVG-E2	0	380	380	390	460	520	520	620	720	750	790	790	800	900	900	900
RAS-13B2AVG-E2	0	380	380	390	460	520	520	620	720	750	790	790	800	900	950	950
RAS-16B2AVG-E2	0	300	300	300	360	450	500	550	600	650	700	800	900	900	950	950
RAS-18B2AVG-E2	0	300	300	300	360	450	500	550	600	650	700	800	900	900	950	950
RAS-24B2AVG-E2	0	300	300	300	360	450	500	550	600	650	700	800	900	950	980	980



Item	Operation flow and applicable data, etc.	Description
4. Capacity control	<p>The cooling or heating capacity depending on the load is adjusted.</p> <p>According to difference between the setup value of temperature and the room temperature, the capacity is adjusted by the compressor revolution.</p> <pre> graph TD subgraph Remote_controller [Remote controller] Ts[Set temp. (Ts)] end subgraph Indoor_unit [Indoor unit] Ta[Room temp. (Ta)] end Ts --- Ta Ts -.-> Diff[Ts - Ta] Ta -.-> Diff Diff --> Hz[Correction of Hz signal] Hz --> EMF[Detection of electromotive force of compressor motor winding] EMF --> Speed[Detection of motor speed and rotor position] Speed --> Hz2[Correction value of Hz signal ≤ Operating Hz] Hz2 --> Inverter[Inverter output change Commutation timing change] Inverter --> Speed2[Change of compressor speed] </pre>	<ol style="list-style-type: none"> 1) The difference between set temperature on remote controller (Ts) and room temperature (Ta) is calculated. 2) According to the temperature difference, the correction value of Hz signal which determines the compressor speed is set up. 3) The rotating position and speed of the motor are detected by the electromotive force occurred on the motor winding with operation of the compressor. 4) According to the difference resulted from comparison of the correction value of Hz signal with the present operation Hz, the inverter output and the commutation timing are varied. 5) Change the compressor motor speed by outputting power to the compressor. <p>* The contents of control operation are same in cooling operation and heating operation</p>

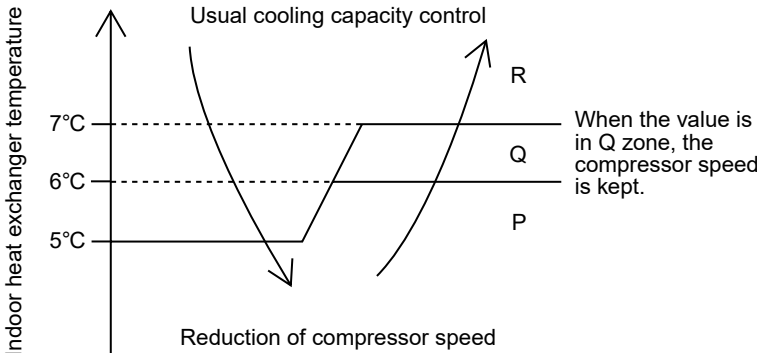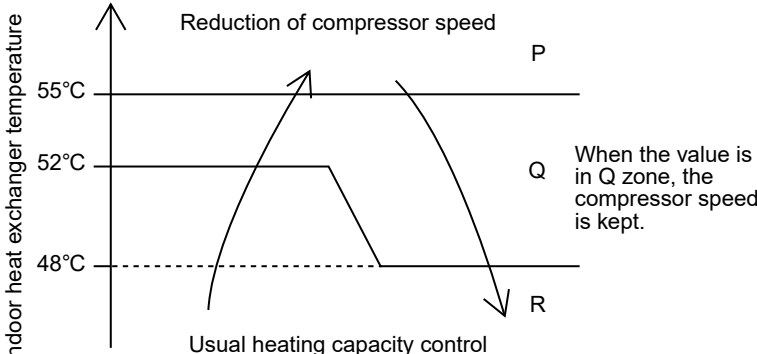Item	Operation flow and applicable data, etc.	Description																																																																											
5. Current release control	<p>This function prevents troubles on the electronic parts of the compressor driving inverter.</p> <p>This function also controls drive circuit of the compressor speed so that electric power of the compressor drive circuit does not exceed the specified value.</p> <div><div>Outdoor unit inverter main circuit control current</div><div>Outdoor temp. To</div><div>Setup of current release point</div><div>Operating current ≤ Setup value</div><div>High</div><div>Reduce compressor speed</div><div>Low</div><div>Capacity control continues.</div><div>Current decrease</div></div>	<p>1) The input current of the outdoor unit is detected in the inverter section of the outdoor unit.</p> <p>2) According to the detected outdoor temperature, the specified value of the current is selected.</p> <p>3) Whether the current value exceeds the specified value or not is judged.</p> <p>4) If the current value exceeds the specified value, this function reduces the compressor speed and controls speed up to the closest one commanded from the indoor unit within the range which does not exceed the specified value.</p>																																																																											
	<table><tr><th rowspan="2">Mode</th><th rowspan="2">Outdoor temperature: To (°C)</th><th colspan="6">Current Release Value (A)</th></tr><tr><th>05k</th><th>07k</th><th>10k</th><th>13k</th><th>16k</th><th>24k</th></tr><tr><td rowspan="3">Cooling</td><td>To ≥ 45</td><td>5.4</td><td>5.4</td><td>5.2</td><td>5.4</td><td>7.0</td><td>9.5</td></tr><tr><td>45 > To ≥ 40</td><td>5.8</td><td>5.8</td><td>7.5</td><td>7.5</td><td>8.3</td><td>12.0</td></tr><tr><td>To < 40</td><td>3.6</td><td>4.8</td><td>5.6</td><td>6.8</td><td>8.5</td><td>10.0</td></tr><tr><td rowspan="3">Heating</td><td>To ≥ 16</td><td>6.2</td><td>6.2</td><td>7.0</td><td>7.0</td><td>8.8</td><td>12.0</td></tr><tr><td>16 > To ≥ 11</td><td>5.2</td><td>5.6</td><td>7.0</td><td>7.0</td><td>9.0</td><td>12.0</td></tr><tr><td>To < 11</td><td>4.3</td><td>5.1</td><td>7.0</td><td>7.0</td><td>9.3</td><td>12.0</td></tr></table> <table><tr><th rowspan="2">Mode</th><th rowspan="2">Outdoor temperature: To (°C)</th><th>Current Release Value (A)</th></tr><tr><th>18k</th></tr><tr><td rowspan="3">Cooling</td><td>To ≥ 45</td><td>6.5</td></tr><tr><td>45 > To ≥ 38</td><td>8.3</td></tr><tr><td>To < 38</td><td>9.3</td></tr><tr><td rowspan="3">Heating</td><td>To ≥ 16</td><td>8.8</td></tr><tr><td>16 > To ≥ 11</td><td>9.0</td></tr><tr><td>To < 11</td><td>9.3</td></tr></table>	Mode	Outdoor temperature: To (°C)	Current Release Value (A)						05k	07k	10k	13k	16k	24k	Cooling	To ≥ 45	5.4	5.4	5.2	5.4	7.0	9.5	45 > To ≥ 40	5.8	5.8	7.5	7.5	8.3	12.0	To < 40	3.6	4.8	5.6	6.8	8.5	10.0	Heating	To ≥ 16	6.2	6.2	7.0	7.0	8.8	12.0	16 > To ≥ 11	5.2	5.6	7.0	7.0	9.0	12.0	To < 11	4.3	5.1	7.0	7.0	9.3	12.0	Mode	Outdoor temperature: To (°C)	Current Release Value (A)	18k	Cooling	To ≥ 45	6.5	45 > To ≥ 38	8.3	To < 38	9.3	Heating	To ≥ 16	8.8	16 > To ≥ 11	9.0	To < 11	9.3
Mode	Outdoor temperature: To (°C)			Current Release Value (A)																																																																									
		05k	07k	10k	13k	16k	24k																																																																						
Cooling	To ≥ 45	5.4	5.4	5.2	5.4	7.0	9.5																																																																						
	45 > To ≥ 40	5.8	5.8	7.5	7.5	8.3	12.0																																																																						
	To < 40	3.6	4.8	5.6	6.8	8.5	10.0																																																																						
Heating	To ≥ 16	6.2	6.2	7.0	7.0	8.8	12.0																																																																						
	16 > To ≥ 11	5.2	5.6	7.0	7.0	9.0	12.0																																																																						
	To < 11	4.3	5.1	7.0	7.0	9.3	12.0																																																																						
Mode	Outdoor temperature: To (°C)	Current Release Value (A)																																																																											
		18k																																																																											
Cooling	To ≥ 45	6.5																																																																											
	45 > To ≥ 38	8.3																																																																											
	To < 38	9.3																																																																											
Heating	To ≥ 16	8.8																																																																											
	16 > To ≥ 11	9.0																																																																											
	To < 11	9.3																																																																											


Item	Operation flow and applicable data, etc.	Description
6. Release protective control by temperature of indoor heat exchanger	<p><In cooling/dry operation> (Prevent-freezing control for indoor heat exchanger) In cooling/dry operation, the sensor of indoor heat exchanger detects evaporation temperature and controls the compressor speed so that temperature of the heat exchanger does not exceed the specified value.</p>  <p>Indoor heat exchanger temperature</p> <p>7°C</p> <p>6°C</p> <p>5°C</p> <p>Usual cooling capacity control</p> <p>Reduction of compressor speed</p> <p>R</p> <p>Q</p> <p>P</p> <p>When the value is in Q zone, the compressor speed is kept.</p>	<ol style="list-style-type: none"> 1) When temperature of the indoor heat exchanger drops below 5°C, the compressor speed is reduced. (P zone) 2) When temperature of the indoor heat exchanger rises in the range from 6°C to under 7°C, the compressor speed is kept. (Q zone) 3) When temperature of the indoor heat exchanger rises to 7°C or higher, the capacity control operation returns to the usual control in cooling operation. (R zone)
	<p><In heating operation> (Prevent-overpressure control for refrigerating cycle) In heating operation, the sensor of indoor heat exchanger detects condensation temperature and controls the compressor speed so that temperature of the heat exchanger does not exceed the specified value.</p>  <p>Indoor heat exchanger temperature</p> <p>55°C</p> <p>52°C</p> <p>48°C</p> <p>Reduction of compressor speed</p> <p>Usual heating capacity control</p> <p>P</p> <p>Q</p> <p>R</p> <p>When the value is in Q zone, the compressor speed is kept.</p>	<ol style="list-style-type: none"> 1) When temperature of the indoor heat exchanger rises in the range from 52°C to 55°C, the compressor speed is kept. (Q zone) When temperature of the indoor heat exchanger drops in the range from 48°C to under 55°C, the compressor speed is kept. (Q zone) 2) When temperature of the indoor heat exchanger rises to 55°C or higher, the compressor speed is reduced. (P zone) 3) When temperature of the indoor heat exchanger does not rise to 52°C, or when it drops below to 48°C, the capacity control operation returns to the usual control in heating operation. (R zone)

Item	Operation flow and applicable data, etc.	Description					
7. Defrost control (Only in heating operation)	<p>(This function removes frost adhered to the outdoor heat exchanger.)</p> <p>The temperature sensor of the outdoor heat exchanger (Te sensor) judges the frosting status of the outdoor heat exchanger and the defrost operation is performed with 4-way valve reverse defrost system.</p>	The necessity of defrost operation is detected by the outdoor heat exchanger temperature. The conditions to detect the necessity of defrost operation differ in A, B, or C zone each. (Table 1)					
Start of heating operation							
* The minimum TE value and To value between 10 and 15 minutes after heating operation has started are stored in memory as TE0 and TO0, respectively.							
Table 1							
Defrost zone	In abnormal To	In normal To					
A zone	TE0-TE≥3°C & SH-SH0≤2	(TE0-TE)-(TO0-TO)≥3°C & SH-SH0≤2					
B zone	TE0-TE≥2°C & SH-SH0≤2	(TE0-TE)-(TO0-TO)≥2°C & SH-SH0≤2					
C zone	TE≤ -25°C & SH-SH0≤2						
D zone	More than 90 minutes accumulate heating operation time condition TE≤ -2°C						
Table 2							
Heating operation (time)	Model						
	05k	07k	10k	13k	16k	18k	24k
a	37	37	43	43	55	35	29
b	31	31	39	39	53	33	27
c	31	31	31	31	29	29	25
d	90					40	40
<div><div><p><Defrost operation></p><ul style="list-style-type: none">Defrost operation in A to C zones<ol style="list-style-type: none">1) Stop operation of the compressor for 40 seconds.2) Invert (OFF) 4-way valve 40 seconds after stop of the compressor.3) The outdoor fan stops at the same time when the compressor stops.4) When temperature of the indoor heat exchanger becomes 38°C or lower, stop the indoor fan.<p><Finish of defrost operation></p><ul style="list-style-type: none">Returning conditions from defrost operation to heating operation<ol style="list-style-type: none">1) Temperature of outdoor heat exchanger rises to +8°C or higher for 3 seconds.2) Temperature of outdoor heat exchanger is kept at +7°C or higher for 60 seconds.3) Defrost operation continues for 10 minutes.</div><div><p><Returning from defrost operation></p><ol style="list-style-type: none">1) Stop operation of the compressor for approx. 40 seconds.2) Invert (ON) 4-way valve approx. 30 seconds after stop of the compressor.3) The outdoor fan starts rotating at the same time when the compressor starts.</div></div>							

Item	Operation flow and applicable data, etc.	Description
<div>8. Louver control</div> <div>1) Louver position</div>	<p>This function controls the air direction of the indoor unit.</p> <ul style="list-style-type: none">The position is automatically controlled according to the operation mode (COOL/HEAT).The set louver position is stored in memory by the microcomputer, and the louver returns to the stored position when the next operation is performed. (Cooling/Heating memory position) <p>The angle of the louver is indicated as the louver closes fully is 0°.</p> <p>1) Louver position in cooling operation</p> <div><div>Cooling operation/ AUTO (COOL)</div><div></div><div>Initial setting of "Cooling storage position" Louver : Directs downward (40.9°)</div></div> <p>2) Louver position in heating operation</p> <div><div>Heating operation/ AUTO (HEAT)</div><div></div><div>Initial setting of "Heating storage position" Louver : Directs downward (80.5°)</div></div>	
<div>2) Air direction adjustment</div>	<div>Air direction</div> <div><div>Horizontal blowing</div><div>Inclined blowing</div><div>Blowing downward</div><div>Inclined blowing</div><div>Horizontal blowing</div></div> <div></div>	<ul style="list-style-type: none">The louver position can be arbitrarily set up by pressing [FIX] button.
<div>3) Swing</div>	<ul style="list-style-type: none">Swing operation is performed in range 35° with the Fixed position as the center.If the swing range exceeded either upper or lower limit position, swing operation is performed in range 35° from the limit. <div><div><div>Upper Limit Position.</div><div>Swing range 35°</div><div>Fixed Position before start swing.</div><div>Lower Limit Position.</div><div>17.5°</div><div>17.5°</div></div><div><div>Upper Limit Position.</div><div>Fixed Position before start swing</div><div>Swing range 35°</div><div>Lower Limit Position</div><div>5°</div><div>30°</div></div></div>	<ul style="list-style-type: none">Swing When pressing [SWING] button during operation, the louver starts swinging.

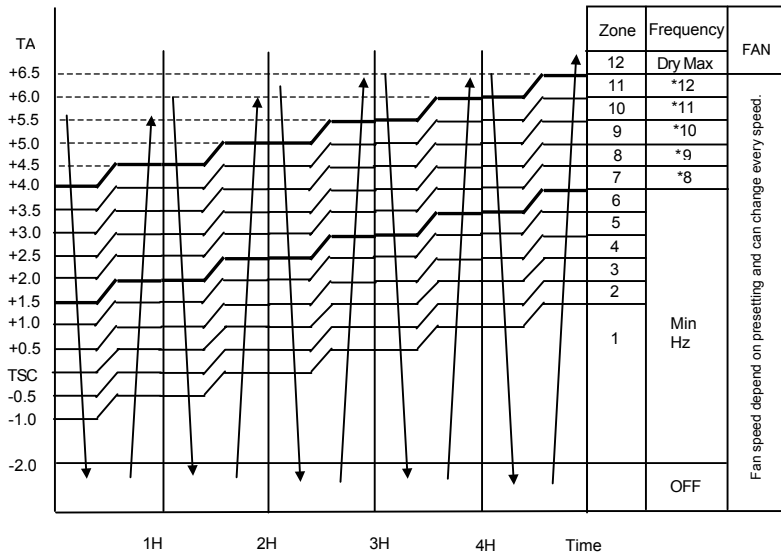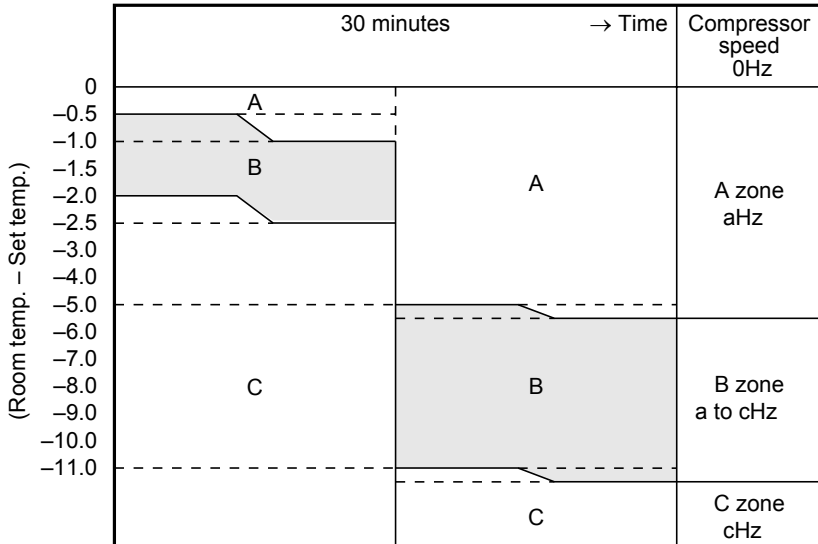Item	Operation flow and applicable data, etc.	Description																								
9. ECO operation	<p>When pressing [ECO] button on the remote controller, a Economic operation is performed.</p> <p><Cooling operation></p> <p>This function operates the air conditioner with the difference between the set and the room temperature as shown in the following figure.</p> <div><p style="text-align: center;">1H 2H 3H 4H Time</p><div><p>* 12 (DRY max - COOL min) / 6 x 5 + COOL min</p><p>* 11 (DRY max - COOL min) / 6 x 4 + COOL min</p><p>* 10 (DRY max - COOL min) / 6 x 3 + COOL min</p><p>* 9 (DRY max - COOL min) / 6 x 2 + COOL min</p><p>* 8 (DRY max - COOL min) / 6 x 1 + COOL min</p></div><table><tr><th>Hz</th><th>05k</th><th>07k</th><th>10k</th><th>13k</th><th>16k</th><th>18k</th><th>24k</th></tr><tr><td>Cool min</td><td>12</td><td>17</td><td>16</td><td>20</td><td>16</td><td>17</td><td>12</td></tr><tr><td>DRY max</td><td>35</td><td>35</td><td>35</td><td>35</td><td>35</td><td>35</td><td>35</td></tr></table></div>	Hz	05k	07k	10k	13k	16k	18k	24k	Cool min	12	17	16	20	16	17	12	DRY max	35	35	35	35	35	35	35	<p><Cooling operation></p> <p>1) The control target temperature increase 0.5°C per hour up to 2°C starting from the set temperature when ECONO has been received.</p> <p>2) The indoor fan speed is depend on presetting and can change every speed after setting ECO operation.</p> <p>3) The compressor speed is controlled as shown in the left figure.</p>
Hz	05k	07k	10k	13k	16k	18k	24k																			
Cool min	12	17	16	20	16	17	12																			
DRY max	35	35	35	35	35	35	35																			
	<p><Heating operation></p> <div><p style="text-align: center;">30 minutes → Time</p><table><tr><th>Hz</th><th>05k</th><th>07k</th><th>10k</th><th>13k</th><th>16k</th><th>18k</th><th>24k</th></tr><tr><td>Cool min</td><td>16</td><td>20</td><td>20</td><td>21</td><td>17</td><td>21</td><td>16</td></tr><tr><td>DRY max</td><td>29</td><td>29</td><td>29</td><td>26</td><td>33</td><td>39</td><td>38</td></tr></table></div>	Hz	05k	07k	10k	13k	16k	18k	24k	Cool min	16	20	20	21	17	21	16	DRY max	29	29	29	26	33	39	38	<p><Heating operation></p> <p>1) Setting the compressor speed to Max. aHz, the temperature zone in which the operation can be performed with Max. cHz is gradually widened after 30 minutes passed when starting ECO operation.</p> <p>2) The indoor fan speed is depend on presetting and can change every speed after setting ECO operation.</p>
Hz	05k	07k	10k	13k	16k	18k	24k																			
Cool min	16	20	20	21	17	21	16																			
DRY max	29	29	29	26	33	39	38																			

Item	Operation flow and applicable data, etc.	Description																					
10. Temporary operation	<p>Pressing [RESET] button starts the temporary operation of [AUTO] operation. When keeping [RESET] button pressed for 10 seconds or more, the temporary [COOL] operation is performed.</p> <div><div>Press RESET button.</div><div>Did you press [RESET] button for 3 seconds or more?</div><div>Did you press [RESET] button for 10 seconds or more?</div><div>Switch to [AUTO RESTART] control.</div><div>Temporary [AUTO] operation</div><div>Temporary [COOL] Operation</div></div>	<div><div>1) When pressing [RESET] button, the temporary [AUTO] operation starts.</div><div>2) When keeping [RESET] button pressed for 3 seconds or more, Pi, Pi, Pi sound is heard and [AUTO RESTART] control is changed.</div><div>3) When keeping [RESET] button pressed for 10 seconds or more, "Pi" sound is heard and the temporary [COOL] operation starts.</div><div>4) To stop the temporary operation, press the button again.</div></div>																					
11. Discharge temperature control	<table><tr><th>Td value</th><th>Control operation</th></tr><tr><td>117°C</td><td>Judges as an error and stops the compressor.</td></tr><tr><td>115°C</td><td>Reduce the compressor speed.</td></tr><tr><td>106°C</td><td>Reduce slowly compressor speed.</td></tr><tr><td>103°C</td><td>Keeps the compressor speed.</td></tr><tr><td>96°C</td><td>If the operation is performed with lower speed than one commanded by the serial signal, speed is slowly raised up to the commanded speed.</td></tr><tr><td></td><td>Operates with speed commanded by the serial signal.</td></tr></table>	Td value	Control operation	117°C	Judges as an error and stops the compressor.	115°C	Reduce the compressor speed.	106°C	Reduce slowly compressor speed.	103°C	Keeps the compressor speed.	96°C	If the operation is performed with lower speed than one commanded by the serial signal, speed is slowly raised up to the commanded speed.		Operates with speed commanded by the serial signal.	<div><div>1. Purpose</div><div>This function detects error on the refrigerating cycle or error on the compressor, and performs protective control.</div><div>2. Operation</div><div><div>• Control of the compressor speed</div><div>The speed control is performed as described in the left table based upon the discharge temperature.</div></div></div>							
Td value	Control operation																						
117°C	Judges as an error and stops the compressor.																						
115°C	Reduce the compressor speed.																						
106°C	Reduce slowly compressor speed.																						
103°C	Keeps the compressor speed.																						
96°C	If the operation is performed with lower speed than one commanded by the serial signal, speed is slowly raised up to the commanded speed.																						
	Operates with speed commanded by the serial signal.																						
12. High pressure control	<table><tr><th>Cooling (TE)</th><th>Heating (TC)</th><th>Control operation</th></tr><tr><td>63°C</td><td>62°C</td><td>Judges as an error and stops the compressor.</td></tr><tr><td>63°C</td><td>57°C</td><td>Reduce the compressor speed.</td></tr><tr><td>61°C</td><td>55°C</td><td>Reduce slowly compressor speed.</td></tr><tr><td>59°C</td><td>53°C</td><td>Keeps the compressor speed.</td></tr><tr><td>55°C</td><td>49°C</td><td>If the operation is performed with lower speed than one commanded by the serial signal, speed is slowly raised up to the commanded speed.</td></tr><tr><td></td><td></td><td>Operates with speed commanded by the serial signal.</td></tr></table>	Cooling (TE)	Heating (TC)	Control operation	63°C	62°C	Judges as an error and stops the compressor.	63°C	57°C	Reduce the compressor speed.	61°C	55°C	Reduce slowly compressor speed.	59°C	53°C	Keeps the compressor speed.	55°C	49°C	If the operation is performed with lower speed than one commanded by the serial signal, speed is slowly raised up to the commanded speed.			Operates with speed commanded by the serial signal.	<div><div>1. Purpose</div><div>This function detects error on the refrigerating cycle or error on the compressor, and performs protective control.</div><div>2. Operation</div><div>Control of the compressor speed The speed control is performed as described in the left table based upon the heat exchanger temperature (TE, TC).</div></div>
Cooling (TE)	Heating (TC)	Control operation																					
63°C	62°C	Judges as an error and stops the compressor.																					
63°C	57°C	Reduce the compressor speed.																					
61°C	55°C	Reduce slowly compressor speed.																					
59°C	53°C	Keeps the compressor speed.																					
55°C	49°C	If the operation is performed with lower speed than one commanded by the serial signal, speed is slowly raised up to the commanded speed.																					
		Operates with speed commanded by the serial signal.																					

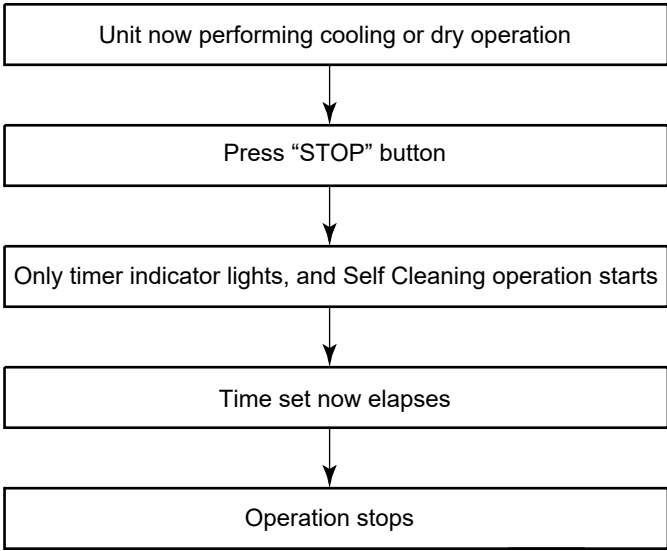Item	Operation flow and applicable data, etc.	Description													
13. Self-Cleaning function	 <pre> graph TD A[Unit now performing cooling or dry operation] --> B[Press "STOP" button] B --> C[Only timer indicator lights, and Self Cleaning operation starts] C --> D[Time set now elapses] D --> E[Operation stops] </pre> <ul style="list-style-type: none"> During Self-Cleaning operations: The louver opens slightly. The indoor fan operates continuously at a speed of 500 rpm. <p>Self-Cleaning operation times</p> <table border="1"> <thead> <tr> <th></th><th>Operation time</th><th>Self-Cleaning operation time</th></tr> </thead> <tbody> <tr> <td rowspan="2">Cooling: Auto (cooling) Dry</td><td>Up to 10 minutes</td><td>No Self-Cleaning operation performed (0 minutes)</td></tr> <tr> <td>10 minutes or longer</td><td>30 mins.</td></tr> <tr> <td>Heating: Auto (heating)</td><td colspan="2" rowspan="3">No Self-Cleaning operation performed</td></tr> <tr> <td>Auto (fan only)</td></tr> <tr> <td>Shutdown</td></tr> </tbody> </table> <ul style="list-style-type: none"> To stop an ongoing Self-Cleaning operation at any time Press the start/stop button on the remote controller twice during the Self-Cleaning operation. (After pressing the button for the first time, press it for the second time without delay (within 10 minutes).) 		Operation time	Self-Cleaning operation time	Cooling: Auto (cooling) Dry	Up to 10 minutes	No Self-Cleaning operation performed (0 minutes)	10 minutes or longer	30 mins.	Heating: Auto (heating)	No Self-Cleaning operation performed		Auto (fan only)	Shutdown	<p>1. Purpose</p> <p>The Self-Cleaning operation is to minimize the growth of mold, bacteria etc. by running the fan and drying so as to keep the inside of the air conditioner clean.</p> <p>Self-Cleaning operation</p> <p>When the cooling or dry operation shuts down, the unit automatically starts the Self-Cleaning operation which is then performed for the specified period based on duration of the operation which was performed prior to the shutdown, after which the Self-Cleaning operation stops. (The Self-Cleaning operation is not performed after a heating operation.)</p> <p>2. Operation</p> <ol style="list-style-type: none"> When the stop signal from the remote controller or timer-off function is received, only the timer indicator light. The period of the Self-Cleaning operation is determined by the duration of the operation performed prior to the reception of the stop code. After the Self-Cleaning operation has been performed for the specified period, the unit stops operating.
	Operation time	Self-Cleaning operation time													
Cooling: Auto (cooling) Dry	Up to 10 minutes	No Self-Cleaning operation performed (0 minutes)													
	10 minutes or longer	30 mins.													
Heating: Auto (heating)	No Self-Cleaning operation performed														
Auto (fan only)															
Shutdown															

Item	Operation flow and applicable data, etc.		Description
13. Self-Cleaning function			
13-1-1. Self-Cleaning diagram			
Operation display	ON	OFF	OFF
FCU fan	ON rpm is depend on presetting.	ON (500RPM)	OFF
FCU louver	OPEN	OPEN (12.7°)	CLOSE
Timer display	ON or OFF depend on presetting of timer function.	ON	ON or OFF depend on presetting of timer function.
Compressor	ON or OFF depend on presetting per room temperature.	OFF	OFF
CDU fan	ON or OFF depend on presetting per room temperature.	OFF	OFF

Cool mode or dry mode
operation more than 10 mins.

Self-Cleaning mode
operate 30 mins.

Operation time

Turn off by remote controller or
timer-off function.

Automatically turn-off.

13-1-2. Self-Cleaning function release

How to set/cancel Self-Cleaning function

To set/cancel the Self-Cleaning function, proceed as follows:

• Setting diagnosis code "06" on remote controller
(See detail of setting diagnosis code in 11-4-1)

• Turn on the power supply to air conditioner, after that
press [RESET] button on air conditioner 1 time to turn
on the air conditioner (The LED display will show in
operation LED)①

• Take the remote controller to direction of LED display
on air conditioner, press button "up" (see detail of
setting diagnosis code in 11-4-1) 1 time to send the
code "07"

(within 3 sec. after press [RESET] button), then air
conditioner will shutdown automatically. Also, LED
display will show flash follow the able below.

Self-cleaning function	Operation LED	Timer LED
ON	Flash 1 Hz	None
OFF	Flash 1 Hz	Flash 1 Hz

Note) Table above will show current status of
Self-Cleaning function

 
• Set or Cancel Self-Cleaning function by push the
RESET button on air conditioner.
When setting is changed, the sound warning will
alarm "Beep". The setting is changed following below.


ON → OFF → ON

OFF ←

• Turn on air conditioner again by remote controller to
confirm setting.

</

Item	Operation flow and applicable data, etc.	Description
14. Remote-A or B selection	<p>Setting the remote controller</p> <p>To separate using of remote controller for each indoor unit in case of 2 air conditioner are installed nearly.</p> <p>Remote Controller B Setup.</p> <ol style="list-style-type: none"> 1) Press [RESET] button on the indoor unit to turn the air conditioner ON. 2) Point the remote controller at the indoor unit. 3) Push and hold [CHECK] button on the Remote Controller by the tip of the pencil. "00" will be shown on the display (Picture ①). 4) Press [MODE] during pushing [CHECK]. "B" will show on the display and "00" will disappear and the air conditioner will turn OFF. The Remote Controller B is memorized (Picture ②). <p>Note : 1. Repeat above step to reset Remote Controller to be A. 2. Remote Controller A has not "A" display. 3. Default setting of Remote Controller from factory is A.</p> 	<ol style="list-style-type: none"> 1. Purpose This operation is to operate only one indoor unit using one remote controller. 2. Description When operating one indoor unit in a situation where two indoor units have been installed in the same room or nearby rooms, this operation prevents the remote controller signal from being received simultaneously by both units, thus preventing both units from operating. 3. Operation The indoor unit on which the remote controller selection has been set to B receives the signal of the remote controller also set to B. (At the factory the remote controller selection is set to A on all the indoor units. There is no A setting display.)
15. Hi POWER Mode	<p>([Hi POWER] button on the remote controller is pressed)</p> <p>When [Hi POWER] button is pressed while the indoor unit is in Auto, Cooling or Heating operation, Hi POWER mark is indicated on the display of the remote controller and the unit operates as follows.</p> <ol style="list-style-type: none"> 1. Automatic operation <ul style="list-style-type: none"> • The indoor unit operates in according to the current operation. 2. Cooling operation <ul style="list-style-type: none"> • The preset temperature drops 1°C (The value of the preset temperature on the remote controller does not change.) The indoor unit's fan speed level increase 1 tap 3. Heating operation <ul style="list-style-type: none"> • The preset temperature increases 2°C (The value of the preset temperature on the remote controller does not change.) The indoor unit's fan speed level increase 1 tap 4. The Hi POWER mode can not be set in Dry operation 	



Item	Operation flow and applicable data,etc	Description
16. Silent Operation	<p>Silent  button on remote controller is pressed.</p> <p>Silent 1: Cooling/heating capacity is limited maximum for 70% of rated. Only compressor speed is limited.</p> <p>Silent 2: CDU sound level is limited for lowest CDU sound level. Compressor and CDU fan speed are limited.</p>	<p>This function is used when the user need to keep silent at outdoor side. It is limit maximum compressor speed and CDU fan speed. Sound level can be implemented by 2 silent level.</p> <p>Sound level: Rated level > Silent 1 > Silent 2</p> <p>Note: Due to Silent operation reason, In adequate cooling/heating capacity may occur.</p>
















Silent Operation description


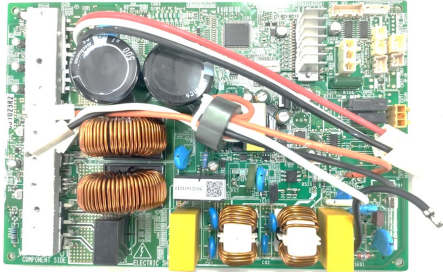
Model	Silent Operation	Cooling		Heating	
		Compressoar frequency (rps)	CDU Fan speed (rpm)	Compressoar frequency (rps)	CDU Fan speed (rpm)
RAS-05B2AVG-E2	Silent1	25	Max 890	41	Max 890
	Silent2	15	720	25	720
RAS-07B2AVG-E2	Silent1	37	Max 900	52	Max 900
	Silent2	22	720	32	720
RAS-10B2AVG-E2	Silent1	41	Max 900	59	Max 900
	Silent2	25	720	37	720
RAS-13B2AVG-E2	Silent1	65	Max 950	65	Max 950
	Silent2	35	720	43	720
RAS-16B2AVG-E2	Silent1	54	Max 950	64	Max 950
	Silent2	30	600	42	600
RAS-18B2AVG-E2	Silent1	68	Max 950	68	Max 950
	Silent2	40	600	46	600
RAS-24B2AVG-E2	Silent1	67	Max 980	71	Max 980
	Silent2	34	700	34	700


Silent Operation (Outdoor Unit)



17. 8°C heating / Frost protective operation	<p> Button on remote controller is pressed. Set temperature is performed for 5°C to 13°C and no cold draft prevention control.</p> <p>8°C heating operation</p> 	Intended for cold latitudes and performs objective heating operation.
--	---	---

Item	Operation flow and applicable data,etc	Description																																													
18. QUIET mode	<p>When the "Quiet mode" selected from [QUIET] button;</p> <ul style="list-style-type: none">- The fan of the indoor unit will be restricted the revolving speed at speed UL.- The compressor speed is controlled as shown in the figure. <table border="1"><thead><tr><th>Model</th><th>05</th><th>07</th><th>10</th><th>13</th></tr></thead><tbody><tr><td>Cool min (Hz)</td><td>12</td><td>17</td><td>17</td><td>20</td></tr><tr><td>Quiet Cool (Hz)</td><td>34</td><td>39</td><td>35</td><td>35</td></tr><tr><td>Heat min (Hz)</td><td>15</td><td>20</td><td>20</td><td>21</td></tr><tr><td>Quiet Heat (Hz)</td><td>28</td><td>28</td><td>28</td><td>25</td></tr></tbody></table> <table border="1"><thead><tr><th>Model</th><th>16</th><th>18</th><th>24</th></tr></thead><tbody><tr><td>Cool min (Hz)</td><td>15</td><td>17</td><td>12</td></tr><tr><td>Quiet Cool (Hz)</td><td>35</td><td>35</td><td>35</td></tr><tr><td>Heat min (Hz)</td><td>17</td><td>21</td><td>15</td></tr><tr><td>Quiet Heat (Hz)</td><td>33</td><td>39</td><td>38</td></tr></tbody></table> <p>The " Quiet mode " is canceled by [QUIET] button is pressed to select other speed.</p>	Model	05	07	10	13	Cool min (Hz)	12	17	17	20	Quiet Cool (Hz)	34	39	35	35	Heat min (Hz)	15	20	20	21	Quiet Heat (Hz)	28	28	28	25	Model	16	18	24	Cool min (Hz)	15	17	12	Quiet Cool (Hz)	35	35	35	Heat min (Hz)	17	21	15	Quiet Heat (Hz)	33	39	38	<p>Quiet mode is the system which, control the revolving speed of indoor fan to work constantly at lower than speed L. In addition, noise level of indoor unit is less than usual.</p> <p>Remarks :</p> <ol style="list-style-type: none">1. Quiet mode is unable to work in dry mode.2. Quiet mode is appropriate to work with less cooling load and less heating load condition. Because of the fan speed L- may cause not enough the cooling capacity or heating capacity.
Model	05	07	10	13																																											
Cool min (Hz)	12	17	17	20																																											
Quiet Cool (Hz)	34	39	35	35																																											
Heat min (Hz)	15	20	20	21																																											
Quiet Heat (Hz)	28	28	28	25																																											
Model	16	18	24																																												
Cool min (Hz)	15	17	12																																												
Quiet Cool (Hz)	35	35	35																																												
Heat min (Hz)	17	21	15																																												
Quiet Heat (Hz)	33	39	38																																												
19. Display lamp brightness adjustment	<p>To decrease the display lamp brightness or turn it off.</p> <ol style="list-style-type: none">1. Press and hold  FAN for 3 seconds until brightness level (d0, d1, d2 or d3) is shown on remote controller LCD then release the button.2. Press  or  to adjust brightness in 4 levels. <table border="1"><thead><tr><th>Remote controller LCD</th><th>Operation display</th><th>Brightness</th></tr></thead><tbody><tr><td>d3</td><td> Lamp illuminates full brightness.</td><td>100%</td></tr><tr><td>d2</td><td> Lamp illuminates 50% brightness.</td><td>50%</td></tr><tr><td>d1</td><td> Lamp illuminates 50% brightness and the operation lamp is turned off.</td><td>50%</td></tr><tr><td>d0</td><td> All lamps are turned off.</td><td>All turned off</td></tr></tbody></table> <p>• In the examples of d1 and d0, the lamp illuminates for 5 seconds before going off.</p>	Remote controller LCD	Operation display	Brightness	d3	 Lamp illuminates full brightness.	100%	d2	 Lamp illuminates 50% brightness.	50%	d1	 Lamp illuminates 50% brightness and the operation lamp is turned off.	50%	d0	 All lamps are turned off.	All turned off																															
Remote controller LCD	Operation display	Brightness																																													
d3	 Lamp illuminates full brightness.	100%																																													
d2	 Lamp illuminates 50% brightness.	50%																																													
d1	 Lamp illuminates 50% brightness and the operation lamp is turned off.	50%																																													
d0	 All lamps are turned off.	All turned off																																													

Item	Operation flow and applicable data, etc.	Description
20. COMFORT SLEEP mode	<p>Cooling mode</p> <ul style="list-style-type: none"> The preset temperature will increase as show on ECO operation (Item No. 9) Press the [COMFORT SLEEP] button to choose the operating hours. Repeat pressing to select the hours. (1hr, 3hr, 5hr or 9hr) If the [COMFORT SLEEP] button is pressed again means cancel comfort sleep mode. <p>Heating mode</p> <ul style="list-style-type: none"> The preset temperature will drop down as show on ECO operation (Item No. 9) Press the [COMFORT SLEEP] button to choose the operating hours. Repeat pressing to select the hours. (1hr, 3hr, 5hr or 9 hr) If the [COMFORT SLEEP] button is pressed again means cancel comfort sleep mode. 	<p>The principles of comfort sleep mode are:</p> <ul style="list-style-type: none"> Quietness for more comfortable. When room temperature reach setting temperature Save energy by changing room temperature automatically. The air condition can shut down by itself automatically. <p>Remarks:</p> <ol style="list-style-type: none"> Comfort sleep mode will not operate in dry mode and fan only mode.
21. Operation mode select table	<p>Operating system setting (For 05k, 07k, 10k, 13k, 16k, 18k)</p>  <ul style="list-style-type: none"> Do cut J804 for cooling only system Do cut J805 for heating only system Do cut both of J804 and J805 for return to factory default. <p>(For 24k)</p>  <ul style="list-style-type: none"> Do cut J801 for Strong defrost Do cut J802 for Cooling only system Do cut J803 for Heating only system 	<ol style="list-style-type: none"> Purpose Choosing the operating system as appropriate in real condition Operation Factory default setting prefer "Heat pump" system. Through it is able to cooling only system heating only system or return to factory default.

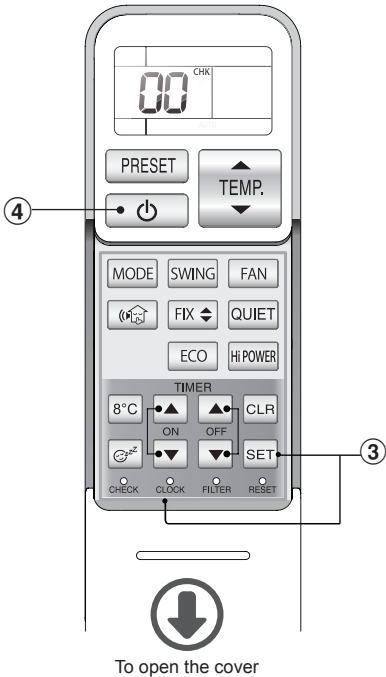Item	Operation flow and applicable data, etc.	Description
22. Short Timer	<p>In the normal condition, after switching one circuit breaker, 3-minute delay time for compressor and 1 hour for plasma air purifier are set for the maintenance of the unit.</p> 	<p>Purpose To start the unit immediately for the purpose of testing, trial...etc, short timer can be used. maintenance of the unit.</p> <p>Short Timer Setting</p> <ol style="list-style-type: none"> ① Press [⏻] button to turn the unit OFF. ② Set the operation mode or plasma air purifier on the remote controller without sending the signal to the unit. ③ Use the tip of the pencil to push the [CHK] button and hold, "00" will show on display, then press [SET] button to make "00" disappear. ④ Press [⏻] button to turn the unit ON. ⑤ When short timer is activated, all setting on the remote operates immediately, besides, all indicators on front panel turns ON continuously for 3 seconds.

9-3. Auto Restart Function

This indoor unit is equipped with an automatic restarting function which allows the unit to restart operating with the set operating conditions in the event of a power supply being accidentally shut down.

The operation will resume without warning three minutes after power is restored.

This function is set to work when shipped from the factory.


9-3-1. How to Cancel the Auto Restart Function

To cancel auto restart function, proceed as follows :


Repeat the setting procedure : the unit receives the signal and beeps three times.

The unit will be required to be turned on with the remote controller after the main power supply is turned off.

• When the unit is standby (Not operating)

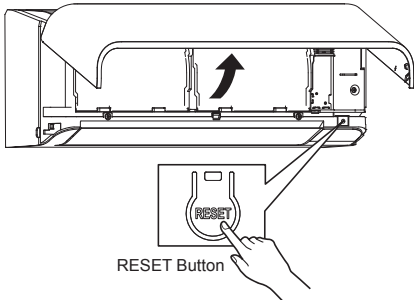Operation	Motions
<p>Press [RESET] button for more than three seconds. (Less than 10 seconds)</p> 	<p>The unit is on standby.</p> <p>↓</p> <p>The unit starts to operate. The white indicator is on.</p> <p>↓ After approx. three seconds,</p> <p>The unit beeps three times and continues to operate. The white indicator flashes for 5 seconds.</p> <p>If the unit is not required to operate at this time, press [RESET] button once more or use the remote controller to turn it off.</p>

• When the unit is in operation

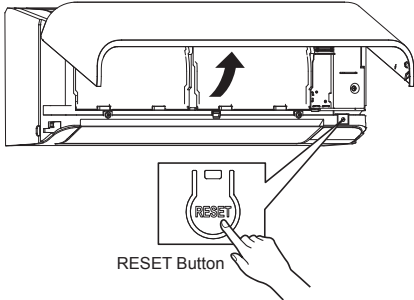Operation	Motions
<p>Press [RESET] button for more than three seconds. (Less than 10 seconds)</p> 	<p>The unit is in operation. The white indicator is on.</p> <p>↓</p> <p>The unit stops operating. The white indicator is turned off.</p> <p>↓ After approx. three seconds,</p> <p>The unit beeps three times. The white indicator flashes for 5 seconds.</p> <p>If the unit is required to operate at this time, press [RESET] button once more or use the remote controller to turn it on.</p>

9-3-2. How to Set the Auto Restart Function

To set the auto restart function, proceed as follows:


The power supply to the unit must be on ; the function will not set if the power is off.

Press the [RESET] button located in the center of the front panel continuously for three seconds.


The unit receives the signal and beeps three times.

The unit then restarts operating automatically in the event of power supply being accidentally shut down.

• When the system is on stand-by (not operating)

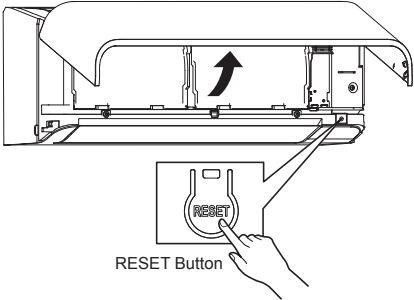Operation	Motions
<p>Press [RESET] button for more than three seconds. (Less than 10 seconds)</p>  <p>RESET Button</p>	<p>The unit is on standby.</p> <p>↓</p> <p>The unit starts to operate. The white indicator is on.</p> <p>↓ After approx. three seconds,</p> <p>The unit beeps three times and continues to operate.</p> <p>If the unit is not required to operate at this time, press [RESET] button once more or use the remote controller to turn it off.</p>

• When the system is operating

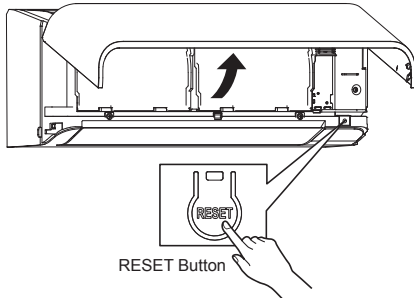Operation	Motions
<p>Press [RESET] button for more than three seconds. (Less than 10 seconds)</p>  <p>RESET Button</p>	<p>The unit is in operation. The white indicator is on.</p> <p>↓</p> <p>The unit stops operating. The white indicator is turned off.</p> <p>↓ After approx. three seconds,</p> <p>The unit beeps three times.</p> <p>If the unit is required to operate at this time, press [RESET] button once more or use the remote controller to turn it on.</p>

9-3-3. Power Failure During Timer Operation


When the unit is turned off because of power failure during timer operation, the timer operation is canceled. In that case, set the timer operation again.

NOTE :

The Daily Timer is reset while a command signal can be received from the remote controller even if it stopped due to a power failure.

9-4. Remote controller and Its Functions



9-4-1. Parts Name of Remote Controller

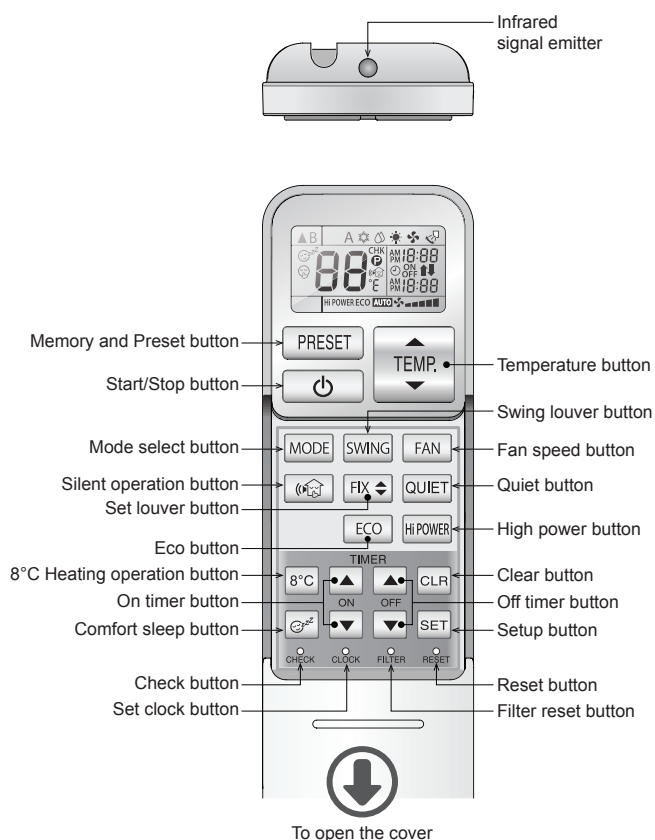

9-4-2. Operation of remote controller

1. Insert the Battery

1. Remove the slide cover.
2. Insert 2 new batteries (AAA type) following the (+) and (-) positions.

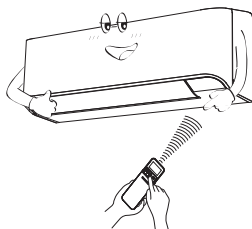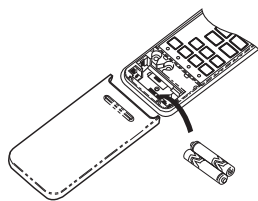


2. Clock Setting




1. Push by the tip of the pencil. If timer indication is flashing, go to the next step 2.


2. Press or : adjust the time.

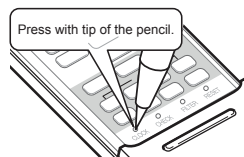3. Press : Set the time.







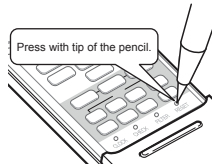






 3. Remote controller reset















1. Push  by tip of the pencil.
2. Remove the batteries.
3. Press  .
4. Insert the batteries.



4. AUTOMATIC OPERATION






1. Press   : Select Auto A.
2. Press   : Set the desired temperature.
Min 17°C, Max 30°C,
3. Press   : Select AUTO,
LOW ,
LOW+ ,
MED ,
MED+ ,
HIGH 

5. COOLING / HEATING / FAN ONLY OPERATION

1. Press   : Select Cool , Heat , or Fan only 
2. Press   : Set the desired temperature.
Min 17°C, Max 30°C,
Fan Only: No temperature indication
3. Press   : Select AUTO,
LOW ,
LOW+ ,
MED ,
MED+ ,
HIGH 

6. DRY OPERATION



For dehumidification, a moderate cooling performance is controlled automatically.

1. Press   : Select Dry .
2. Press   : Set the desired temperature. Min 17°C, Max 30°C.

Note: Dry mode fan speed is set to Auto only.



7. Hi-POWER OPERATION

To automatically control room temperature and airflow for faster cooling or heating operation (except in DRY and FAN ONLY mode)

Press   : Start and stop the operation.

8. ECO OPERATION

To automatically control room temperature to save energy (except in DRY and FAN ONLY mode)



Press   : Start and stop the operation.

Note:

- Cooling operation; the set temperature will increase automatically 1 degree/hour for 2 hours (maximum 2 degrees increase).
- For heating operation the set temperature will decrease.

9. 8°C HEATING OPERATION

1. Press   : To change to 8°C set temperature heating.

2. Press   : To adjust setting temperature from 5°C to 13°C.

Note:

- 8°C will operate in Heating mode only.
- If Air conditioner performs in cooling operation (including automatic cooling) or dry operation it will change to heating operating.


 

 








10. TEMPORARY OPERATION

In case of the misplaced or discharged remote controller

- Pressing the RESET button, the unit can start or stop without using the remote controller.
- Operation mode is set on AUTOMATIC operation, preset temperature is 24°C and fan operation is automatic speed.






 


11. TIMER OPERATION

Set the timer when the air conditioner is operating.

Setting the ON Timer		Setting the OFF Timer	
1	Press   : Set the desired ON timer.	Press   : Set the desired OFF timer.	
2	Press   : Set the timer.	Press   : Set the timer.	
3	Press   : Cancel the timer.	Press   : Cancel the timer.	

Daily timer allows the user to set both the ON & OFF timers and will be activated on a daily basis.

Setting Daily Timer

1	Press   : Set the ON timer.	3	Press   .
2	Press   : Set the OFF timer.	4	Press   button during the (↑ or ↓) mark flashing.





- During the daily timer is activation, both arrows (↑ or ↓) are indicated.

Note:

- Keep the remote controller in accessible transmission to the indoor unit; otherwise, the time lag of up to 15 minutes will occur.
- The setting will be saved for the next same operation.



12. PRESET OPERATION

Set your preferred operation for future use. The setting will be memorized by the unit for future operation (except air flow direction).

1. Select your preferred operation.
2. Press and hold   for 3 seconds to memorize the setting. The **P** mark displays.
3. Press   : Operate the preset operation.

13. QUIET OPERATION

To operate at super low fan speed for quiet operation (except in DRY mode).



Press   : Start and stop the operation.

Note:

- Under certain conditions, QUIET operation may not provide adequate cooling due to low sound features

14. COMFORT SLEEP OPERATION

For comfortable sleep, automatically control air flow and automatically turn OFF.

Press   : Select 1, 3, 5 or 9 hrs for OFF timer operation.

Note:

- The cooling operation, the set temperature will increase automatically 1 degree/hour for 2 hours (maximum 2 degrees increase).
- For heating operation, the set temperature will decrease.

15. AUTO RESTART FUNCTION SETTING

This product is designed so that, after a power failure, it can restart automatically in the same operating mode as before the power failure.

Information

The product is shipped with Auto Restart function in the ON position. Turn it OFF if this function is not required.

<How to turn OFF the Auto Restart Function>

- Press and hold the [OPERATION] button on the indoor unit for 3 seconds (3 beep sounds but OPERATION lamp does not blink).

<How to turn ON the Auto Restart Function>



- Press and hold the [OPERATION] button on the indoor unit for 3 seconds (3 beep sounds and OPERATION lamp blink 5 time/sec for 5 seconds).


Note :

- In case of ON timer or OFF timer are set, AUTO RESTART OPERATION does not activate.

16. MANUAL DEFROST OPERATION

To defrosting the heat exchanger of the outdoor unit during Heating operation.

Press and hold   : for 5 sec. then remote controller display will show [dF] as picture ① for 2 sec.

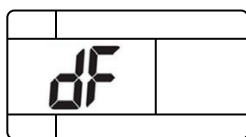

①

17. SILENT OPERATION

Keep outdoor unit operating silently to ensure either yourself or neighborhood will have a tight sleep in nighttime. By this feature, the heating (or cooling) capacity will be optimized to deliver such silent experience. The silent operation can be selected from one of two purposes (Silent 1 and Silent 2).

There are three setting parameters: Standard level > Silent 1 > Silent 2



Silent 1

Though operating silently, the Heating (or Cooling) capacity is still prioritized to ensure having sufficient comfort inside the room.

This setting is a perfect balance between the Heating (or Cooling) capacity and the Sound level of outdoor unit.

Silent 2





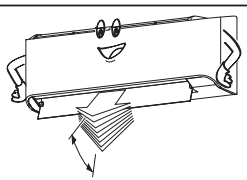
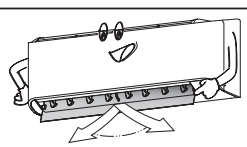
Compromising the Heating (or Cooling) capacity to the Sound level in any circumstance where the outdoor unit's sound level is highly prioritized.

This setting has a purpose to reduce the maximum sound level of outdoor unit by 4 dB(A).

Note:

- While activating of Silent operation, inadequate heating (or cooling) capacity may occur.


18. AIR FLOW DIRECTION

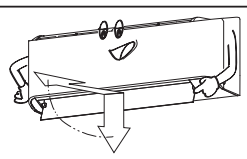1	Press  FIX  : Move the louver in the desired vertical direction.	
2	Press  SWING : Swing the air automatically and press again to stop.	
3	For horizontal direction, adjust manually.	

 

 

9-4-3. Name and Functions of Indications on Remote Controller

All indications, except for the clock time indicator, are displayed by pressing the  button.

1. Transmission mark

This transmission mark  indicates when the remote controller transmits signals to the indoor unit.

 





2. Mode indicator

Indicates the current operation mode.
(A : Auto,  : Cool,  : Dry,  : Heat
 : Fan only)

3. Temperature indicator

 Indicates the temperature setting.
(17°C to 30°C)

4. FAN speed indicator

Indicates the selected fan speed.
AUTO or five fan speed levels
(LOW , LOW+ , MED , MED+ ,
HIGH ) can be shown.
In Dry mode () fan speed is AUTO only.

5. TIMER and clock time indicator

The time setting for timer operation or the clock time is indicated.


The current time is always indicated except during TIMER operation.

6. Hi-POWER indicator

Indicates when the Hi-POWER operation starts.
Press the Hi-POWER button to start and press it again to stop the operation.

7. (PRESET) indicator

Flashes for 3 seconds when the PRESET button is pressed during operation.

The  mark is shown when holding down the button for more than 3 seconds while the mark is blinks.

Press another button to turn off the mark.

8. ECO indicator

Indicates when the ECO is in activated.
Press the ECO button to start and press it again to stop operation.

9. A, B change indicator remote controller

When the remote controller switching function is set, "B" appears in the remote controller display.(When the remote controller setting is "A", there is no indication at this position.)

10. Comfort sleep

Indicates when comfort sleep is activated.
Press comfort sleep button to selectter

11. Quiet


Indicates when quiet is activated.
Press quiet button to start and press it again to stop operation.

12. Swing

Indicates when louver is swing.
Press swing button to start the swing operation and press it again to stop the swing operation.

13. Service Mode indicator


Shows during enter service Mode.

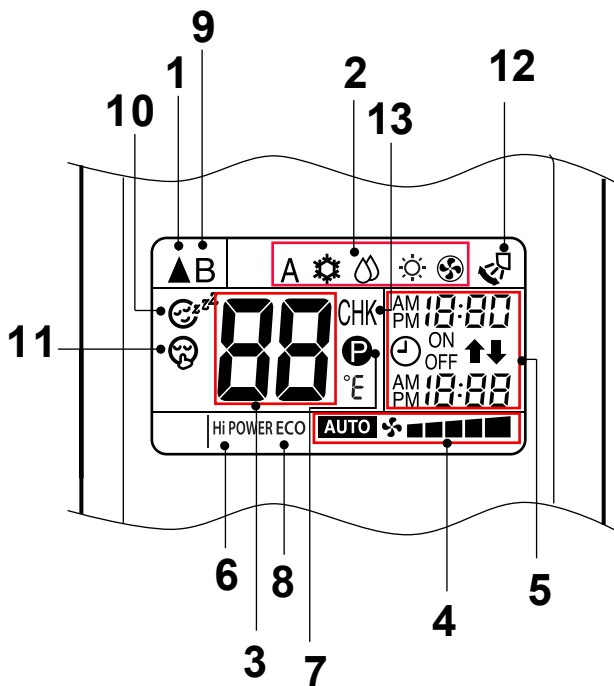


10. INSTALLATION PROCEDURE

10-1. Installation Diagram of Indoor and Outdoor Units

	05k, 07k, 10k, 13k	16k, 18k	24k
A	81	86	50

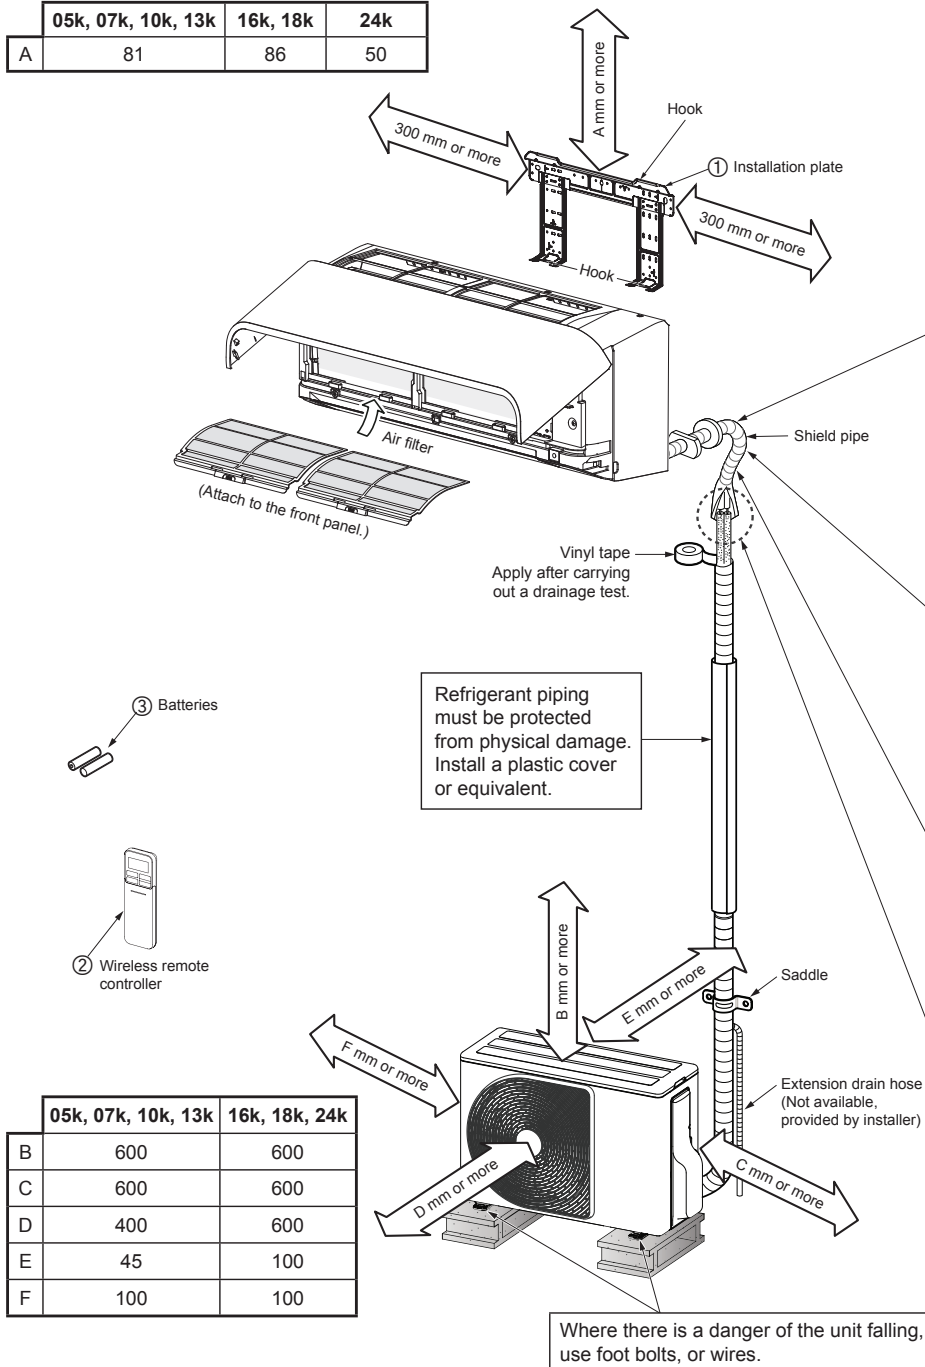


For the rear left, bottom left and left piping

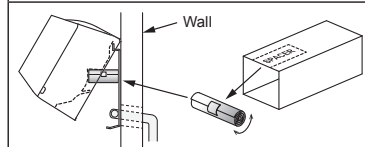


Cut out a piece of SPACER from indoor unit packaging box, roll it and insert between the indoor unit and wall to tilt the indoor unit for better operation.


The auxiliary piping can be connected to the left, rear left, rear right, right, bottom right or bottom left.

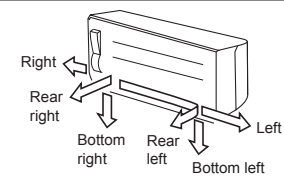

Do not allow the drain hose to get slack

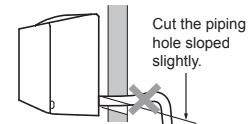


Make sure to run the drain hose sloped downward.

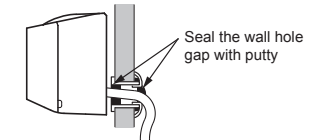

After completing refrigerant piping, wiring, and drain piping, caulk pipe hole gap with putty to prevent water leakage.

The flare connection should be installed outdoors.

 
Insulate the refrigerant pipes separately with insulation, not together.



Heat resisting polyethylene foam

Before installing the wireless remote controller

- Loading Batteries
 1. Remove the battery cover.
 2. Insert 2 new batteries (AAA type) following the (+) and (-) positions.

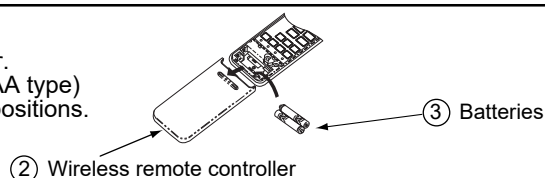


10-2. Installation

10-2-1. Optional installation parts


Part code	Parts name	Q'ty
A	Refrigerant piping Liquid side : Ø6.35 mm Gas side : Ø9.52 mm (For 05k, 07k, 10k, 13k) 12.70 mm (For 16k, 18k, 24k)	One each
B	Pipe insulating material (polyethylene foam, 6 mm thick) (For 05k, 07k, 10k, 13k) (polyethylene foam, 8 mm thick) (For 16k, 18k, 24k)	1
C	Putty, PVC tapes	One each

<Fixing bolt arrangement of outdoor unit>

(Unit : mm)

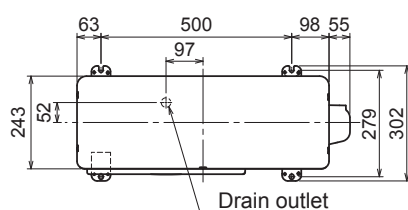

For 05k, 07k, 10k, 13k

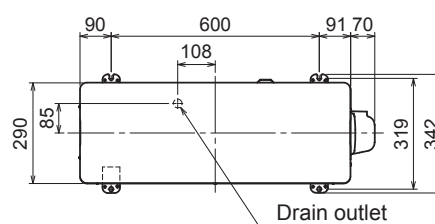

 



 

 


For 16k, 18k, 24k


Fig. 10-2-1

- Secure the outdoor unit with fixing bolts and nuts if the unit is likely to be exposed to a strong wind.
- Use Ø8 mm or Ø10 mm anchor bolts and nuts.
- If it is necessary to drain the defrost water, attach drain nipple ⑩ to the bottom plate of the outdoor unit before installing it.

※ When using a multi-system outdoor unit, refer to the Installation Manual provided with the model concerned.

10-2-2. Accessory and installation parts

INDOOR								
No.	Part name	Q'ty	No.	Part name	Q'ty	No.	Part name	Q'ty
①	Installation plate 	1	④	Mounting screw 	5	⑦	Installation and Owner's Manual 	1
②	Wireless remote controller 	1	⑤	Screw (For 24k model only) 	2	⑧	Safety Manual 	1
③	Battery 	2	⑥	B Label 	1	⑨	R32 Information Servicing Manual 	1

OUTDOOR		
No.	Part name	Q'ty
⑩	Drain nipple 	1








10-2-3. Installation/Serviceing Tools

Changes in the product and components

In the case of an air conditioner using R32, in order to prevent any other refrigerant from being charged accidentally, the service port diameter of the outdoor unit control valve (3 way valve) has been changed. (1/2 UNF 20 threads per inch)

- In order to increase the pressure resisting strength of the refrigerant piping flare processing diameter and size of opposite side of flare nuts has been changed. (for copper pipes with nominal dimensions 1/2 and 5/8)

New tools for R32(R410A)

New tools for R32(R410A)	Applicable to R22 model		Changes
Gauge manifold	×		As pressure is high, it is impossible to measure by means of conventional gauge. In order to prevent any other refrigerant from being charged, each port diameter has been changed.
Charge hose	×		In order to increase pressure resisting strength, hose materials and port size have been changed (to 1/2 UNF 20 threads per inch). When purchasing a charge hose, be sure to confirm the port size.
Electronic balance for refrigerant charging	○		As pressure is high and gasification speed is fast, it is difficult to read the indicated value by means of charging cylinder, as air bubbles occur.
Torque wrench (nominal diam. 1/2, 5/8)	×		The size of opposite sides of flare nuts have been increased. Incidentally, a common wrench is used for nominal diameters 1/4 and 3/8.
Flare tool (clutch type)	○		By increasing the clamp bar's receiving hole, strength of spring in the tool has been improved.
Gauge for projection adjustment	—	—	Used when flare is made by using conventional flare tool.
Vacuum pump adapter	○		Connected to conventional vacuum pump. It is necessary to use an adapter to prevent vacuum pump oil from flowing back to the charge hose. The charge hose connecting part has two ports-one for conventional refrigerant (7/16 UNF 20 threads per inch) and one for R32(R410A). If the vacuum pump oil (mineral) mixes with R32(R410A) a sludge may occur and damage the equipment.
Gas leakage detector	×		Exclusive for HFC refrigerant.

- Incidentally, the “refrigerant cylinder” comes with the refrigerant designation R32(R410A) and protector coating in the U.S's ARI specified rose color (ARI color code: PMS 507).
- Also, the “charge port and packing for refrigerant cylinder” require 1/2 UNF 20 threads per inch corresponding to the charge hose's port size.

10-3. Indoor Unit

10-3-1. Installation place

- A place which provides the spaces around the indoor unit as shown in the diagram
- A place where there are no obstacles near the air inlet and outlet
- A place which allows easy installation of the piping to the outdoor unit
- A place which allows the front panel to be opened
- The indoor unit shall be installed at least 2.5 m height. Also, it must avoided to put anything on the top of the indoor unit.

CAUTION

- Direct sunlight to the indoor unit's wireless receiver should be avoided.
- The microprocessor in the indoor unit should not be too close to RF noise sources.

<Remote controller>

- A place where there are no obstacles such as a curtain that may block the signal from the indoor unit.
- Do not install the remote controller in a place exposed to direct sunlight or close to a heating source, such as a stove.
- Keep the remote controller at least 1 m apart from the nearest TV set or stereo equipment. (This is necessary to prevent image disturbances or noise interference.)
- The location of the remote controller should be determined as shown below.

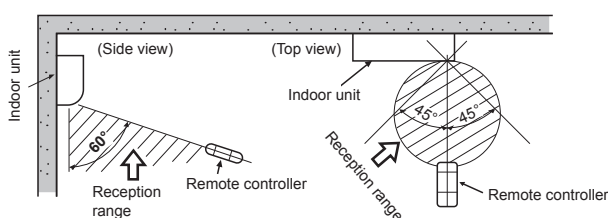



Fig. 10-3-1

10-3-2. Cutting a hole and mounting installation Plate

<Cutting a hole>

When installing the refrigerant pipes from the rear.

For 05k, 07k, 10k, 13k, 16k, 18k

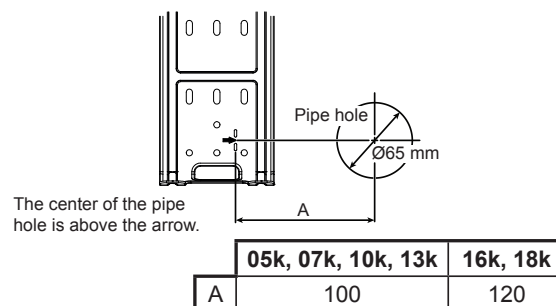

For 24k

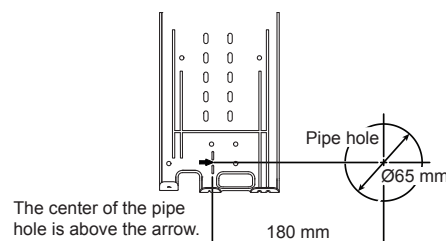


Fig. 10-3-2


1. After determining the pipe hole position on the mounting plate (➡), drill the pipe hole (Ø65 mm) at a slight downward slant to the outdoor side.

NOTE


- When drilling a wall that contains a metal lath, wire lath or metal plate, be sure to use a pipe hole brim ring sold separately.

<Mounting the installation plate>

For 05k, 07k, 10k, 13k

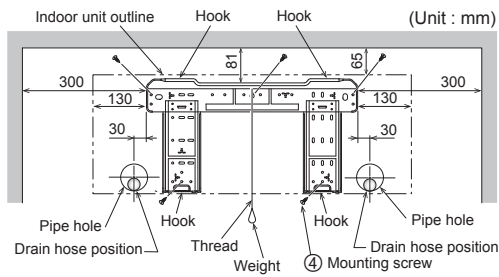

For 16k, 18k

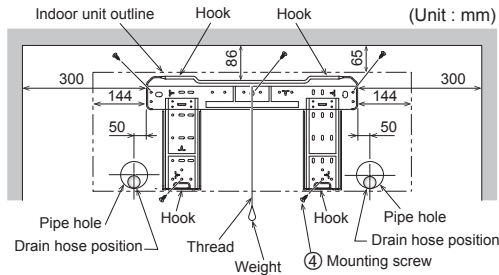

For 24k


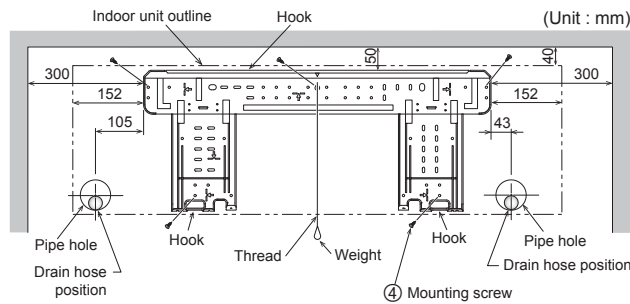


Fig. 10-3-3

<Space allows under indoor unit>


- Space allows for moving range of the air inlet grille and horizontal louver in operation above curtain rails, window cornice or other objects.

For 05k, 07k, 10k, 13k

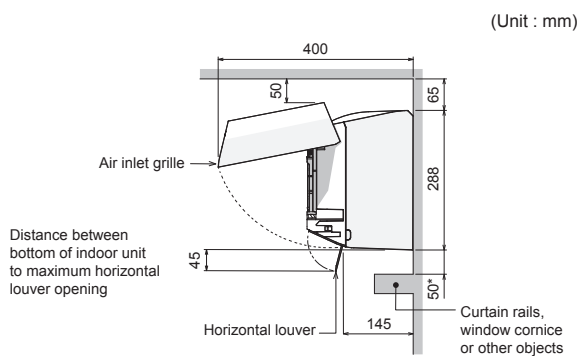

For 16k, 18k

(Unit : mm)

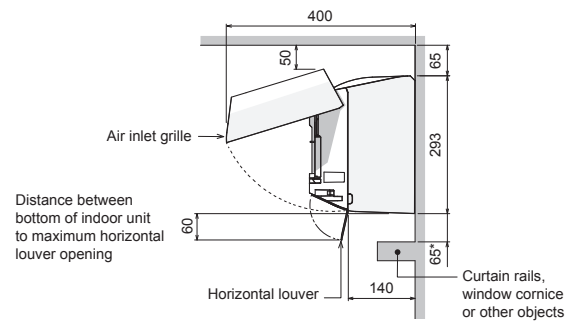

For 24k

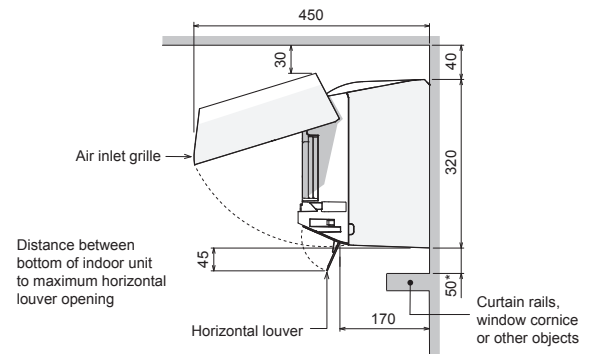


Fig. 10-3-4

CAUTION

- If have curtain rails, window cornice or other objects, allow space from the indoor unit as below.
 - For model 05k, 07k, 10k, 13k, 24k should be 50 mm or more.
 - For model 16k, 18k should be 65 mm or more.
- If allow space is less than stated above, this can affect the opening and closing of the air inlet grille and the horizontal louver.
- However, there should be no objects in the air outlet position. It will block the air flow direction and drop performance.

 
<When the installation plate is directly mounted on the wall>

1. Securely fit the installation plate onto the wall by screwing it in the upper and lower parts to hook up the indoor unit.
2. To mount the installation plate on a concrete wall with anchor bolts, utilize the anchor bolt holes as illustrated in the above figure.
3. Install the installation plate horizontally in the wall.


CAUTION

- When installing the installation plate with a mounting screw, do not use the anchor bolt holes. Otherwise, the unit may fall down and result in personal injury and property damage.

Installation plate
(Keep horizontal direction.)



5 mm dia. hole

 


Clip anchor
(local parts)



④ Mounting screw
Ø4 mm × 25 ℓ

Anchor bolt

Projection
15 mm or less

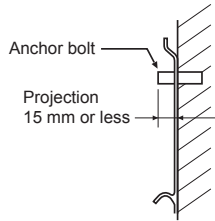

CAUTION

Failure to firmly install the unit may result in personal injury and property damage if the unit falls.

- In case of block, brick, concrete or similar type walls, make 5 mm dia. holes in the wall.
- Insert clip anchors for appropriate mounting ④ screws.

NOTE:

- Secure four corners and lower parts of the installation plate with 5 mounting screw to install it.

10-3-3. Piping and drain hose installation

<Piping and Drain Hose Forming>

- Since dewing results in a machine trouble, make sure to insulate both connecting pipes. (Use polyethylene foam as insulating material.)
- The connection of pipes can be installed in the following directions.

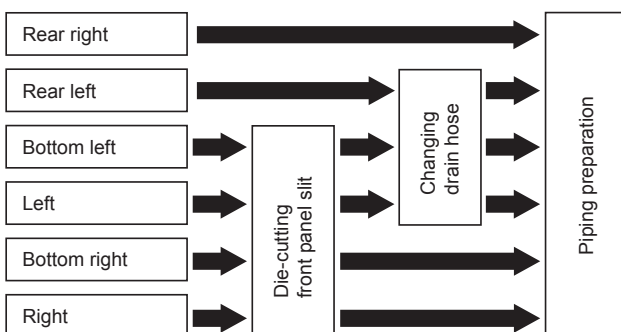


Fig. 10-3-5

1. Die-cutting front panel slit

Cut out the slit on the left or right side of the front panel for the left or right connection and the slit on the bottom left or right side of the front panel for the bottom left or right connection with a pair of nippers.

2. Changing drain hose

For leftward connection, bottom-leftward connection and rear-leftward connection's piping, it is necessary to change the drain hose and drain cap.

<How to remove the drain hose>

- The drain hose can be removed by removing the screw securing the drain hose and then pulling out the drain hose.
- When removing the drain hose, be careful of any sharp edges of steel plate. The edges can injuries.
- To install the drain hose, insert the drain hose firmly until the connection part contacts with heat insulator, and then secure it with original screw.

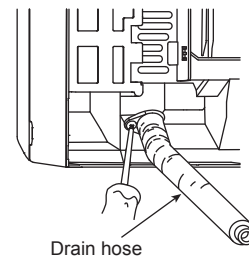


Fig. 10-3-6

<How to remove the drain cap>

Clip the drain cap by needle-nose pliers and pull out.

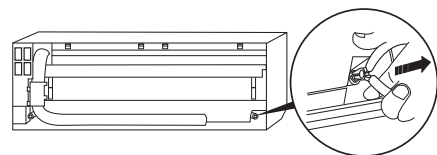


Fig. 10-3-7

<How to fix the drain cap>

- 1) Insert hexagon wrench (4 mm) in a center head.

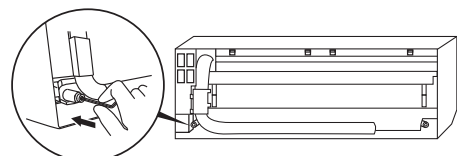


Fig. 10-3-8

2) Firmly insert drain cap.

Do not apply lubricating oil (refrigerant machine oil) when inserting the drain cap. Application causes deterioration and drain leakage of the plug.

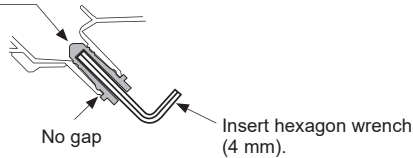


Fig. 10-3-9

CAUTION

Firmly insert the drain hose and drain cap; otherwise, water may leak.

<In case of right or left piping>

- After scribing slits inside of the front panel with a knife or a making-off pin, cut them with a pair of nippers or an equivalent tool.

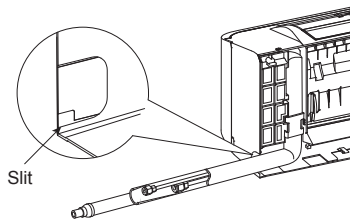


Fig. 10-3-10

<In case of bottom right or bottom left piping>

- After scribing slits inside of the front panel with a knife or a making-off pin, cut them with a pair of nippers or an equivalent tool.

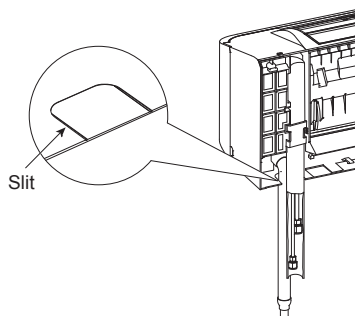


Fig. 10-3-11

<Left-hand connection with piping>

Bend the connecting pipe so that it is laid within 43 mm above the wall surface. If the connecting pipe is laid exceeding 43 mm above the wall surface, the indoor unit may unstably be set on the wall. When bending the connecting pipe, make sure to use a spring bender so as not to crush the pipe.

Bend the connecting pipe within a radius of 30 mm.
To connect the pipe after installation of the unit (figure)

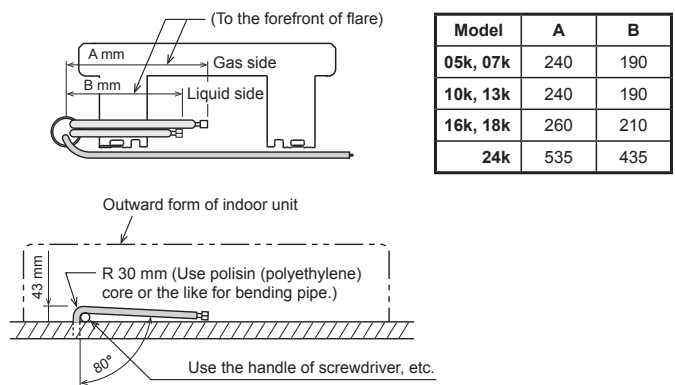



Fig. 10-3-12

NOTE:

- If the pipe is bent incorrectly, the indoor unit may unstably be set on the wall. After passing the connecting pipe through the pipe hole, connect the connecting pipes to the auxiliary pipes and wrap the facing tape around them.

CAUTION

- Bind the auxiliary pipes (two) and connecting cable with facing tape tightly. In case of leftward piping and rear-leftward piping, bind the auxiliary pipes (two) only with facing tape.

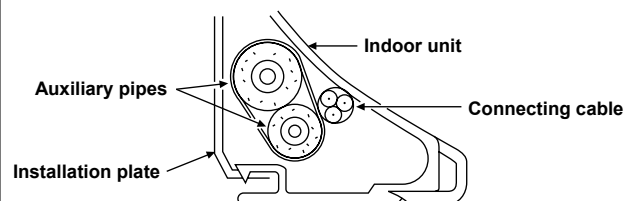

- Carefully arrange pipes so that any pipe does not stick out of the rear plate of the indoor unit.
- Carefully connect the auxiliary pipes and connecting pipes to each other and cut off the insulating tape wound on the connecting pipe to avoid double-taping at the joint, moreover, seal the joint with the vinyl tape, etc.
- Since dewing results in a machine trouble, make sure to insulate both the connecting pipes. (Use polyethylene foam as insulating material.)
- When bending a pipe, carefully do it, not to crush it.

10-3-4. Indoor unit fixing

1. Pass the pipe through the hole in the wall, and hook the indoor unit on the installation plate at the upper hooks.
2. Swing the indoor unit to right and left to confirm that it is firmly hooked up on the installation plate.
3. While pressing the indoor unit onto the wall, hook it at the lower part on the installation plate. Pull the indoor unit toward you to confirm that it is firmly hooked up on the installation plate.

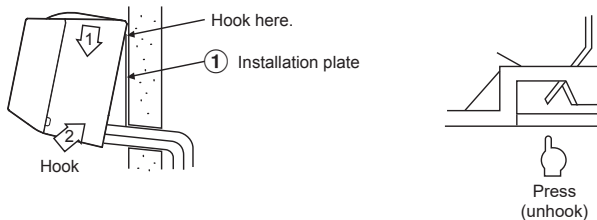


Fig. 10-3-13

- For detaching the indoor unit from the installation plate, pull the indoor unit toward you while pushing its bottom up at the specified parts.

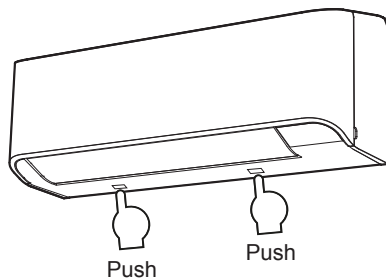


Fig. 10-3-14

INFORMATION

The lower part of indoor unit may float, due to the condition of piping and you cannot fix it to the installation plate.

In that case, use the ⑤ screws provided to fix the unit and the installation plate.
(For 24k model only)

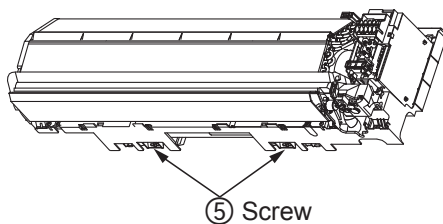


Fig. 10-3-15

10-3-5. Drainage

1. Run the drain hose sloped downwards.

NOTE

- Hole should be made at a slight downward slant on the outdoor side.

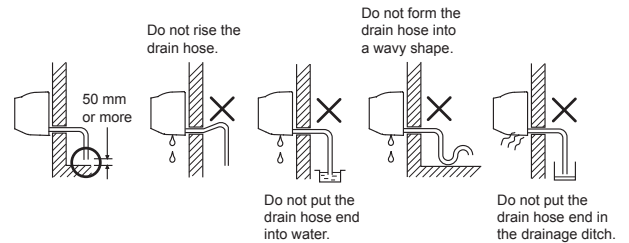


Fig. 10-3-16

2. Put water in the drain pan and make sure that the water is drained out of doors.
3. When connecting extension drain hose, insulate the connecting part of extension drain hose with shield pipe.

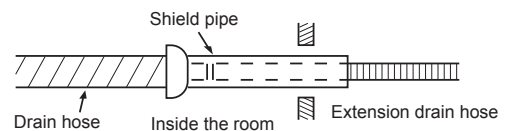


Fig. 10-3-17

CAUTION

- Arrange the drain pipe for proper drainage from the unit.
- Improper drainage can result in dew-dropping.
- This air conditioner has the structure designed to drain water collected from dew, which forms on the back of the indoor unit, to the drain pan.
- Therefore, do not store the power cord and other parts at a height above the drain guide.

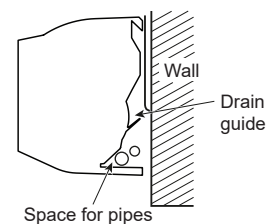


Fig. 10-3-18

10-4. Outdoor Unit

10-4-1. Installation place

- A place which provides the spaces around the outdoor unit as shown in the diagram.
- A place which can bear the weight of the outdoor unit and does not allow an increase in noise level and vibration.
- A place where the operation noise and discharged air do not disturb your neighbors.
- A place which is not exposed to a strong wind.
- A place free of a leakage of combustible gases.
- A place which does not block a passage.
- When the outdoor unit is to be installed in an elevated position, be sure to secure its feet.
- The allowable length of the connecting pipe.

Model	05k	07k	10k	13k	16k	18k	24k
Chargeless	Up to 10 m	Up to 10 m	Up to 10 m	Up to 10 m	Up to 10 m	Up to 10 m	Up to 10 m
Maximum length	10 m	10 m	10 m	10 m	15 m	15 m	15 m
Additional refrigerant charging	-	-	-	-	10 - 15 m (20 g / 1 m)	10 - 15 m (20 g / 1 m)	10 - 15 m (20 g / 1 m)
Maximum refrigerant charging	0.46 kg	0.46 kg	0.51 kg	0.58 kg	0.78 kg	1.03 kg	1.33 kg

- The allowable height of outdoor unit installation site.

Model	05k	07k	10k	13k	16k	18k	24k
Maximum height	8 m	8 m	8 m	8 m	8 m	8 m	8 m

- A place where the drain water does not raise any problems or with good drainage.
- A place where it can be installed horizontally.

Precautions for adding refrigerant

Use a scale having a precision with at least 10 g per index line when adding the refrigerant.
Do not use a bathroom scale or similar instrument.

CAUTION

When the outdoor unit is installed in a place where the drain water might cause any problems, Seal the water leakage point tightly using a silicone adhesive or caulking compound.

10-4-2. Precautions about installation in Regions with Snowfall and Cold Temperatures

- Drain the water from all the drain holes directly.
- To protect the outdoor unit from snow accumulation, install a holding frame, and attach a snow protection hood and plate.

* Do not use a double-stacked design.

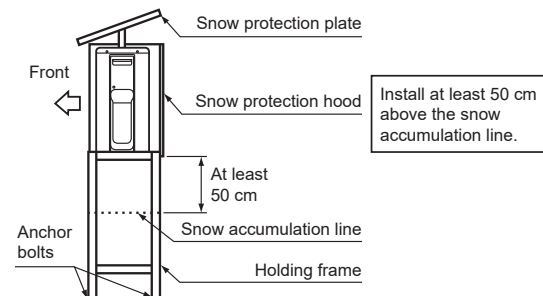


Fig. 10-4-1

CAUTION

1. Install the outdoor unit without anything blocking the air discharging.
2. When the outdoor unit is installed in a place exposed always exposed to strong wind like a coast or on a high storey of a building, secure the normal fan operation using a duct or a wind shield.
3. In particularly windy areas, install the unit such as to avoid admission of wind.
4. Installation in the following places may result in trouble.
Do not install the unit in such places.
 - A place full of machine oil.
 - A saline-place such as the coast.
 - A place full of sulfide gas.
 - A place where high-frequency waves are likely to be generated as from audio equipment, welders, and medical equipment.

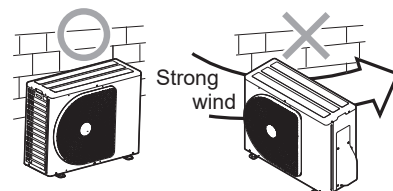


Fig. 10-4-2

Draining the Water

- Holes are provided on the base plate of the outdoor unit to ensure that the defrost water produced during heating operations is drained off efficiently.
- If a centralized drain is required when installing the unit on a balcony or wall, follow the steps below to drain off the water.


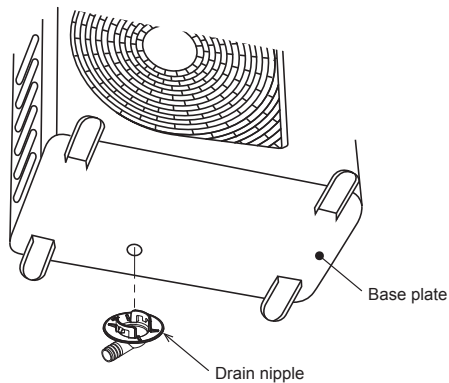


Fig. 10-4-3

- Install the drain nipple and a commercially available drain hose (16 mm inside diameter), and drain off the water. (For the position where the drain nipple is installed, refer to the installation diagram of the indoor and outdoor units.)
- Check that the outdoor unit is horizontal, and route the drain hose at a downward sloped angle while ensuring that it is connected tautly.

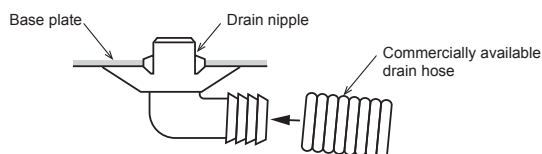

CAUTION

- Do not use ordinary garden hose, but one can flatten and prevent water from draining.

10-4-3. Refrigerant piping connection

<Flaring>

- Cut the pipe with a pipe cutter.

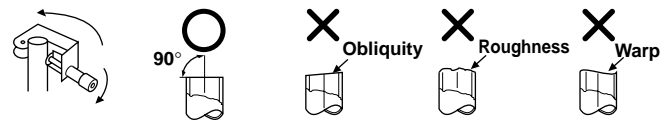


Fig. 10-4-4

- Insert a flare nut into the pipe, and flare the pipe.
 - Projection margin in flaring : A (Unit : mm)

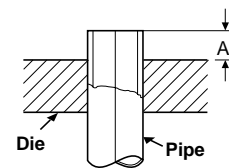


Fig. 10-4-5

RIDGID (clutch type)

Outer dia. of copper pipe	Tool used	Conventional tool used
Ø6.35	0 to 0.5	1.0 to 1.5
Ø9.52	0 to 0.5	1.0 to 1.5
Ø12.70	0 to 0.5	1.0 to 1.5
Pipes thickness	0.8 mm or more	

IMPERIAL (wing nut type)

Outer dia. of copper pipe	Tool used
Ø6.35	1.5 to 2.0
Ø9.52	1.5 to 2.0
Ø12.70	2.0 to 2.5
Pipes thickness	0.8 mm or more

CAUTION

- Do not scratch the inner surface of the flared part when removing burrs.
- Flare processing under the condition of scratches on the inner surface of flare processing part will cause refrigerant gas leak.

<Tightening connection>

Align the centers of the connecting pipes and tighten the flare nut as far as possible with your fingers. Then tighten the nut with a spanner and torque wrench as shown in the figure.

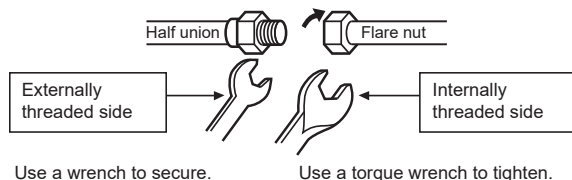


Fig. 10-4-6

CAUTION

- Do not apply excess torque. Otherwise, the nut may crack depending on the conditions.

Outer dia. of copper pipe	Tightening torque (N·m)
Ø6.35 mm	14 to 18 (1.4 to 1.8 kgf·m)
Ø9.52 mm	30 to 42 (3.0 to 4.2 kgf·m)
Ø12.70 mm	50 to 62 (5.0 to 6.2 kgf·m)

Tightening torque of flare pipe connections

The operating pressure of R32 is higher than that of R22 (approx. 1.6 times). It is therefore necessary to firmly tighten the flare pipe connecting sections (which connect the indoor and outdoor units) up to the specified tightening torque. Incorrect connections may cause not only a gas leakage, but also damage to the refrigeration cycle.

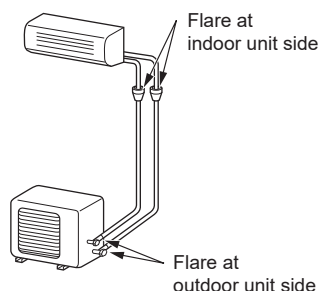


Fig. 10-4-7

Evacuating

After the piping has been connected to the indoor unit, you can perform the air purge together at once.

AIR PURGE

Evacuate the air in the connecting pipes and in the indoor unit using a vacuum pump. Do not use the refrigerant in the outdoor unit. For details, see the manual of the vacuum pump.

<Using a vacuum pump>

Be sure to use a vacuum pump with counter-flow prevention function so that inside oil of the pump does not flow backward into pipes of the air conditioner when the pump stops. (If oil inside of the vacuum pump enters into the air conditioner, which use R32, refrigeration cycle trouble may result.)

1. Connect the charge hose from the manifold valve to the service port of the gas side packed valve.
2. Connect the charge hose to the port of the vacuum pump.
3. Open fully the low pressure side handle of the gauge manifold valve.
4. Operate the vacuum pump to start evacuating. Perform evacuating for about 15 minutes if the piping length is 20 meters. (15 minutes for 20 meters) (assuming a pump capacity of 27 liters per minute. Then confirm that the compound pressure gauge reading is -101 kPa (76 cmHg).
5. Close the low pressure side valve handle of gauge manifold.
6. Open fully the valve stem of the packed valves (both side of Gas and Liquid).
7. Remove the charging hose from the service port.
8. Securely tighten the caps on the packed valves.

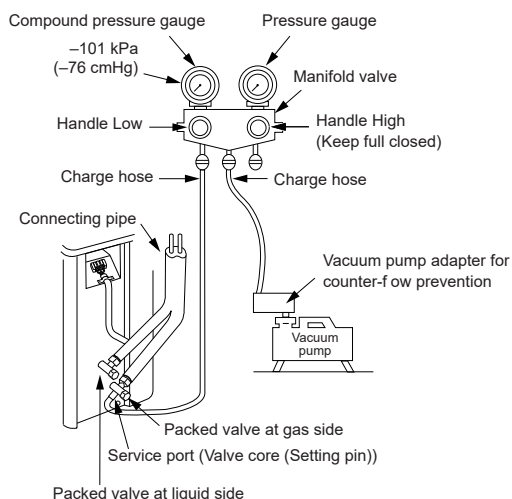


Fig. 10-4-8

CAUTION

• KEEP IMPORTANT 7 POINTS FOR PIPING WORK

- (1) Take away dust and moisture (inside of the connecting pipes).
- (2) Tighten the connections (between pipes and unit).
- (3) Evacuate the air in the connecting pipes using a VACUUM PUMP.
- (4) Check gas leak (connected points).
- (5) Be sure to fully open the packed valves before operation.
- (6) Reusable mechanical connectors and flared joints are not allowed indoors. When mechanical connectors are reused indoors, sealing parts shall be renewed. When flared joints are reused indoors, the flare part shall be refabricated.
- (7) Don't operate air conditioner in case no refrigerant in the system.

- Securely tighten the valve cap with torque in the following table

Cap	Cap Size (H)	Torque
Valve Rod Cap	H17 - H19	14~18 N.m (1.4 to 1.8 kgf·m)
	H22 - H30	33~42 N.m (3.3 to 4.2 kgf·m)
Service Port Cap	H14	8~12 N.m (0.8 to 1.2 kgf·m)
	H17	14~18 N.m (1.4 to 1.8 kgf·m)

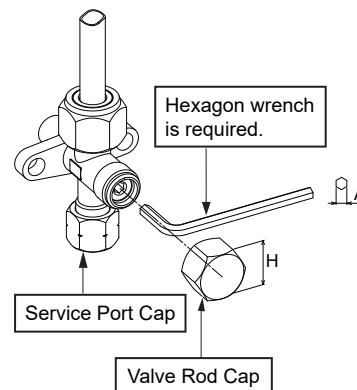


Fig. 10-4-9

<Packed valve handling precautions>

- Open the valve stem all the way out, but do not try to open it beyond the stopper.

Pipe size of Packed Valve	Size of Hexagon wrench
12.70 mm and smaller	A = 4 mm
15.88 mm	A = 5 mm

<Pump down process>

1. Turn off the Air Conditioner system.
2. Connect the charge hose from the manifold valve to the service port of the packed valve at gas side.
3. Turn on the Air Conditioner system in cooling operation more than 10 minutes.
4. Check the operating pressure of the system should be normal value. (Ref. with product specification)
5. Release the valve rod cap of both service valves.
6. Use the Hexagon wrench to turning the valve rod of Liquid side fully close.
(*Make sure no entering air into the system)
7. Continue operate Air Conditioner system until the gauge of manifold dropped into the range of 0.5 - 0 kgf/cm²
8. Use the Hexagon wrench to turning the valve rod of Gas side fully close. And turn off the Air Conditioner system immediately thereafter.
9. Remove the gauge manifold from the service port of the packed valve.
10. Securely tighten the valve rod cap to the both service valves.

CAUTION

Should be check the compressor operating condition while pumping down process. It must not any abnormal sound, more vibration. If abnormal condition appears and must turn off the Air Conditioner immediately.

10-5. Electrical works

Model	05k	07k	10k	13k	16k	18k	24k
Power source	50Hz, 220 – 240V / 60Hz, 220 – 230V Single phase						
Maximum running current	6.20A	6.20A	7.50A	7.50A	9.30A	9.30A	12.0A
Circuit breaker rating	10A	10A	10A	10A	16A	16A	16A
Power supply cable	H07RN-F or 60245 IEC66 (1.0 mm ² or more)						H07RN-F or 60245 IEC66 (1.5 mm ² or more)
Connecting cable	H07RN-F or 60245 IEC66 (1.0 mm ² or more)						H07RN-F or 60245 IEC66 (1.5 mm ² or more)

10-5-1. Wiring Connection

<Indoor unit>

Wiring of the connecting cable can be carried out without removing the front panel.

1. Remove the air inlet grille.
Open the air inlet grille upward and pull it toward you.
2. Remove the terminal cover and cord clamp.
3. Insert the connecting cable (according to the local cords) into the pipe hole on the wall.
4. Take out the connecting cable through the cable slot on the rear panel so that it protrudes about 20 cm from the front.
5. Insert the connecting cable fully into the terminal block and secure it tightly with screws.
6. Tightening torque : 1.2 N·m (0.12 kgf·m)
7. Secure the connecting cable with the cord clamp.
8. Fix the terminal cover and air inlet grille on the indoor unit.

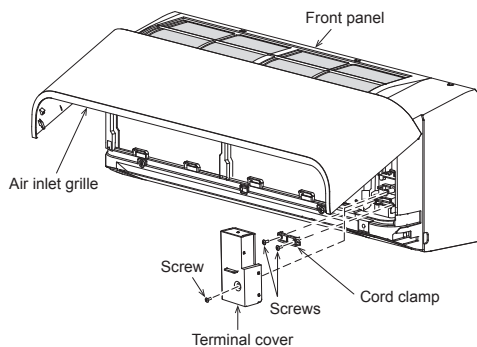


Fig. 10-5-1

<Outdoor unit>

1. Remove the valve cover, the electric parts cover and the cord clamp from the outdoor unit.
2. Connect the connecting cable to the terminal as identified by the matching numbers on the terminal block of indoor and outdoor unit.
3. Insert the power cord and the connecting cable carefully into the terminal block and secure it tightly with screws.
4. Use vinyl tape, etc. to insulate the cords which are not going to be used. Locate them so that they do not touch any electrical or metal parts.
5. Secure the power cord and the connecting cable with the cord clamp.
6. Attach the electric parts cover and the valve cover on the outdoor unit.

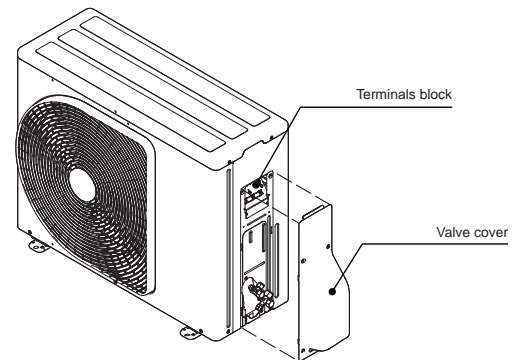


Fig. 10-5-3

<How to install the air inlet grille on the indoor unit>

- When attaching the air inlet grille, the contrary of the removed operation is performed.


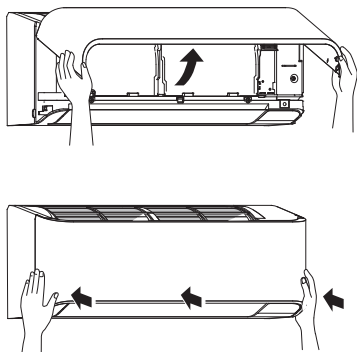



Fig. 10-5-2

10-5-2. Power Supply and Connecting Cable Connection

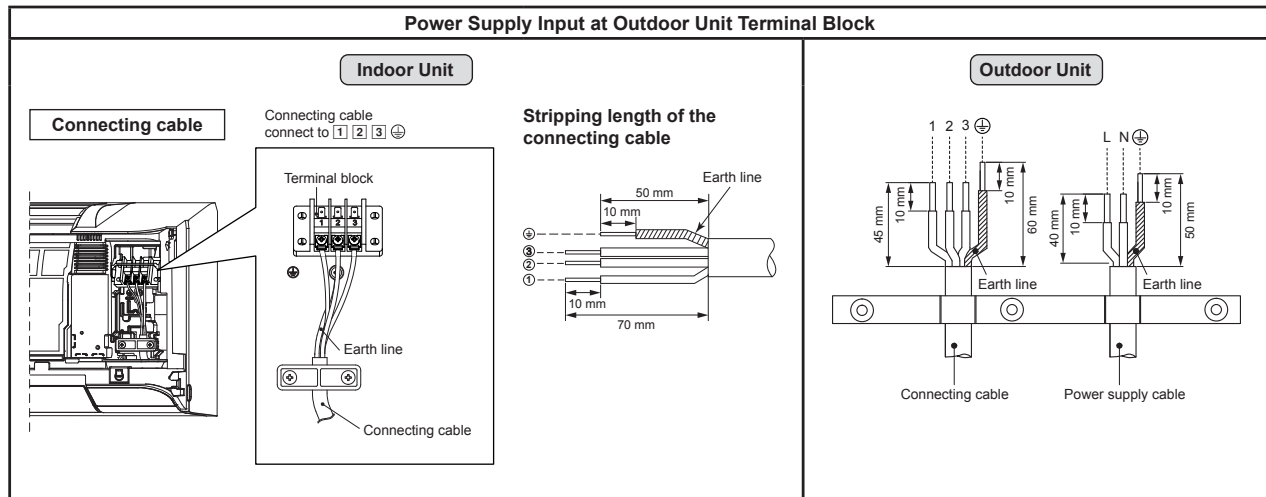

Power supply input Wiring Diagram

Power supply input at Outdoor Terminal Block

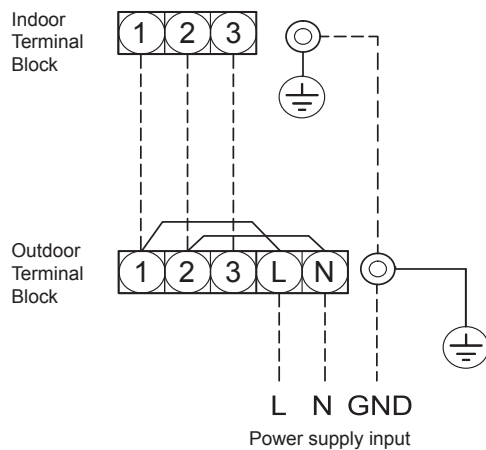

CAUTION

1. The power supply must be same as the rated of air conditioner.
 2. Prepare the power source for exclusive use with air conditioner.
 3. Circuit breaker must be used for the power supply line of this air conditioner.
 4. Be sure to comply power supply and connecting cable for size and wiring method.
 5. Every wire must be connected firmly.
 6. Perform wiring works so as to allow a general wiring capacity.
 7. Wrong wiring connection may cause some electrical part burn out.
 8. Incorrect or incomplete wiring is carried out, it will cause an ignition or smoke.
 9. This product can be connected to main power supply.
- Connection to fixed wiring : A switch which disconnects all poles and has a contact separation at least 3mm must be incorporated in the fixed wiring.

10-6. Others

10-6-1. Gas leak test

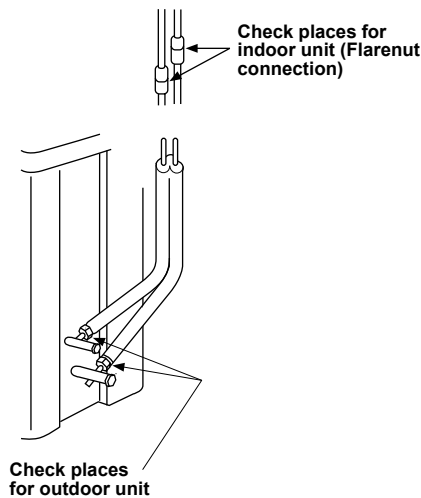


Fig. 10-6-1

- Check the flare nut connections for the gas leak with a gas leak detector or soap water.

10-6-2. Remote Controller A-B Selection

- When two indoor units are installed in the same room or adjacent two rooms, if operating a unit, two units may receive the remote controller signal simultaneously and operate. In this case, the operation can be preserved by setting either one remote controller to B setting. (Both are set to A setting in factory shipment.)
- The remote controller signal is not received when the settings of indoor unit and remote controller are different.
- There is no relation between A setting/B setting and A room/B room when connecting the piping and cables.

To separate using of remote controller for each indoor unit in case of 2 air conditioner are installed near.

Remote Controller B Setup.

1. Press [RESET] button on the indoor unit to turn the air conditioner ON.
2. Point the remote controller at the indoor unit.
3. Push and hold [CHECK] button on the Remote Controller by the tip of the pencil. "00" will be shown on the display (Picture ①).
4. Press [MODE] during pushing [CHECK]. "B" will show on the display and "00" will disappear and the air conditioner will turn OFF. The Remote Controller B is memorized (Picture ②).

- Note :
1. Repeat previous step to reset Remote Controller to be A.
 2. Remote Controller A have not "A" display.
 3. Default setting of Remote Controller from factory is A.

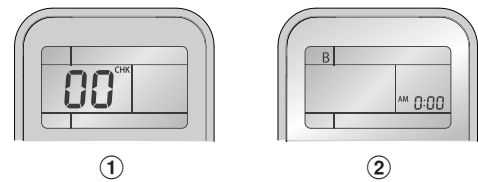


Fig. 10-6-2

10-6-3. Test operation

To switch the TEST RUN (COOL) mode, press [RESET] button for 10 sec. (The beeper will make a short beep.)

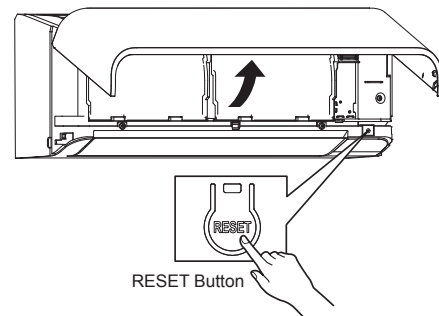


Fig. 10-6-3

10-6-4. Auto Restart Function Setting

This product is designed so that, after a power failure, it can restart automatically in the same operating mode as before the power failure.

Information

The product is shipped with Auto Restart function in the ON position. Turn it OFF if this function is not required.

<How to turn OFF the Auto Restart Function>

- Press and hold the [OPERATION] button on the indoor unit for 3 seconds (3 beep sounds but OPERATION lamp does not blink).

<How to turn ON the Auto Restart Function>

- Press and hold the [OPERATION] button on the indoor unit for 3 seconds (3 beep sounds and OPERATION lamp blink 5 time/sec for 5 seconds).

NOTE

- In case of ON timer or OFF timer are set, AUTO RESTART OPERATION does not activate.

11. HOW TO DIAGNOSE THE TROUBLE

The pulse motor circuits are mounted to both indoor and outdoor units. Therefore, diagnose troubles according to the trouble diagnosis procedure as described below. (Refer to the check points in servicing written on the wiring diagrams attached to the indoor/outdoor units.)

Table 11-1

No.	Troubleshooting Procedure
1	First Confirmation
2	Primary Judgment
3	Judgment by Flashing LED of Indoor Unit
4	Self-Diagnosis by Remote Controller
5	Judgment of Trouble by Every Symptom

No.	Troubleshooting Procedure
6	How to Check Simply the Main Parts
7	Troubleshooting
8	How to Diagnose Trouble in Outdoor Unit
9	How to Check Simply the Main Parts
10	How to Simply Judge Whether Outdoor Fan Motor is Good or Bad

◆ Precautions when handling the new inverter



CAUTION: HIGH VOLTAGE

The high voltage circuit is incorporated.

Be careful to do the check service, as the electric shock may be caused in case of touching parts on the P.C. board by hand.

The new inverter will be incorporated starting with this unit.

◆ The control circuitry has an uninsulated construction.

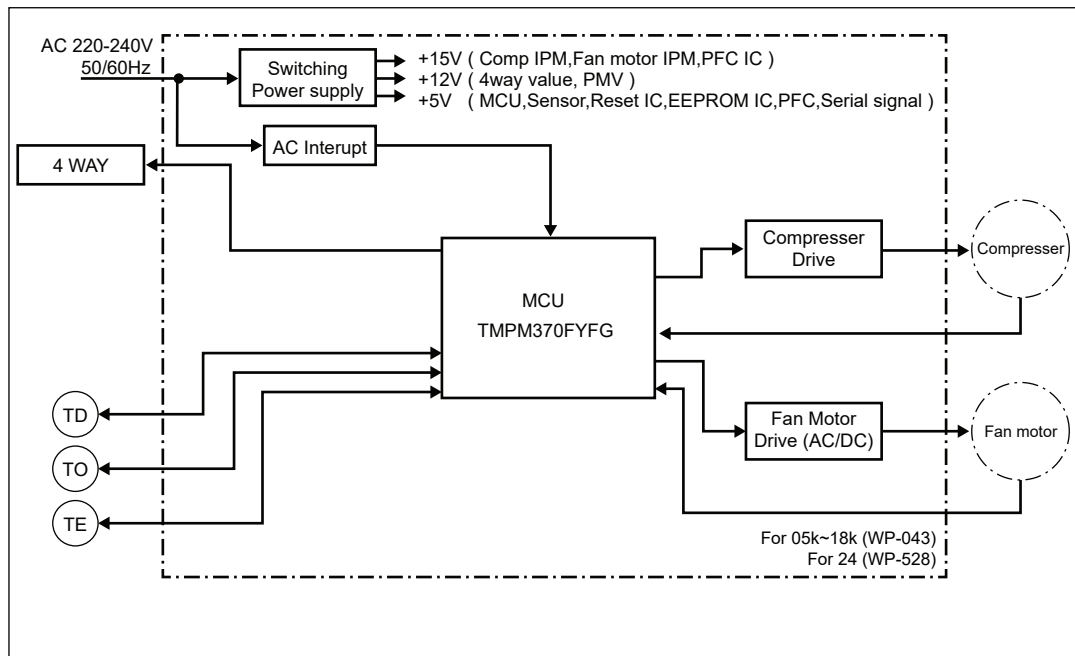


Fig. 11-1

⚠ CAUTION

A high voltage (equivalent to the supply voltage) is also energized to ground through the sensors, PMV and other low-voltage circuits. The sensor leads and other wires are covered with insulated tubes for protection. Nevertheless, care must be taken to ensure that these wires are not pinched.

Take sufficient care to avoid directly touching any of the circuit parts without first turning off the power.

At times such as when the circuit board is to be replaced, place the circuit board assembly in a vertical position.

Laying the board flat on an electrically conductive object (such as the top panel of the air conditioner's outdoor unit) while a charge is still retained by the electrolytic capacitors of the inverter's main circuit may cause short-circuiting between the electrolytic capacitors and secondary circuit components and result in damage to the components.

(For 05k, 07k, 10k, 13k, 16k, 18k)



(For 24k)

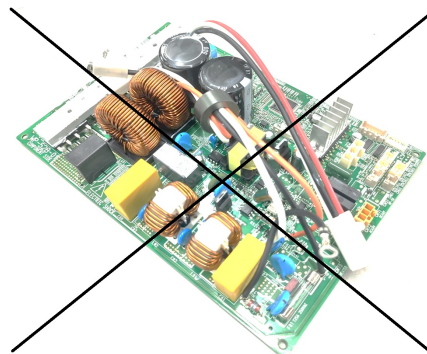


Fig. 11-2

Do NOT lay the circuit board assembly flat.

◆ Precautions when inspecting the control section of the outdoor unit

NOTE :

A large-capacity electrolytic capacitor is used in the outdoor unit controller (inverter). Therefore, if the power supply is turned off, charge (charging voltage DC280 to 380V) remains and discharging takes a lot of time. After turning off the power source, if touching the charging section before discharging, an electrical shock may be caused. Discharge the electrolytic capacitor completely by using soldering iron, etc.

< Discharging method > (For 05k~18k)

1. Remove the inverter cover (plating) by opening four mounting claws.
2. As shown below, connect the discharge resistance (approx. 100Ω240W) or plug of the soldering iron to voltage between + – terminals of the C07 ("WARNING ELECTRIC SHOCK" is indicated.) electrolytic capacitor (500μF/400V For 05k-13k), (760μF/400V For 16k-18k) on P.C. board, and then perform discharging.

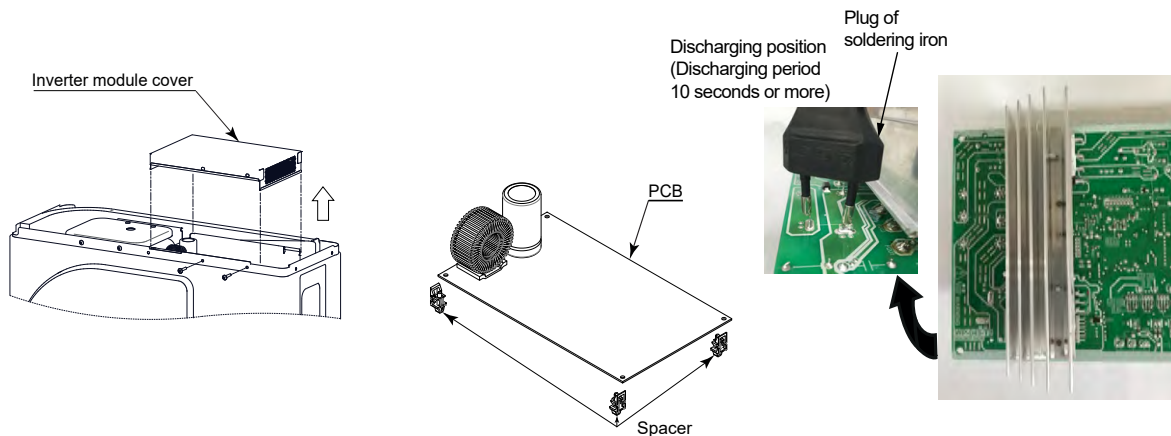


Fig. 11-3

< Discharging method > (For 24k)

1. Remove the inverter cover (plating) by opening four mounting claws.
2. As shown below, connect the discharge resistance (approx. 100Ω 240W) or plug of the soldering iron to voltage between + – terminals of the C10, C11 ("WARNING ELECTRIC SHOCK" is indicated.) electrolytic capacitor (500 μ F/450V) on P.C. board, and then perform discharging.

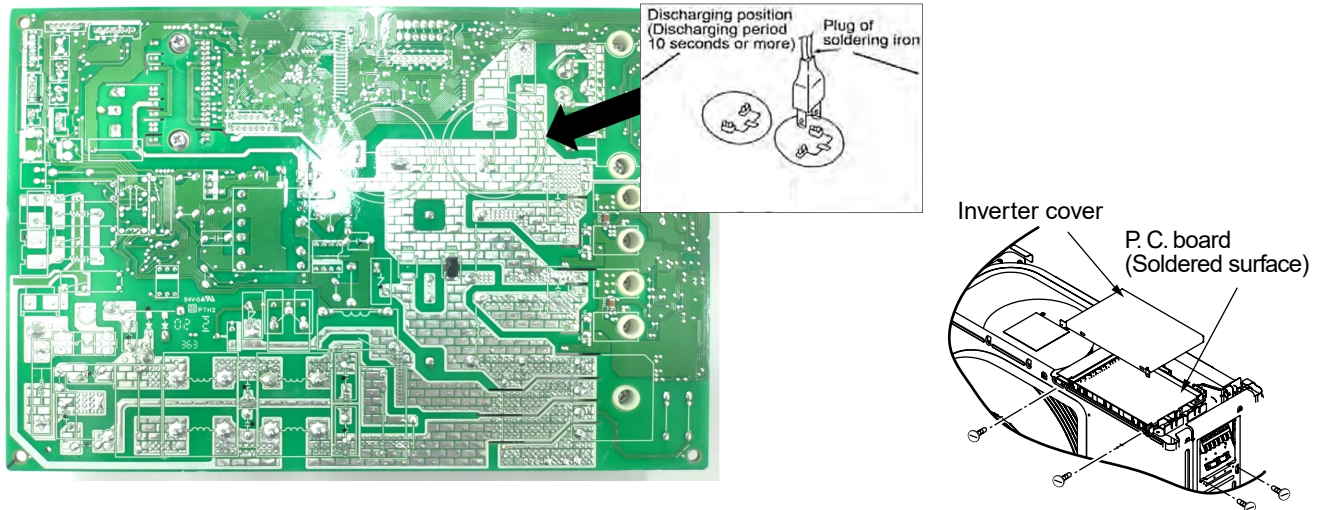


Fig. 11-3

⚠ CAUTION

A high voltage (equivalent to the supply voltage) is also energized to ground through the sensors, PMV and other low-voltage circuits. The sensor leads and other wires are covered with insulated tubes for protection. Nevertheless, care must be taken to ensure that these wires are not pinched.

Take sufficient care to avoid directly touching any of the circuit parts without first turning off the power.

At times such as when the circuit board is to be replaced, place the circuit board assembly in a vertical position.

Laying the board flat on an electrically conductive object (such as the top panel of the air conditioner's outdoor unit) while a charge is still retained by the electrolytic capacitors of the inverter's main circuit may cause short-circuiting between the electrolytic capacitors and secondary circuit components and result in damage to the components.

11-1. First Confirmation

11-1-1. Confirmation of Power Supply

Confirm that the power breaker operates (ON) normally.

11-1-2. Confirmation of Power Voltage

Confirm that power voltage is AC 220–230–240 ± 10%.

If power voltage is not in this range, the unit may not operate normally.

11-1-3. Operation Which is not a Trouble (Program Operation)

For controlling the air conditioner, the program operations are built in the microcomputer as described in the following table.

If a claim is made for running operation, check whether or not it meets to the contents in the following table.

When it does, we inform you that it is not trouble of equipment, but it is indispensable for controlling and maintaining of air conditioner.

Table 11-1-1

No.	Operation of air conditioner	Description
1	When power breaker is turned "ON", the operation indicator (White) of the indoor unit flashes.	The OPERATION lamp of the indoor unit flashes when power source is turned on. If [⏻] button is operated once, flashing stops. (Flashes also in power failure)
2	Compressor may not operate even if the room temperature is within range of compressor-ON.	The compressor does not operate while compressor restart delay timer (3-minutes timer) operates. The same phenomenon is found after power source has been turned on because 3-minutes timer operates.
3	In Dry and ECO mode, FAN (air flow) display does not change even though FAN (air flow select) button is operated.	The air flow indication is fixed to [AUTO].
4	Increasing of compressor motor speed stops approx. 30 seconds after operation started, and then compressor motor speed increases again approx. 30 seconds after.	For smooth operation of the compressor, the compressor motor speed is restricted to Max. 41 rps for 2 minutes, and Max.91 rps for 2 minutes to 3 minutes, respectively after the operation has started.
5	In AUTO mode, the operation mode is changed.	After selecting Cool or Heat mode, select an operation mode again if the compressor keeps stop status for 15 minutes.
6	In HEAT mode, the compressor motor speed does not increase up to the maximum speed or decreases before the temperature arrives at the set temperature.	The compressor motor speed may decrease by high-temp. release control (Release protective operation by temp.-up of the indoor heat exchanger) or current release control.

11-2. Primary Judgment

To diagnose the troubles, use the following methods.

- 1) Judgment by flashing LED of indoor unit
- 2) Self-diagnosis by service check remote controller
- 3) Judgment of trouble by every symptom

Firstly use the method 1) for diagnosis. Then, use the method 2) or 3) to diagnose the details of troubles.

11-3. Judgment by Flashing LED of Indoor Unit

While the indoor unit monitors the operation status of the air conditioner, if the protective circuit operates, the contents of self-diagnosis are displayed with block on the indoor unit indication section.

Table 11-3-1

<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">Indoor indication lamp flashes.</div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">Which lamp does flash?</div> <div style="border: 1px solid black; padding: 5px;"> <div style="display: flex; align-items: center;"> <div style="width: 20px; height: 20px; background-color: black; margin-right: 5px;"></div> <div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 2px;">A</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 2px;">B</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 2px;">C</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 2px;">D</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 2px;">E</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 2px;">F</div> </div> </div> </div>	Item	Check code	Block display		Description for self-diagnosis
	A	—	OPERATION Flashing display (1 Hz)		Power failure (when power is ON)
	B	00	OPERATION Flashing display (5 Hz)		Protective circuit operation for indoor P.C. board
	C	01	OPERATION TIMER (White) Flashing display (5 Hz)		Protective circuit operation for connecting cable and serial signal system
	D	02	OPERATION Flashing display (5 Hz)		Protective circuit operation for outdoor P.C. board
	E	03	OPERATION TIMER Flashing display (5 Hz)		Protective circuit operation for others (including compressor)
	F	33	OPERATION Normal Flash 1 Hz Flash 2 Hz 2 times every 1 sec None	TIMER Normal None None Flash 1 Hz	Release status display Nothing Current release TD release TC release

NOTES :

1. The contents of items B and C and a part of item E are displayed when air conditioner operates.
2. When item B and C, and item B and a part of item E occur concurrently, priority is given to the block of item B.
3. The check codes can be confirmed on the remote controller for servicing.

11-4. Self-Diagnosis by Remote Controller (Check Code)

1. If the lamps are indicated as shown B to E in Table 11-3-1, execute the self-diagnosis by the remote controller.
2. When the remote controller is set to the service mode, the indoor controller diagnoses the operation condition and indicates the information of the self-diagnosis on the display of the remote controller with the check codes. If a fault is detected, all lamps on the indoor unit will flash at 5Hz and it will beep for 10 seconds (Beep, Beep, Beep ...). The timer lamp usually flashes (5Hz) during self-diagnosis.

11-4-1. How to Use Remote Controller in Service Mode

1 Press [CHECK] button with a tip of pencil to set the remote controller to the service mode.

- “00” is indicated on the display of the remote controller.

2 Press [ON ▲] or [OFF ▲] button

If there is no fault with a code, the indoor unit will beep once (Beep) and the display of the remote controller will change as follows :

00 → 01 → 02 ... 1d → 1E → 33

- The TIMER indicator of the indoor unit flashes continuously. (5 times per 1 sec.)
- Check the unit with all 52 check codes (00 to 33) as shown in Table-11-4-1.
- Press [ON▼] or [OFF ▼] button to change the check code backward.

If there is a fault, the indoor unit will beep for 10 seconds (Beep, Beep, Beep...).

Note the check code on the display of the remote controller.

- 2-digits alphanumeric will be indicated on the display.
- All indicators on the indoor unit will flash. (5 times per 1 sec.)

3 Press [CLR] button. After service finish for clear service code in memory.

- "7F" is indicated on the display of the remote controller.

4 Press [⏻] button to release the service mode.

- The display of the remote controller returns to as it was before service mode was engaged.

Alphanumeric characters are used for the check codes.

5 is 5.	6 is 6.
A is A.	B is B.
C is C.	D is D.

Fig. 11-4-1

11-4-2. Caution at Servicing










1. After using the service mode of remote controller finished, press the [] button to reset the remote controller to normal function.
2. After finished the diagnosis by the remote controller, turn OFF power supply and turn its ON again to reset the air conditioner to normal operation. However, the check codes are not deleted from memory of the microcomputer.
3. After servicing finished, press [CLR] button of remote controller under service mode status to send code "7F" to the indoor unit. The check code stored in memory is cleared.

 Table 11-4-1

Block distinction		Operation of diagnosis function				Action and Judgment
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	
	Indoor P.C. board.		TA sensor ; The room temperature sensor is short-circuit or disconnection.	Operation continues.	Flashes when error is detected.	1. Check the sensor TA and connection. 2. In case of the sensor and its connection is normal, check the P.C. board.
			TC sensor ; The heat exchanger temperature sensor of the indoor unit is out of place, disconnection, short-circuit or migration.	Operation continues.	Flashes when error is detected.	1. Check the sensor TC and connection. 2. In case of the sensor and its connection is normal, check the P.C. board.
			Gas detector sensor failure	Outdoor Unit "OFF" Indoor Unit continue fan only operation for 250 minute or "OFF".	Flashes when error is detected.	1. Check Gas sensor shortage / open. 2. Check Gas sensor disconnect.
			Fan motor of the indoor unit is failure, lock-rotor, short-circuit, disconnection, etc. Or its circuit on P.C. board has problem.	All OFF	Flashes when error is detected.	1. Check the fan motor and connection. 2. In case of the motor and its connection is normal, check the P.C. board.
			Other trouble on the indoor P.C. board.	Depend on cause of failure.	Depend on cause of failure.	1. Reset power supply. 2. Replace P.C. board.
			• Gas detector sensor life time	Operation continues.	Flashes when error is detected.	Replace new sensor.
			• Smart sensing failure.	Operation continues.	No flashing	1. Check the smart sensing sensor and connection. 2. In case of the sensor and its connection is normal, check the P.C.board.
			Ionizer sensor failure	Operation continues.	No flashing	1. Check the Ionizer sensor and connection. 2. In case of the sensor and its connection is normal, check the P.C.board.

Block distinction		Operation of diagnosis function				Action and Judgment
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	
01	Serial signal and connecting cable.	04	1) Defective wiring of the connecting cable or miss-wiring. 2) Operation signal has not send from the indoor unit when operation start. 3) Outdoor unit has not send return signal to the indoor unit when operation started. 4) Return signal from the outdoor unit is stop during operation. • Some protector (hardware, if exist) of the outdoor unit open circuit of signal. • Signal circuit of indoor P.C. board or outdoor P.C. board is failure in some period.	Indoor unit operates continue. Outdoor unit stop.	Flashes when error is detected. Flashing stop and outdoor unit start to operate when the return signal from the outdoor unit is normal.	1) to 3) The outdoor unit never operate. • Check connecting cable and correct if defective wiring. • Check 15A (For 05k~18k), 25A (For 24k) fuse of inverter P.C. board. • Check 3.15A fuse of inverter P.C. board. • Check operation signal of the indoor unit by using diode. Measure voltage at terminal block of the indoor unit between No.2 and No.3 (or L2 and S) If signal is varied 15-60V continuously, replace inverter P.C. board. If signal is not varied, replace indoor P.C.board 4) The outdoor unit abnormal stop at some time. • If the other check codes are found concurrently, check them together. • Check protector (hardware) such as Hi-Pressure switch, Thermal-Relay, etc. • Check refrigerant amount or any possibility case which may caused high temperature or high pressure. • Check operation signal of the indoor unit by using diode. Measure voltage at terminal block of the indoor unit between No.2 and No.3 (or L2 and S) If signal is varied 15-60V continuously, replace inverter P.C. board. If signal is not varied, replace indoor P.C. board.

Note : Operation signal of the indoor unit shall be measured in the sending period as picture below.

Sending signal of the indoor unit when have not return signal from the outdoor unit.

* Signal send only 1 minute and stop. Because of return signal from outdoor unit has not received.
 ** Signal resend again after 3 minutes stop. And the signal will send continuously.
 *** 1 minute after resending, the indoor unit display flashes error.

Block distinction		Operation of diagnosis function				Action and Judgment
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	
02	Outdoor P.C. board	14	Current on inverter circuit is over limit in short time. <ul style="list-style-type: none"> • Inverter P.C. board is failure, IGBT shortage, etc. • Compressor current is higher than limitation, lock rotor, etc. 	All OFF	Flashes after error is detected 8 times*.	1. Remove connecting lead wire of the compressor, and operate again. 2. If outdoor fan does not operate or operate but stop after some period, replace the inverter P.C. board. 3. If outdoor fan operates normally, measure 3-Phase output of inverter P.C. board (150-270VAC) at the connecting lead wire of compressor. 4. If 3-Phase output is abnormal, replace inverter P.C.Board. 5. If 3-Phase output is normal, replace compressor. (lock rotor, etc.)
		15	Compressor position-detect circuit error or short-circuit between winding of compressor.	All OFF	Flashes after error is detected 8 times*.	1. Remove connecting lead wire of the compressor, and operate again. 2. If outdoor fan does not operate or operation but stop after some period, replace the inverter P.C. board. 3. If outdoor fan operates normally, measure resistance of compressor winding. If circuit is shortage, replace the compressor.
		17	Current-detect circuit of inverter P.C. board error.	All OFF	Flashes after error is detected 4 times*.	Even if trying to operate again, all operations stop, replace inverter P.C. board.
		18	TE or TS sensor; abnormal. Out of place, disconnection, shortage, or misconnection (TE sensor is connected to TS connector, TS sensor is connected to TE sensor connector) TE sensor; Outdoor heat exchanger temperature sensor TS sensor; Suction pipe temperature sensor	All OFF	Flashes after error is detected 4 times*.	1. Check sensors, TE, TS connection. In case of sensors and it's connection is normal, check the inverter P.C. board 2. Check 4way valve operation/position. In case TE, TS detected temperature relationship are different from normal operation, "18" might be detected.
		19	TD sensor ; Discharge pipe temperature sensor is disconnection or shortage.	All OFF	Flashes after error is detected 4 times*.	1. Check sensors TD and connection. 2. In case of the sensor and its connection is normal, check the inverter P.C. board.
		1A	Outdoor fan failure or its drive-circuit on the inverter P.C. board failure.	All OFF	Flashes after error is detected 8 times*.	1. Check the motor, measure winding resistance, shortage or lock rotor. 2. Check the inverter P.C. board.
		1b	TO sensor ; The outdoor temperature sensor is disconnection or shortage.	Operation continues.	Record error after detected 4 times*. But does not flash display.	1. Check sensors TO and connection. 2. In case of the sensor and its connection is normal, check the inverter P.C. board.

Block distinction		Operation of diagnosis function				Action and Judgment
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	
02	Outdoor P.C. board	11	Compressor drive output error. (Relation of voltage, current and frequency is abnormal) <ul style="list-style-type: none"> Overloading operation of compressor caused by over-charge refrigerant, P.M.V. failure, etc. Compressor failure (High current). 	All OFF	Flashes after error is detected 8 times*.	1. Check installation conditions such as packed valve opening, refrigerant amount and power supply (rate $\pm 10\%$, both of operation and non operation condition). 2. Check P.M.V. by measure the resistance of the coil and confirm its operation (sound of initial operation, etc.) 3. Observe any possibility cause which may affect operation load of compressor. 4. Operate again. If compressor operation is failure when 20 seconds passed (count time from operation starting of compressor), replace compressor.
<p>* 4 or 8 times ; When first error is detected, error is count as 1 time, then once operation is stop and re-started.</p> <p>After re-starting operation within 6 minutes, if same error is detected, error count is add (count become 2 times)</p> <p>When error count comes 4 or 8 times, record error to check code. But after re-starting operation, if no error is detected and air conditioner can operate more than 6 minutes, error count is cleared.</p>						
03	The others (including compressor)	07	Return signal of the outdoor unit has been sent when operation start. But after that, signal is stop some time. <ul style="list-style-type: none"> Instantaneous power failure. Some protector (hardware) of the outdoor unit open circuit of signal. Signal circuit of indoor P.C. board or outdoor P.C. board is failure in some period. 	Indoor unit operates continue. Outdoor unit stop.	Flashes when error is detected. Flashing stop and outdoor unit start to operate when the return signal from the outdoor unit is normal.	1. Check power supply (Rate $\pm 10\%$) 2. If the air conditioner repeat operates and stop with interval of approx. 10 to 40 minutes. <ul style="list-style-type: none"> Check protector (hardware) such as Hi-Pressure switch, Thermal-Relay, etc. Check refrigerant amount, packed valve opening and any possibility cause which may affect high temperature or high pressure. 3. Check operation signal of the indoor unit by using diode. Measure voltage at terminal block of the indoor unit between No.2 and No.3 (or L2 and S) If signal is varied 15-60V continuously, replace inverter P.C. board. If signal is not varied, replace indoor P.C. board.

Block distinction		Operation of diagnosis function				Action and Judgment
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	
03	The others (including compressor)	1d	Compressor does not rotate. Because of missed wiring, missed phase or shortage.	All OFF	Flashes after error is detected 8 times*.	<ol style="list-style-type: none"> 1. Remove connecting lead wire of the compressor, and operate again. 2. If outdoor fan does not operate or operation but stop after some period, replace the inverter P.C. board. 3. If outdoor fan operates normally, measure 3-Phase output of inverter P.C. board (150-270VAC) at the connecting lead wire of compressor. 4. If 3-Phase output is abnormal, replace inverter P.C.Board. 5. If 3-Phase output is normal, measure resistance of compressor winding. 6. If winding is shortage, replace the compressor.
		1E	Discharge temperature exceeded 117°C.	All OFF	Flashes after error is detected 4 times*.	<ol style="list-style-type: none"> 1. Check sensors TD. 2. Check refrigerant amount. 3. Check P.M.V. by measure the resistance of the coil and confirm its operation (sound of initial operation, etc.) 4. Observe any possibility cause which may affect high temperature of compressor.
		1F	Compressor is high current though operation Hz is decreased to minimum limit. <ul style="list-style-type: none"> • Installation problem. • Instantaneous power failure. • Refrigeration cycle problem. • Compressor break down. • Compressor failure (High current).operation, etc.) 	All OFF	Flashes after error is detected 8 times*.	<ol style="list-style-type: none"> 1. Check installation conditions such as packed valve opening, refrigerant amount and power supply (rate $\pm 10\%$, both of operation and non operation condition). 2. Check P.M.V. by measure the resistance of the coil and confirm its operation (sound of initial operation, etc.) 3. Observe any possibility cause which may affect high current of compressor. 4. If 1, 2 and 3 are normal, replace compressor.

Block distinction		Operation of diagnosis function				Action and Judgment
Check code	Block	Check code	Cause of operation	Air conditioner status	Display flashing error	
03	The others (including compressor)	21	<p>Return signal of the outdoor unit has been sent when operation start. But after that, signal is stop some time.</p> <ul style="list-style-type: none"> Instantaneous power failure. Some protector (hardware) of the outdoor unit open circuit of signal. Signal circuit of indoor P.C. board or outdoor P.C. board is failure in some period. TE, TC high temperature TE for cooling operation TC for heating operation. (TE only exists in the Heat Pump system) TE or TS sensor; abnormal. Out of place, disconnection, shortage, or misconnection (TE sensor is connected to TS connector, TS sensor is connected to TE sensor connector) <p>TE sensor; Outdoor heat exchanger temperature sensor TS sensor; Suction pipe temperature sensor</p>	Indoor unit operates continue. Outdoor unit stop.	<p>Flashes when error is detected 11 times*.</p> <p>Flashing stop and outdoor unit start to operate when the return signal from the outdoor unit is normal.</p>	<ol style="list-style-type: none"> 1. Check power supply (Rate $\pm 10\%$) 2. If the air conditioner repeat operate and stop with interval of approx. 10 to 40 minutes. <ul style="list-style-type: none"> (In case of these exist) Check protector (hardware) such as Hi-Pressure switch, Thermal-Relay, etc. Check refrigerant amount, packed valve opening and any possibility cause which may affect high temperature or high pressure. 3. Check operation signal of the indoor unit by using diode. Measure voltage at terminal block of the indoor unit between No.2 and No.3 (or L2 and S) If signal is varied 15-60V continuously, replace inverter P.C. board. If signal is not varied, replace indoor P.C. board. 4. Check and clean heat exchanger area Indoor and Outdoor unit. 5. Check sensors, TE, TS connection. In case of sensors and it's connection is normal, check the inverter P.C. board. 6. Check 4way valve operation/position. In case TE, TS detected temperature relationship are different from normal operation, "21" might be detected.

* 4, 8 or 11 times ; When first error is detected, error is count as 1 time, then once operation is stop and re-started.

After re-starting operation within 6 minutes, if same error is detected, error count is add (count become 2 times) When error count comes 4, 8, 11 or 18 times, record error to check code. But after re-starting operation, if no error is detected and air conditioner can operate more than 6 minutes, error count is cleared.

11-5. Judgment of Trouble by Every Symptom


11-5-1. Indoor Unit (Including Remote Controller)

(1) Power is not turned on (Does not operate entirely)

<Primary check>


1. Is the supply voltage normal?
2. Is the normal voltage provided to the outdoor unit?
3. Is the crossover cable connected properly?
4. Is the fuse (F01) blown?

(For 05k~13k)

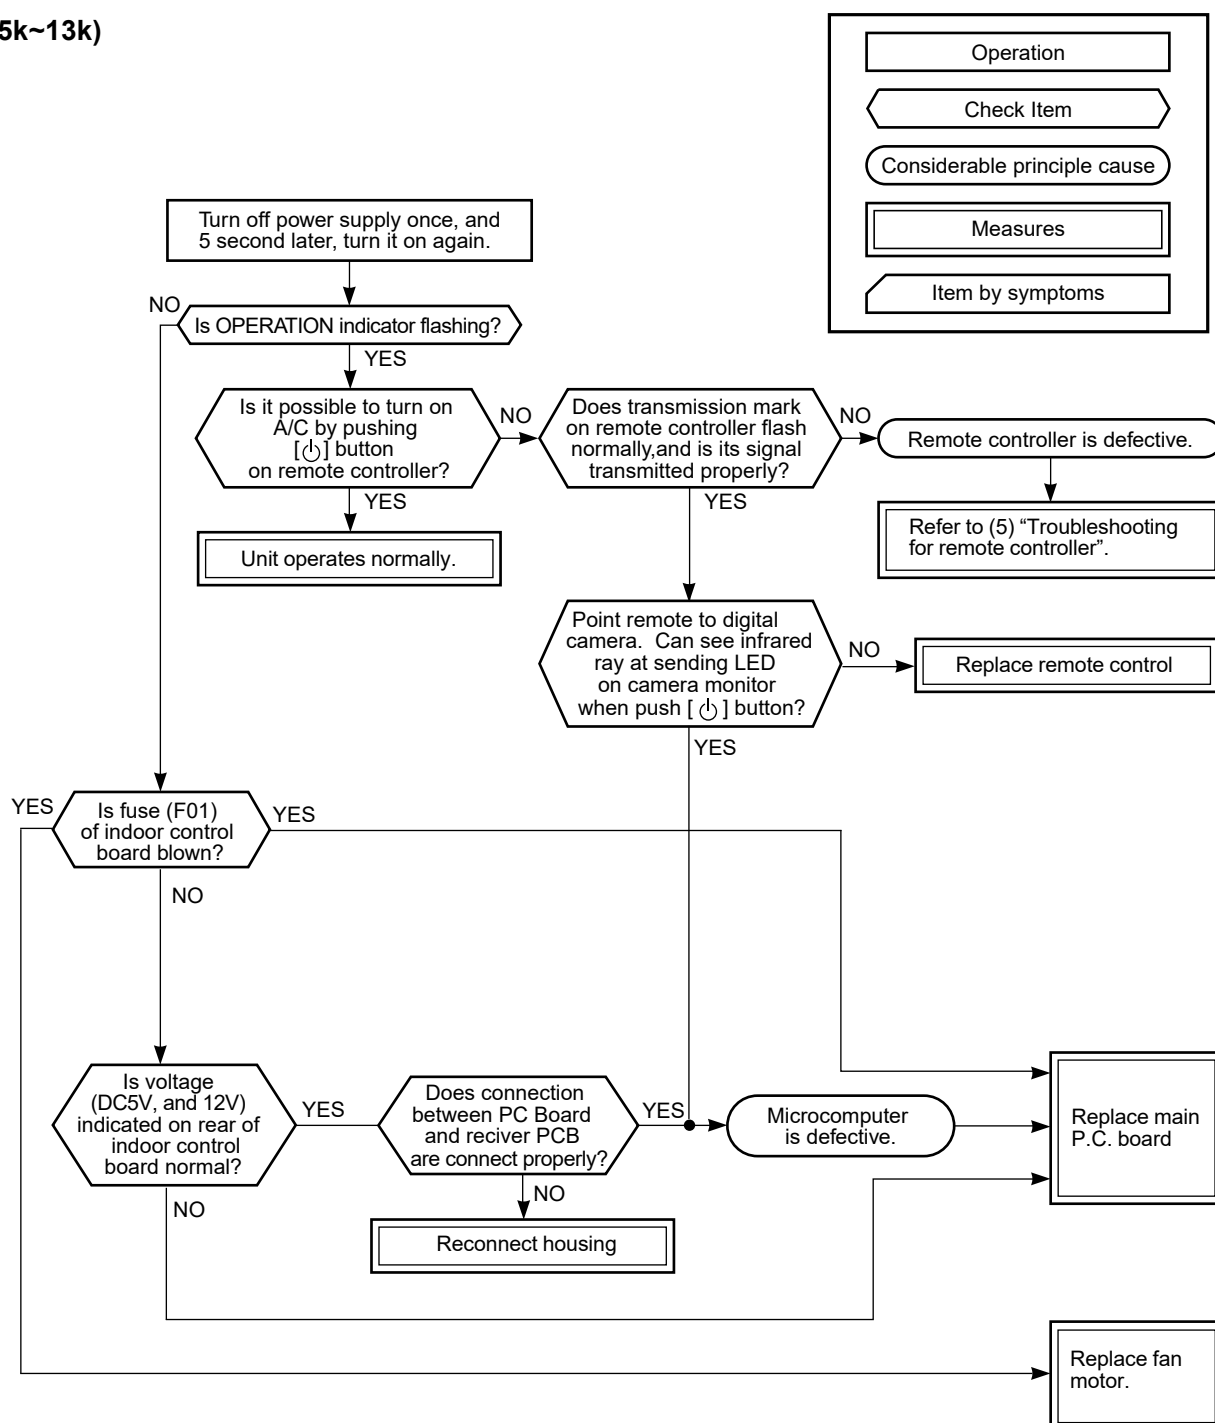

- Be sure to disconnect the motor connector CN31 after shut off the power supply, or it will be a cause of damage of the motor.


(For 16k~24k)

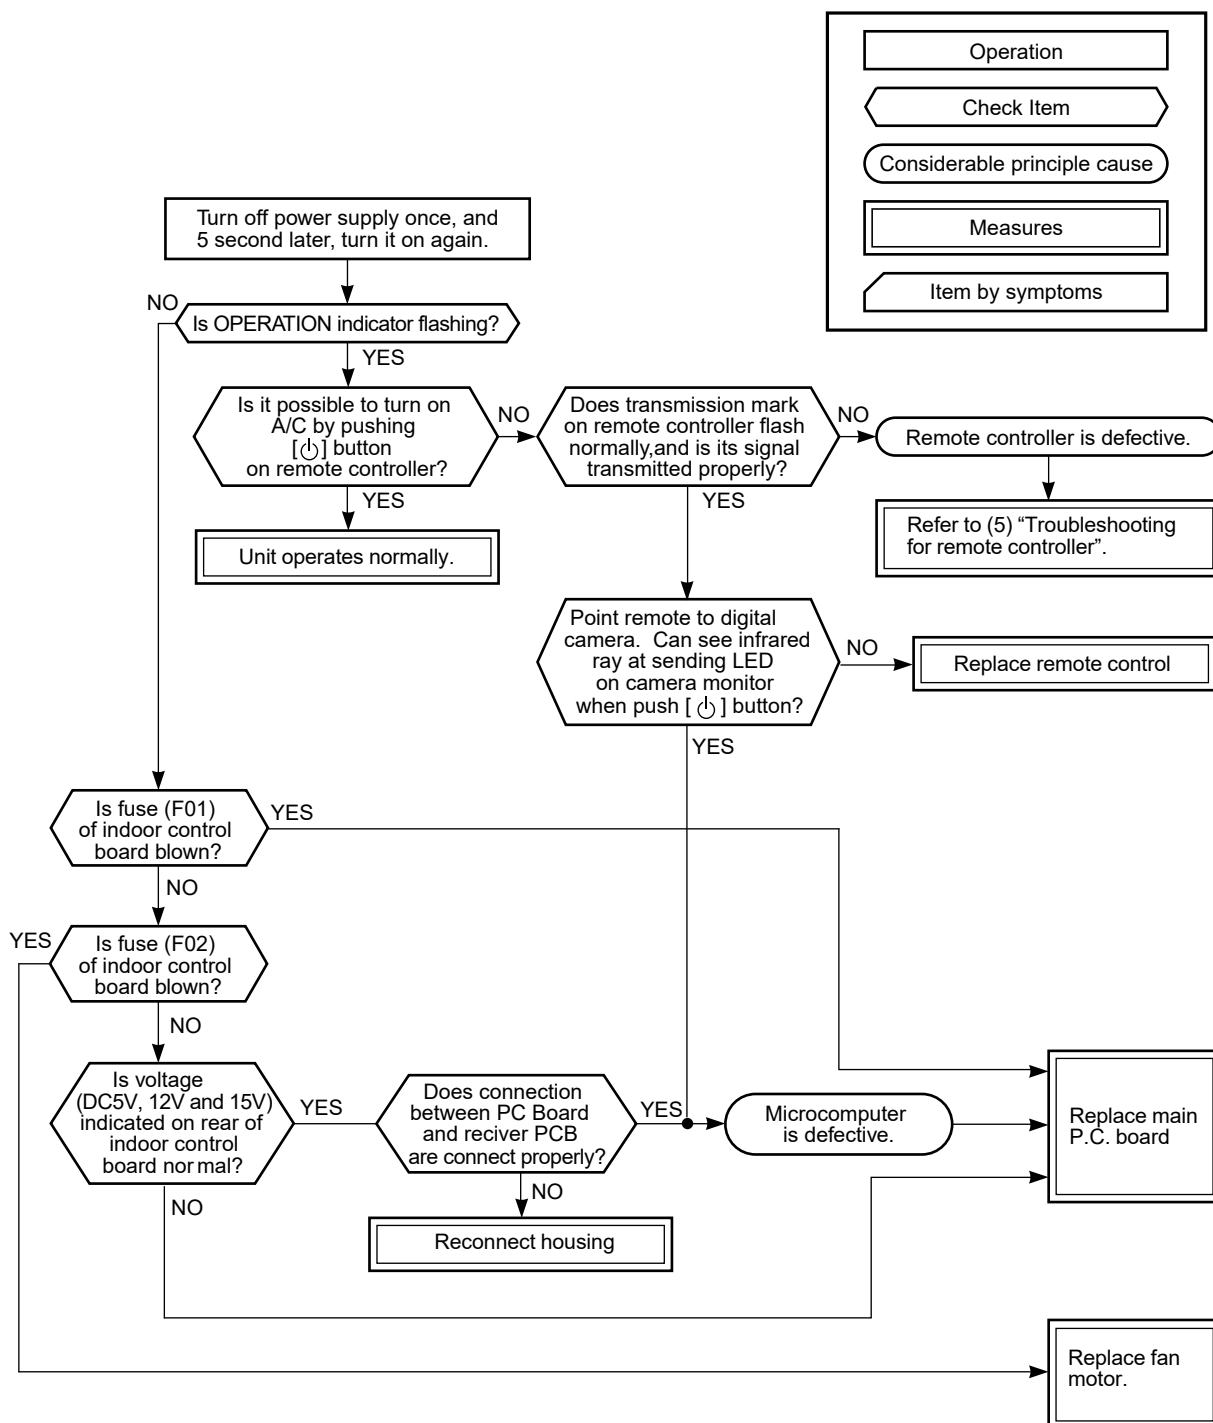

- Be sure to disconnect the motor connector CN36 after shut off the power supply, or it will be a cause of damage of the motor.

Operation is not turned on though Indoor P.C. board is replaced

<Confirmation procedure>

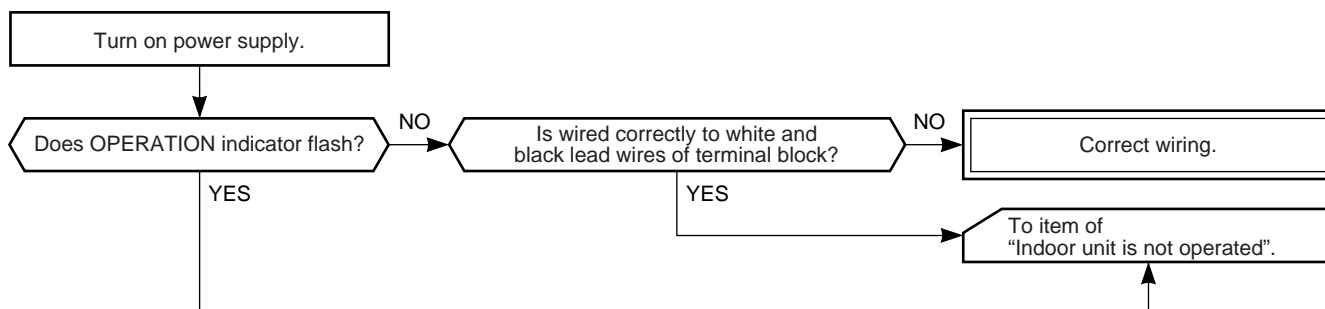


(2) Only the indoor motor fan does not operate

<Primary check>


(For 05k~13k)


1. Is it possible to detect the power supply voltage (AC220~240V) between ① and ② on the terminal block?
2. Does the indoor fan motor operate in cooling operation?
(In heating operation, the indoor fan motor does not operate for approximately 10 minutes after it is turned on, to prevent a cold air from blowing in.)

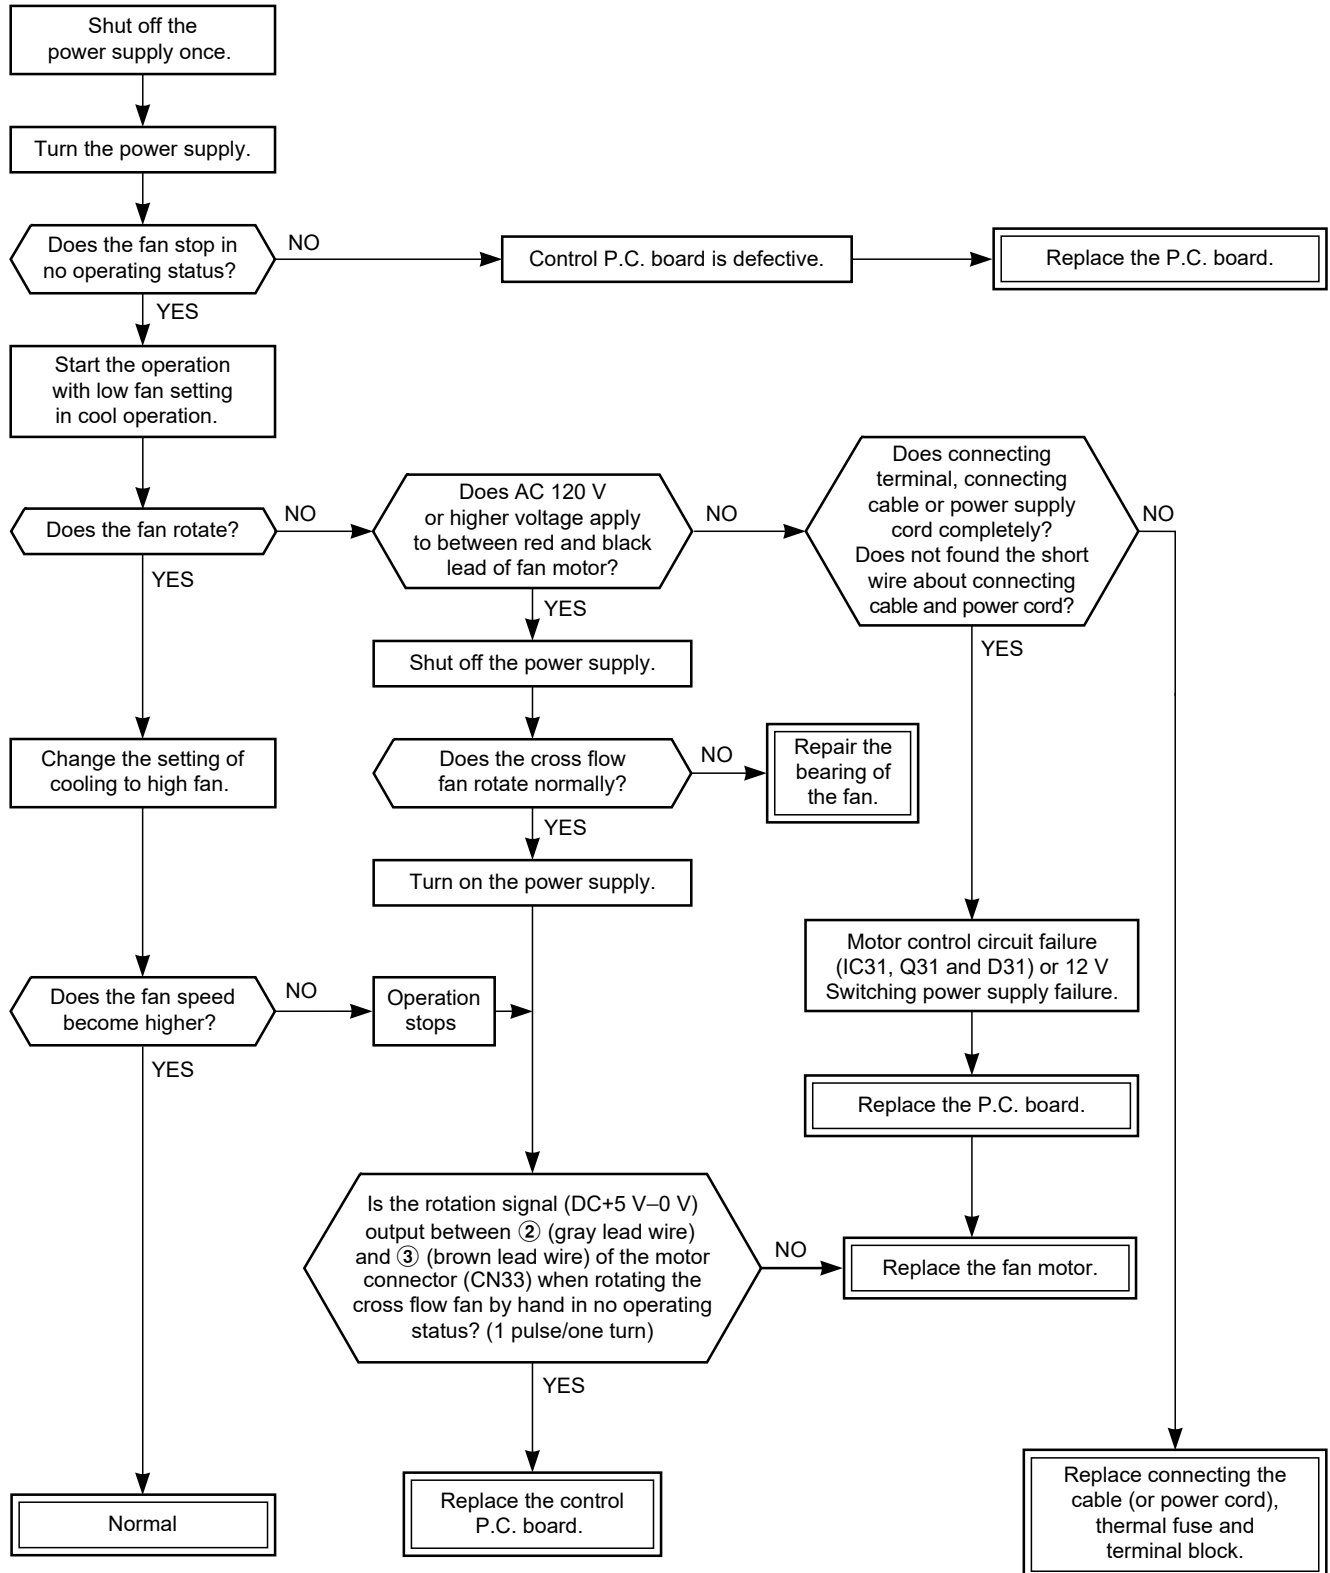

(For 16k~24k)

1. Is it possible to detect the power supply voltage (AC220~240V) between ① and ② on the terminal block?
2. Does the indoor fan motor operate in cooling operation?
(In heating operation, the indoor fan motor does not operate for approximately 10 minutes after it is turned on, to prevent a cold air from blowing in.)

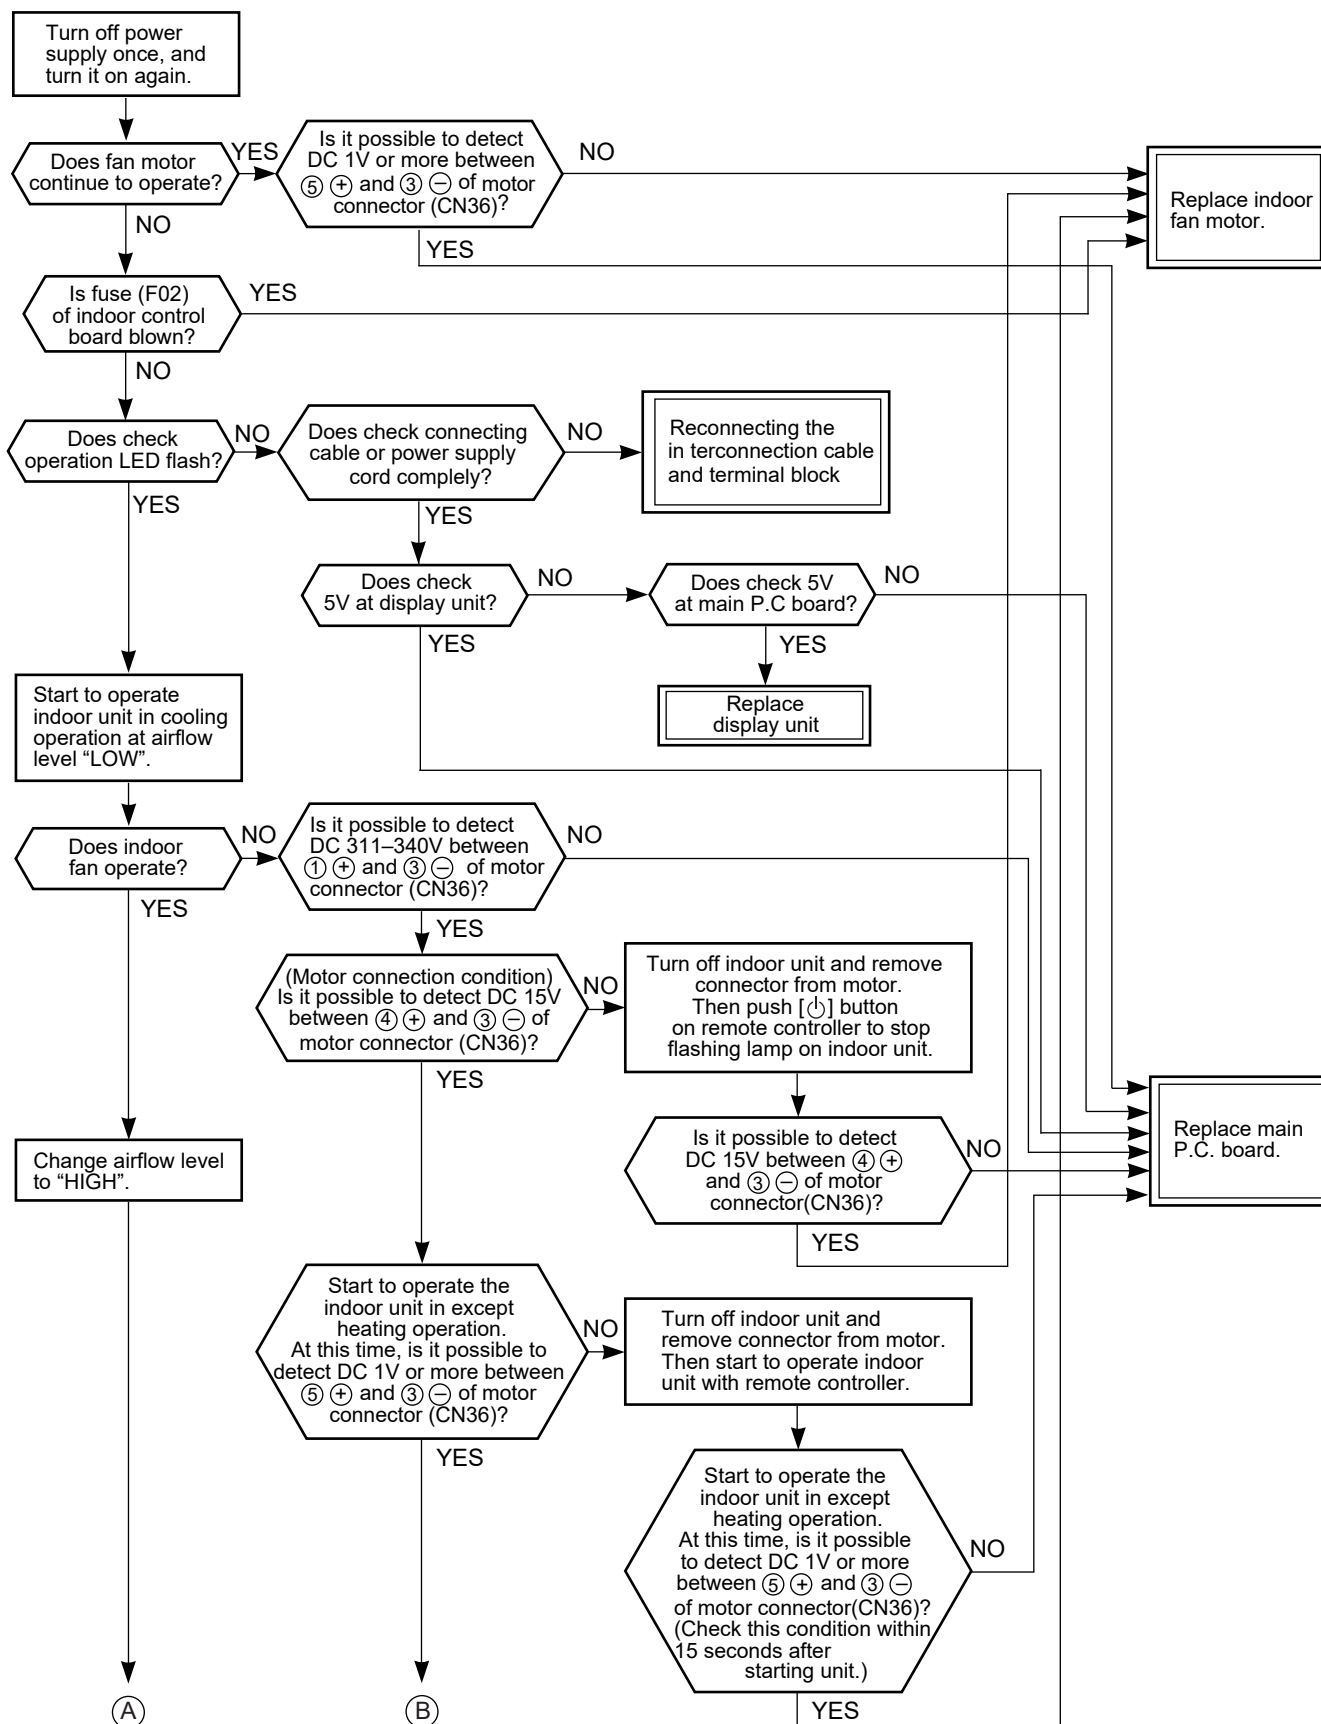

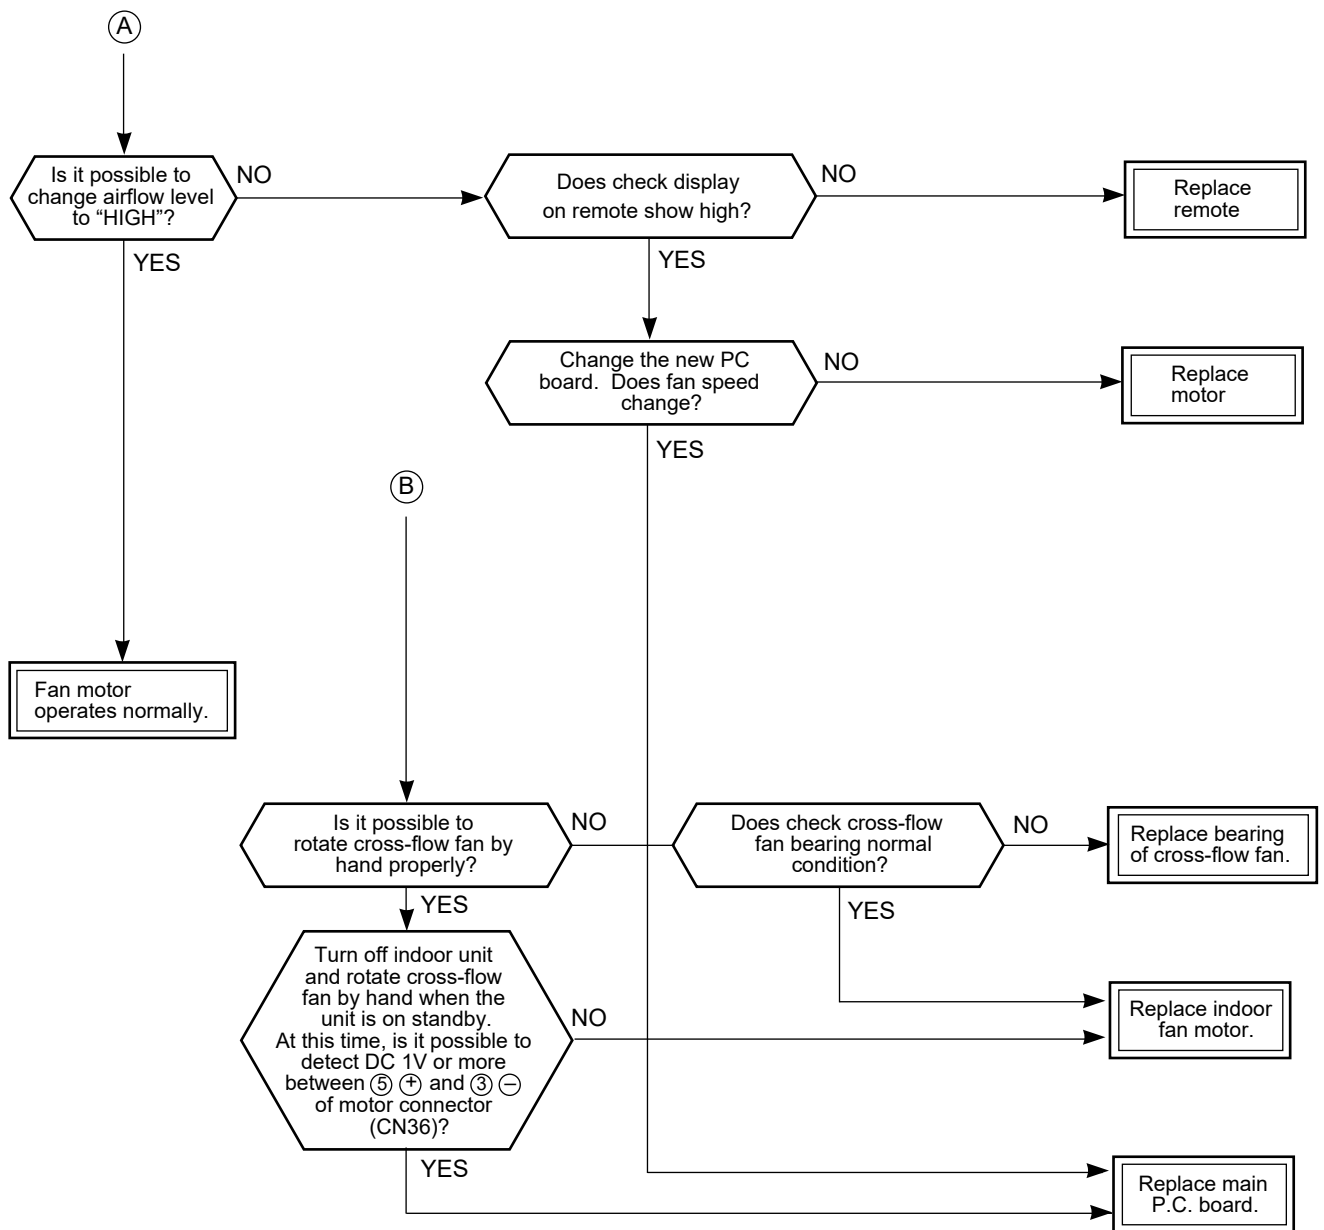

(3) Indoor fan motor automatically starts to rotate by turning on power supply

(For AC fan motor)


(For 05k~13k)

<Inspection procedure>

1. Remove the front panel. (Remove 2 screws.)
2. Remove the cover of the fan motor lead wires.
3. Check AC voltage with CN31 connector while the fan motor is rotating.

NOTE :

- Using a tester, measure the resistance value of each winding coil.
- Use a thin test rod.
- Do not disconnect the connector while the fan motor is rotating.
- For P.C. board side, proceed to the item "Only indoor fan does not operate" of "Judgment of Trouble by Every Symptom".

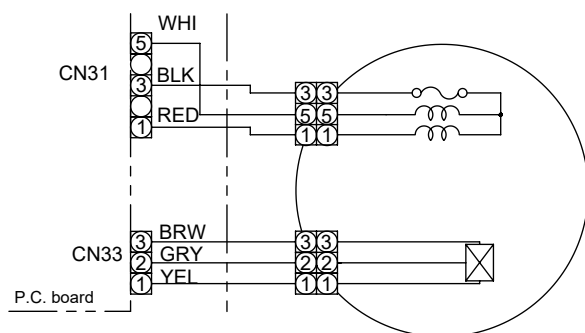

Position (P.C. board)	Resistance value
Between ③ (Black) - ① (Red)	$147.0 \pm 10.3 \Omega$
Between ③ (Black) - ⑤ (White)	$302.7 \pm 21.2 \Omega$
Between ① (Red) - ⑤ (White)	$449.7 \pm 31.5 \Omega$

[For DC fan motor]

(For 16k~24k)

<Cause>



The IC is built in the indoor fan motor. Therefore the P.C. board is also mounted to inside of the motor. If the P.C. board is soldered imperfectly or the IC is defective, the fan motor may automatically rotate by turning on power supply.

<Inspection procedure>

1. Remove the front panel. (Remove 2 screws.)
2. Remove the cover of the fan motor lead wires.
3. Check DC voltage with CN36 connector while the fan motor is rotating.

NOTE :


- Do not disconnect the connector while the fan motor is rotating.
- Use a thin test rod.

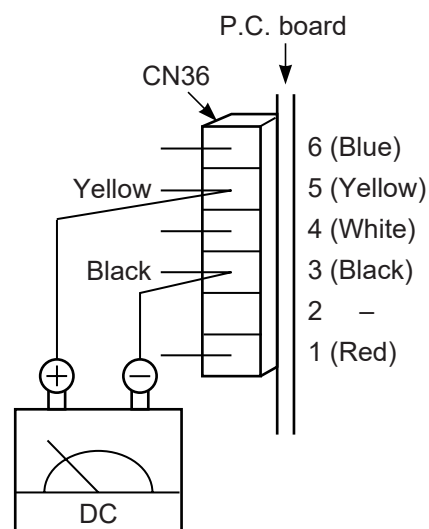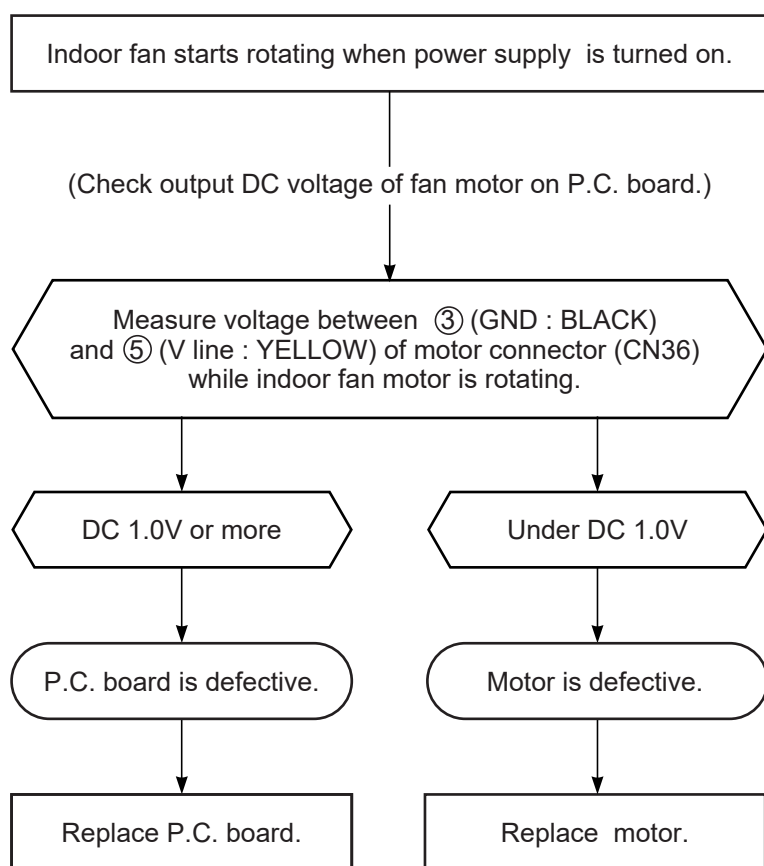

(4) Troubleshooting for remote controller

<Primary check>

Check that A or B selected on the main unit is matched with A or B selected on the remote controller.

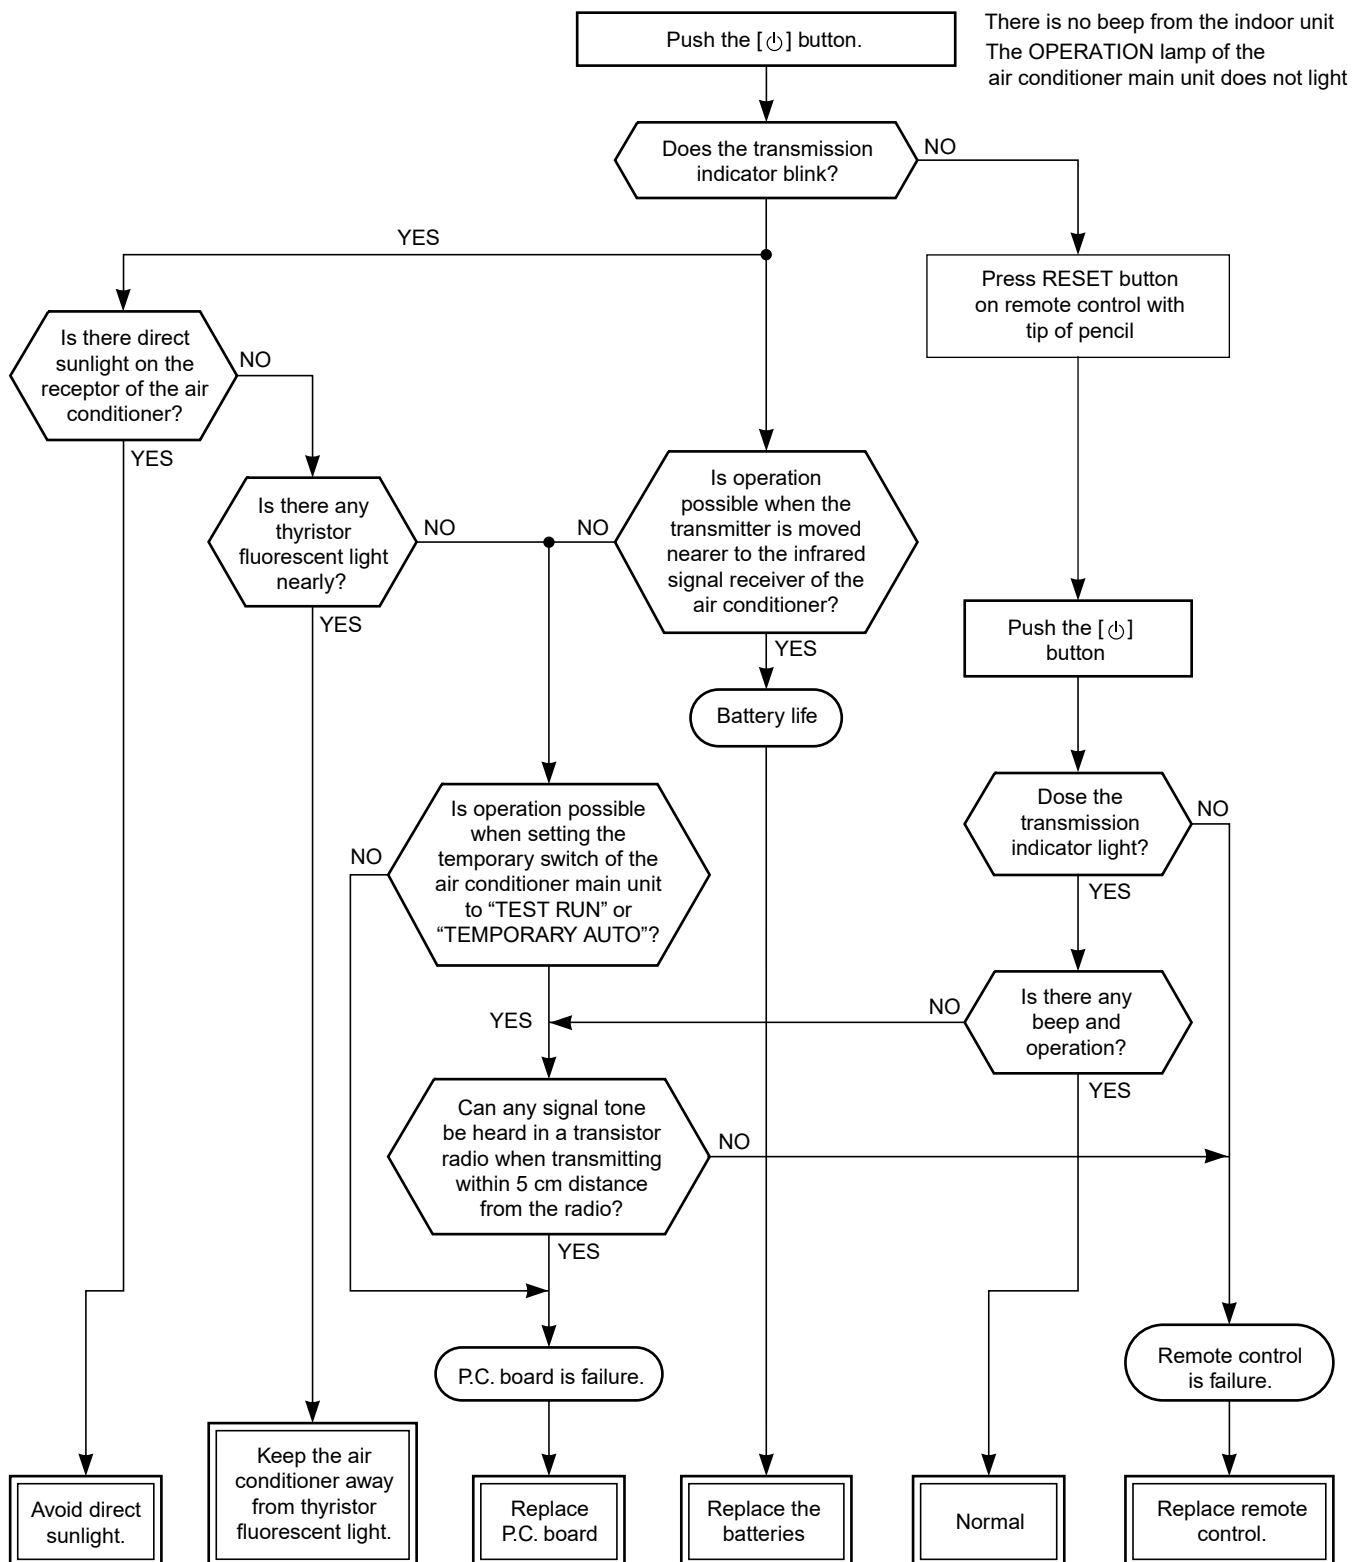

11-5-2. Wiring Failure (Interconnecting and Serial Signal Wire)


(1) Outdoor unit does not operate

- 1) Is the voltage between ② and ③ of the indoor terminal block varied?

Confirm that transmission from indoor unit to outdoor unit is correctly performed based upon the following diagram.

NOTE:

- Measurement should be performed 2 minutes and 30 seconds after starting of the operation.
- Be sure to prepare a diode for judgment.

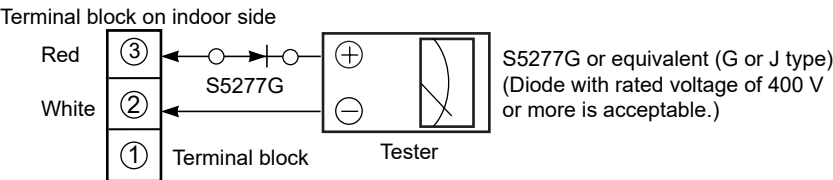


Normal time : Voltage swings between DC15 and 60V.Inverter Assembly check (11-7-1.)

Abnormal time : Voltage does not vary.


(2) Outdoor unit stops in a little while after operation started

<Check procedure> Select phenomena described below.


- 1) The outdoor unit stops 10 to 20 minutes after operation started, and 10 minutes or more are required to restart the unit.

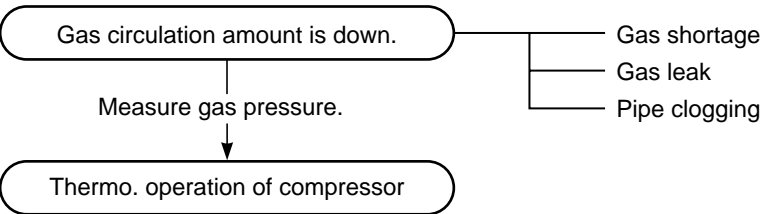

 - 2) If the unit stops once, it does not operate until the power will be turned on again.




- 3) The outdoor unit stops 10 minutes to 1 hour after operation started, and an alarm is displayed. (Discharge temp. error check code 03, 1E Sensor temp. error check code 02, 1C)

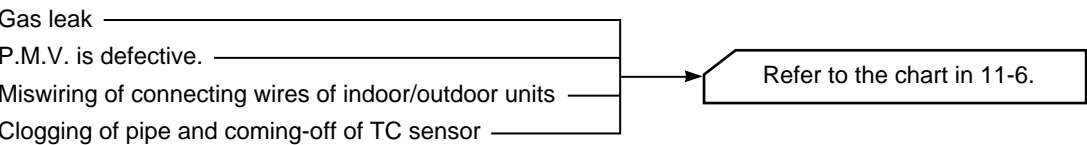

11-6. How to Check Simple the Main Parts

<Check procedure>

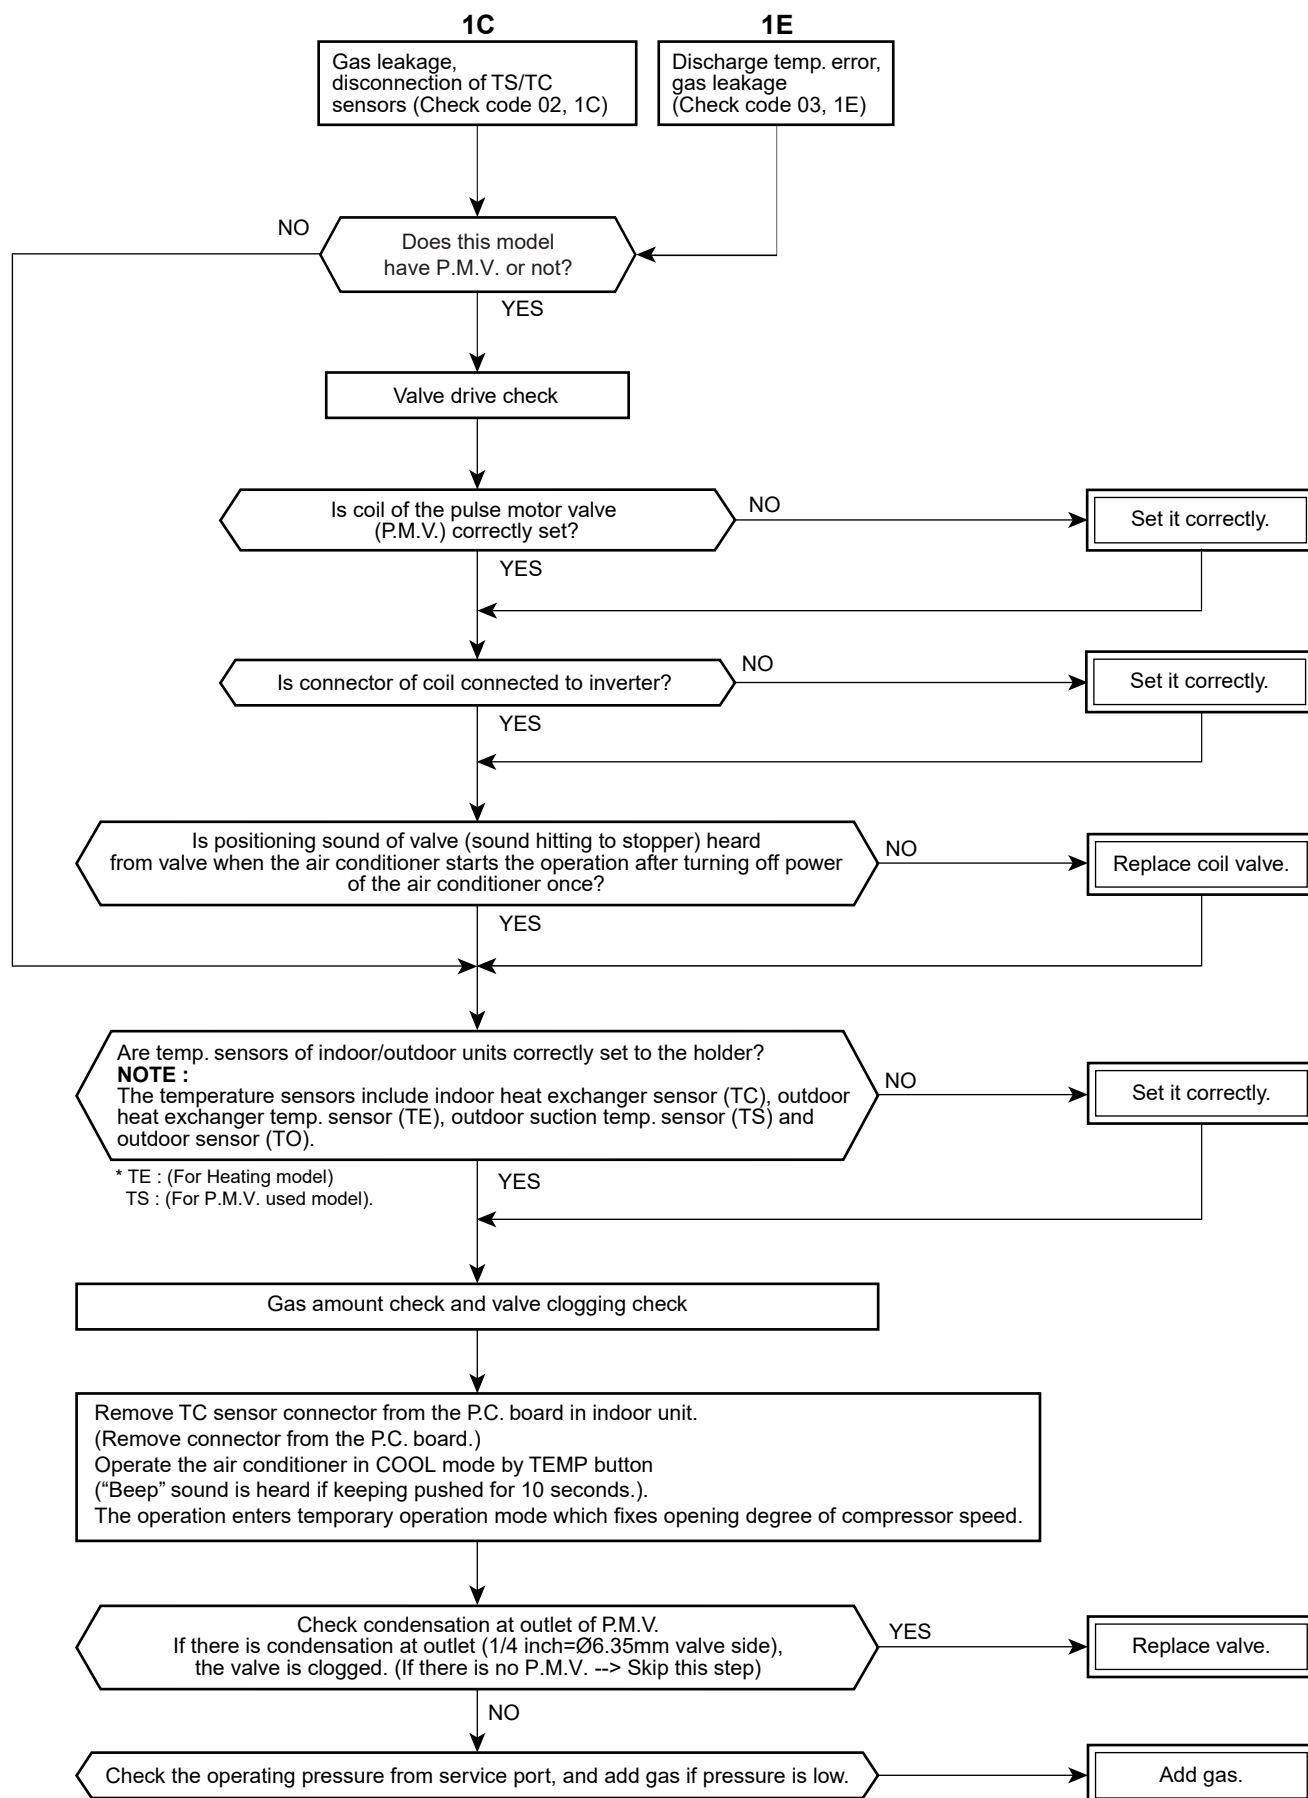

11-7. How to Diagnose Trouble in Outdoor Unit

11-7-1. Summarized Inner Diagnosis of Inverter Assembly

Table 11-7-1

Diagnosis/Process flowchart	Item	Contents	Summary
<pre> graph TD Start([Remove connector of compressor.]) --> F01{Check 15A fuse (Part No.F01).} F01 -- NG --> ReplaceFuse[Replace fuse.] ReplaceFuse --> DB01_1{{Check electrolytic capacitor, diode block (DB01), etc.}} F01 -- OK --> Vcap{Check terminal voltage of electrolytic capacitor.} DB01_1 -.-> Vcap Vcap -- NG --> DB01_2{{Check electrolytic capacitor, diode (DB01), etc.}} DB01_2 -.-> Vcap Vcap -- OK --> Fan{Does outdoor fan rotate?} Fan -- YES --> ReplaceFan[Replace outdoor fan motor.] ReplaceFan --> A((A)) Fan -- NO --> CN31_30{{Remove connector CN31(For 05k~18k), CN30(For 24k) of outdoor fan motor, and using a tester, check resistance value between every phases at motor side.}} CN31_30 -- OK --> B((B)) CN31_30 -- NG --> ReplaceFan </pre>	Preparation	Turn "OFF" the power supply breaker, and remove 3P connector which connects inverter and compressor.	<p>If fuse was blown, be sure to check the electrolytic capacitor and diode block. (DB01)</p> <ul style="list-style-type: none"> Connect discharge resistance (approx. 100Ω, 40W) or soldering iron (plug) between +, – terminals of the electrolytic capacitor (500μF) of C07 (05k~13k) (760μF) of C07 (16k~18k) (500μF) of C10,C11 (24k) (with printed WARNING ELECTRIC SHOCK) on P.C. board. <p>(For 05k~18k)</p> <p>(For 24k)</p> <p>OK if 500μF → DC290 to 400V (For 05k~13k) if 760μF → DC290 to 400V (For 16k~18k) if 500μF → DC290 to 450V (For 24k) 2pcs. Remove CN31(For 05k~18k), CN30(For 24k) while pushing the part indicated by an arrow because CN31(For 05k~18k), CN30(For 24k) is a connector with lock.</p> <p>→ Resistance between phases should be approx 34 ± 3.4Ω → Should be 100MΩ or more.</p>
	Check	<ul style="list-style-type: none"> Check whether 15A (For 05k~18k), 25A (For 24k) fuse on the control board assembly is blown or not. (F01) 	
	Check		
	Operation	Turn on the power breaker, and operate the air conditioner in COOL mode by time shortening.	
	Measurement	Measure terminal voltage of the electrolytic capacity. (For 05k~13k) 500μF:400V (For 16k~18k) 760μF:400V (For 24k) 500μF:450V 2pcs.	
	Check	After operation, turn off the power breaker after 2 minutes 20 seconds passed, and discharge the electrolytic capacitor by soldering iron.	
	Stop	Check voltage between motor phases.	
	Check Measurement	<ul style="list-style-type: none"> Is not winding between ①-②, ②-③, or ①-③ opened or short-circuited Is not frame grounded with ①, ②, or ③? 	

Diagnosis/Process flowchart	Item	Contents	Summary
<pre> graph TD A((A)) --> D{Check compressor winding resistance.} B((B)) --> C[Replace control board assembly.] D -- OK --> E[Replace control board.] D -- NG --> F[Replace compressor.] </pre>	<p>Check</p> <p>Operation</p>	<p>Check winding resistance between phases of compressor, and resistance between outdoor frames by using a tester.</p> <ul style="list-style-type: none"> • Is not grounded. • Is not short-circuited between windings. • Winding is not opened. <p>Remove connector CN31(For 05k~18k), CN30(For 24k) of the outdoor fan motor, turn on the power supply breaker, and perform the operation. (Stops though activation is prompted.)</p> <p>Check operation within 2 minutes 20 seconds after activation stopped.</p>	<p>→ OK if 20MΩ or more</p> <p>→ OK if about 2.36Ω (05k,07k,16k,18k) 4.34Ω (10k,13k) 1.68Ω (24k)</p> <p>→ (Check by a digital tester.)</p>

11-8. How to Check Simply the Main Parts

11-8-1. How to Check the P.C. Board (Indoor Unit)

(1) Operating precautions

- 1) When removing the front panel or the P.C. board, be sure to shut off the power supply breaker.
- 2) When removing the P.C. board, hold the edge of the P.C. board and do not apply force to the parts.
- 3) When connecting or disconnecting the connectors on the P.C. board, hold the whole housing. Do not pull at the lead wire.

(2) Inspection procedures

- 1) When a P.C. board is judged to be defective, check for disconnection, burning, or discoloration of the copper foil pattern or this P.C. board.
- 2) The P.C. board consists of the following 2 parts

a. Main P.C. board part :

DC power supply circuit, Indoor fan motor control circuit, CPU and peripheral circuits, buzzer, and Driving circuit of louver.

b. Indication unit of infrared ray receiving infrared ray receiving circuit, LED :

To check defect of the P.C. board, follow the procedure described below.

(3) Check procedures

(For 05k~13k)

Table 11-8-1


No.	Procedure	Check points	Causes
1	Turn off the power supply breaker and remove the P.C. board assembly from electronic parts base. Remove the connecting cables from the terminal block.	Check whether or not the fuse (F01) is blown.	Impulse voltage was applied or the indoor fan motor short-circuited.
2	Remove the connector of the motor and turn on the power supply breaker. If OPERATION indicator flashes (once per second), it is not necessary to check steps (1 to 4) in the right next column.	Check power supply voltage : 1. Between CN01 and CN02 (AC 220–240V) 2. Between ⊕ and ⊖ of C04 (DC 310–340V) 3. Between 12V and GND 4. Between 5V and GND	1. The terminal block or the crossover cable is connected wrongly. 2. The fuse (F01), line filter (L01), resistor (R03), or the diode (DB01) is defective. 3. IC01 and T01 are defective. 4. IC01, IC03 and T01 are defective.
3	Push [⏻] button once to start the unit. (Do not set the mode to On-Timer operation.)	Check power supply voltage : 1. Between CN51 and CN01 (DC 15–60V)	IC51 and IC52 are defective.
4	Shorten the restart delay timer and start unit.	Check whether or not all indicators (OPERATION, TIMER, HI-POWER, ECO, Wireless adapter) are lit for 3 seconds and they return to normal 3 seconds later.	The indicators are defective or the housing assembly (CN20) is defective.
5	Push [⏻] button once to start the unit. • Shorten the restart delay timer. • Set the operation mode to COOL. • Set the fan speed level to AUTO. • Set the preset temperature much lower than the room temperature. (The unit (compressor) operates continuously in the above condition.)	1. Check whether or not the compressor operates. 2. Check whether or not the OPERATION indicator flashes.	1. The temperature of the indoor heat exchanger is extremely low. 2. The connection of the heat exchanger sensor is loose. (The connector is disconnected.) (CN62) 3. The heat exchanger sensor and the P.C. board are defective. (Refer to Table 11-4-1.) 4. The main P.C. board is defective.
6	If the above condition (No. 5) still continues, start the unit in the following condition. • Set the operation mode to HEAT. • Set the preset temperature much higher than room temperature.	1. Check whether or not the compressor operates. 2. Check whether or not the OPERATION indicator flashes.	1. The temperature of the indoor heat exchanger is extremely high. 2. The connection of the heat exchanger sensor short-circuited. (CN62) 3. The heat exchanger sensor and the P.C. board are defective. (Refer to Table 11-4-1.) 4. The main P.C. board is defective
7	Connect the motor connector to the motor and turn on the power supply. Start the unit the following condition. • Set the fan speed level to HIGH. (The unit (compressor) operates continuously in the above condition in No. 5.)	1. Check it is impossible to detect the voltage (AC120V or higher voltage) between red and black lead of the motor. 2. The motor does not operate or the fan motor does not rotate with high speed. (But it is possible to receive the signal from the remote controller.) 3. The motor rotates but vibrates strongly.	1. The indoor fan motor is defective. (Protected operation of P.C. board.) 2. The P.C. board is defective. 3. The connection of the motor connector is loose.

(For 16k~24k)


Table 11-8-1

No.	Procedure	Check points	Causes
1	Turn off the power supply breaker and remove the P.C. board assembly from electronic parts base. Remove the connecting cables from the terminal block.	Check whether or not the fuse (F01) is blown.	Impulse voltage was applied or the indoor fan motor short-circuited.
2	Remove the connector of the motor and turn on the power supply breaker. If OPERATION indicator flashes (once per second), it is not necessary to check steps (1 to 4) in the right next column.	Check power supply voltage : 1. Between Pin 4 of CN30 and CN31 (AC 220~240V) 2. Between ⊕ and ⊖ of C03 (DC 310~340V) 3. Between 15V and GND 4. Between 12V and GND 5. Between 5V and GND	1. The terminal block or the crossover cable is connected wrongly. 2. The fuse (F01), line filter (L01), resistor (R03), or the diode (DB01) is defective. 3. IC11, IC15, Q102, C117 and T01 are defective. 4. IC11, C109 and T01 are defective. 5. IC11, IC14, D104 and T01 are defective.
3	Push [⏻] button once to start the unit. (Do not set the mode to On-Timer operation.)	Check power supply voltage : 1. Between CN28 and CN31 (DC 15~60V)	IC52 and IC53 are defective.
4	Shorten the restart delay timer and start unit.	Check whether or not all indicators (OPERATION, TIMER, HI-POWER, ECO, Wireless adapter) are lit for 3 seconds and they return to normal 3 seconds later.	The indicators are defective or the housing assembly (CN10) is defective.
5	Push [⏻] button once to start the unit. • Shorten the restart delay timer. • Set the operation mode to COOL. • Set the fan speed level to AUTO. • Set the preset temperature much lower than the room temperature. (The unit (compressor) operates continuously in the above condition.)	1. Check whether or not the compressor operates. 2. Check whether or not the OPERATION indicator flashes.	1. The temperature of the indoor heat exchanger is extremely low. 2. The connection of the heat exchanger sensor is loose. (The connector is disconnected.) (CN62) 3. The heat exchanger sensor and the P.C. board are defective. (Refer to Table 11-4-1.) 4. The main P.C. board is defective.
6	If the above condition (No. 5) still continues, start the unit in the following condition. • Set the operation mode to HEAT. • Set the preset temperature much higher than room temperature.	1. Check whether or not the compressor operates. 2. Check whether or not the OPERATION indicator flashes.	1. The temperature of the indoor heat exchanger is extremely high. 2. The connection of the heat exchanger sensor short-circuited. (CN62) 3. The heat exchanger sensor and the P.C. board are defective. (Refer to Table 11-4-1.) 4. The main P.C. board is defective
7	Connect the motor connector to the motor and turn on the power supply. Start the unit the following condition. • Set the fan speed level to HIGH. (The unit (compressor) operates continuously in the above condition in No. 5.)	1. Check it is impossible to detect the voltage (AC120V or higher voltage) between red and black lead of the motor. 2. The motor does not operate or the fan motor does not rotate with high speed. (But it is possible to receive the signal from the remote controller.) 3. The motor rotates but vibrates strongly.	1. The indoor fan motor is defective. (Protected operation of P.C. board.) 2. The P.C. board is defective. 3. The connection of the motor connector is loose.


11-8-2. P.C.Board Layout
(For 05k~13k)

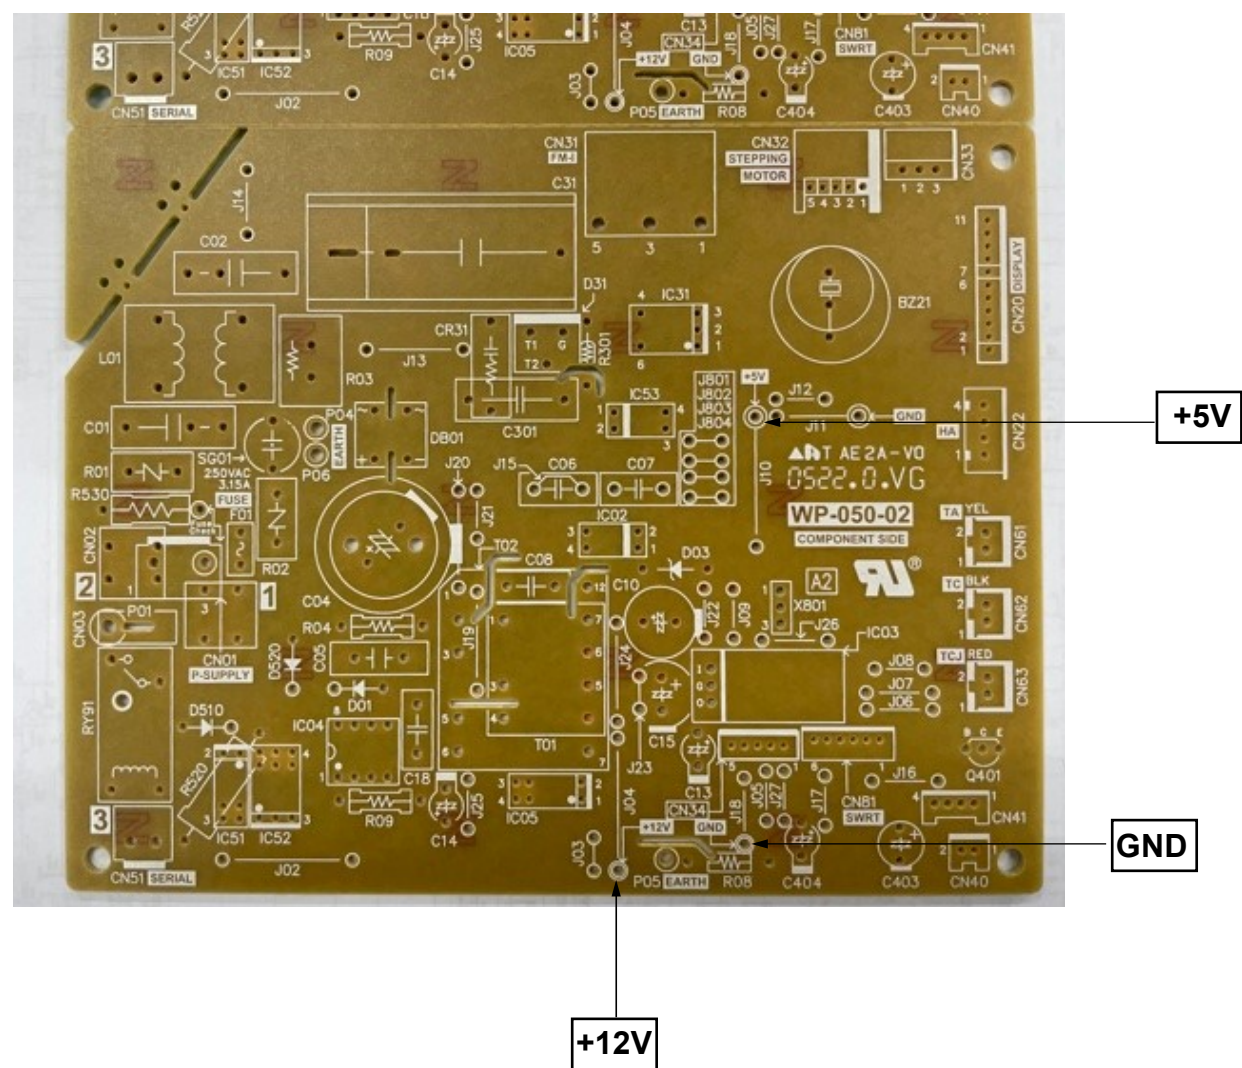

[1] Sensor characteristic table

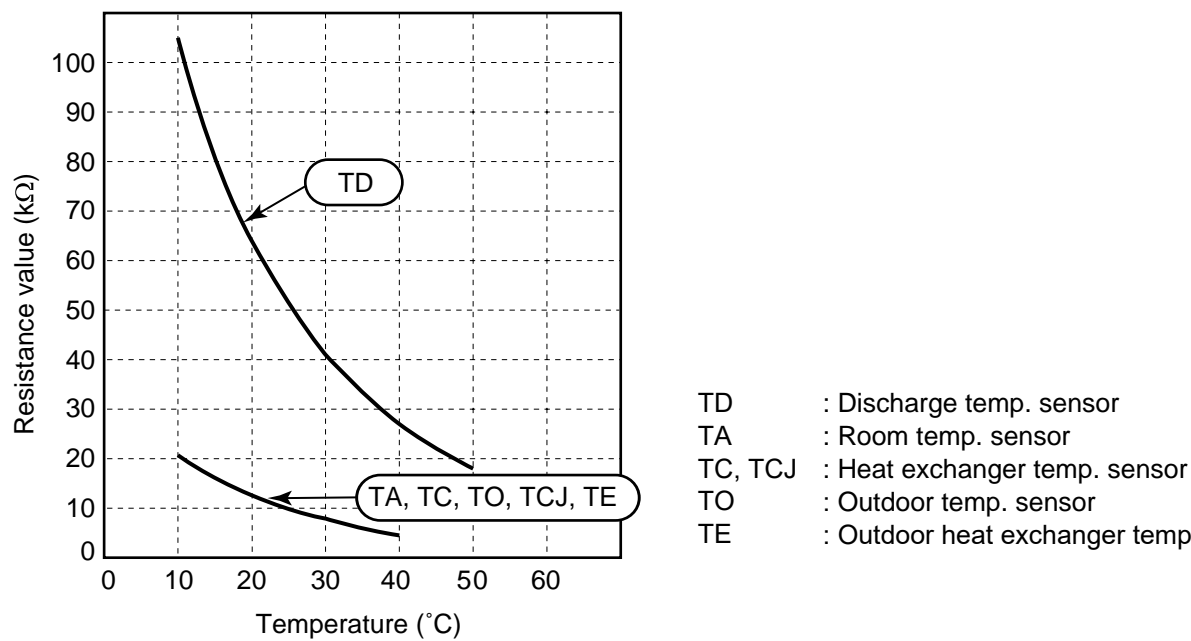


(For 16k~24k)

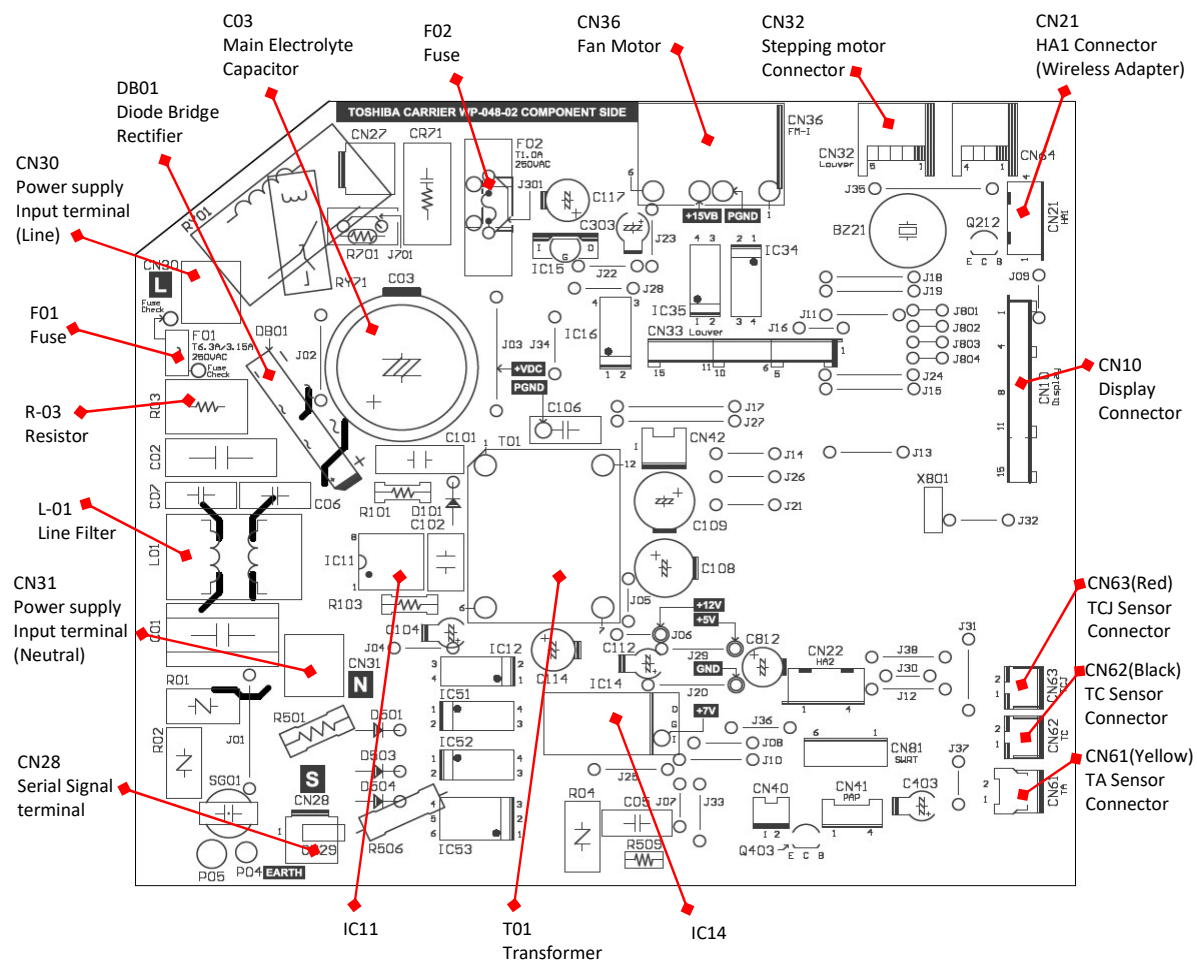

Note : Some component don't exist in the actual PCB. Refer to the actual product when servicing is priority.




[1] Sensor characteristic table

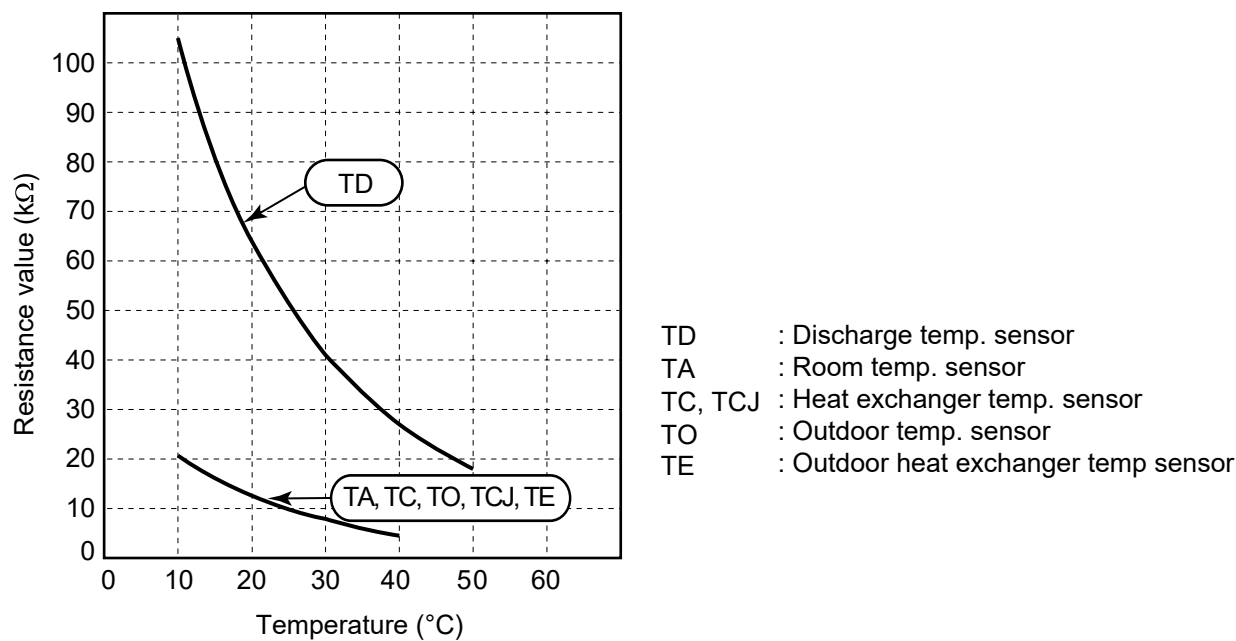





11-8-3. Indoor Unit (Other Parts)

No.	Part name	Checking procedure												
1	Room temp. (TA) sensor Heat exchanger (TC, TCJ) sensor	Disconnect the connector and measure the resistance value with tester. (Normal temp.) <table><tr><th><div>Sensor</div><div>Temperature</div></th><th>10°C</th><th>20°C</th><th>25°C</th><th>30°C</th><th>40°C</th></tr><tr><td>TA, TC, TCJ (kΩ)</td><td>20.7</td><td>12.6</td><td>10.0</td><td>7.9</td><td>4.5</td></tr></table>	<div>Sensor</div> <div>Temperature</div>	10°C	20°C	25°C	30°C	40°C	TA, TC, TCJ (kΩ)	20.7	12.6	10.0	7.9	4.5
<div>Sensor</div> <div>Temperature</div>	10°C	20°C	25°C	30°C	40°C									
TA, TC, TCJ (kΩ)	20.7	12.6	10.0	7.9	4.5									
2	Remote controller	Refer to 11-5-1. (5).												
3	Louver motor MSBPC20F04 (For 05k-13k) 24BYJ48-STHL (For 16k-24k)	Measure the resistance value of each winding coil by using the tester. (Under normal temp. 25°C) <div><div><div>White</div><div>Yellow</div><div>Yellow</div><div>Yellow</div><div>Yellow</div></div><div><div>①①</div><div>②②</div><div>③③</div><div>④④</div><div>⑤⑤</div></div><div></div></div> <table><tr><th>Position</th><th>Resistance value</th></tr><tr><td>1 to 2</td><td rowspan="2">MSBPC20F04 250Ω ± 7%</td></tr><tr><td>1 to 3</td></tr><tr><td>1 to 4</td><td rowspan="2">24BYJ48-STHL 200Ω ± 7%</td></tr><tr><td>1 to 5</td></tr></table> <div>at 25°C</div>	Position	Resistance value	1 to 2	MSBPC20F04 250Ω ± 7%	1 to 3	1 to 4	24BYJ48-STHL 200Ω ± 7%	1 to 5				
Position	Resistance value													
1 to 2	MSBPC20F04 250Ω ± 7%													
1 to 3														
1 to 4	24BYJ48-STHL 200Ω ± 7%													
1 to 5														
4	Indoor fan motor	Refer to 11-5-1. (3) and (4).												

 11-8-4. Outdoor Unit

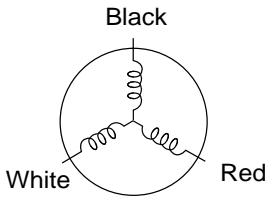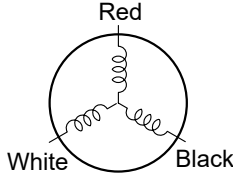1	<div>Compressor</div> <div>RAS-05,07B2AVG-E2 Model : KSK66D15UDZB3</div> <div>RAS-10,13B2AVG-E2 Model : GSX073NKQF6JT8</div> <div>RAS-16,18B2AVG-E2 Model : KSK103D32UEZB31</div> <div>RAS-24B2AVG-E2 Model : KSN140D33UFZA3</div>	<div>Measure the resistance value of each winding by using the tester.</div> <div></div> <div><table><tr><th rowspan="2">Position</th><th colspan="2">Resistance value</th></tr><tr><th>KSK66D15UDZB3</th><th>GSX073NKQF6JT8</th></tr><tr><td>Red - White</td><td rowspan="3">2.36Ω</td><td rowspan="3">4.34Ω</td></tr><tr><td>White - Black</td></tr><tr><td>Black - Red</td></tr></table><div>at 20°C</div><table><tr><th rowspan="2">Position</th><th colspan="2">Resistance value</th></tr><tr><th>KSK103D32UEZB31</th><th>KSN140D33UFZA3</th></tr><tr><td>Red - White</td><td rowspan="3">2.36Ω</td><td rowspan="3">1.68Ω</td></tr><tr><td>White - Black</td></tr><tr><td>Black - Red</td></tr></table><div>at 20°C</div></div>	Position	Resistance value		KSK66D15UDZB3	GSX073NKQF6JT8	Red - White	2.36Ω	4.34Ω	White - Black	Black - Red	Position	Resistance value		KSK103D32UEZB31	KSN140D33UFZA3	Red - White	2.36Ω	1.68Ω	White - Black	Black - Red
Position	Resistance value																					
	KSK66D15UDZB3	GSX073NKQF6JT8																				
Red - White	2.36Ω	4.34Ω																				
White - Black																						
Black - Red																						
Position	Resistance value																					
	KSK103D32UEZB31	KSN140D33UFZA3																				
Red - White	2.36Ω	1.68Ω																				
White - Black																						
Black - Red																						
2	<div>Fan motor</div>	<div>Measure the resistance value of winding by using the tester.</div> <div></div> <div><table><tr><th>Position</th><th>Resistance value</th></tr><tr><td></td><td>LDF-340-A43AA1-1</td></tr><tr><td>Red - White</td><td rowspan="3">34 ± 3.4Ω</td></tr><tr><td>White - Black</td></tr><tr><td>Black - Red</td></tr></table><div>at 20°C</div></div>	Position	Resistance value		LDF-340-A43AA1-1	Red - White	34 ± 3.4Ω	White - Black	Black - Red												
Position	Resistance value																					
	LDF-340-A43AA1-1																					
Red - White	34 ± 3.4Ω																					
White - Black																						
Black - Red																						
3	<div>4-Way valve coil</div>	<div>Measure the resistance value of winding by using the tester.</div> <div></div> <div><table><tr><td>Model : SQ-A2522G-000352</td><td>Resistance value : 2210 ± 221Ω</td></tr></table><div>at 20°C</div></div>	Model : SQ-A2522G-000352	Resistance value : 2210 ± 221Ω																		
Model : SQ-A2522G-000352	Resistance value : 2210 ± 221Ω																					
4	<div>Outside air temp. sensor (TO) Discharge temp. sensor (TD) Exchanger temp. sensor (TE)</div>	<div>Disconnect the connector, and measure resistance value with the tester. (Normal temperature)</div> <div><table><tr><th>Temperature Sensor</th><th>20°C</th><th>30°C</th><th>40°C</th><th>50°C</th></tr><tr><td>TD (kΩ)</td><td>61</td><td>40</td><td>26</td><td>18</td></tr><tr><td>TO, TE (kΩ)</td><td>12.6</td><td>7.9</td><td>4.5</td><td>3.4</td></tr></table></div>	Temperature Sensor	20°C	30°C	40°C	50°C	TD (kΩ)	61	40	26	18	TO, TE (kΩ)	12.6	7.9	4.5	3.4					
Temperature Sensor	20°C	30°C	40°C	50°C																		
TD (kΩ)	61	40	26	18																		
TO, TE (kΩ)	12.6	7.9	4.5	3.4																		

11-8-5. Checking Method for Each Part

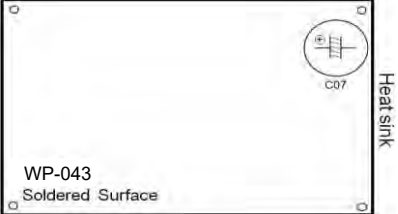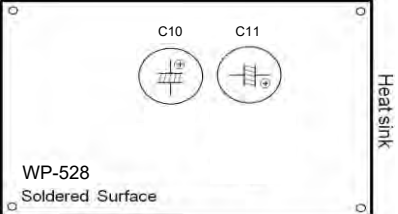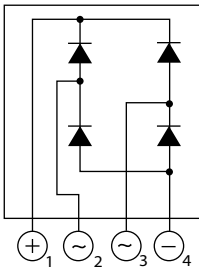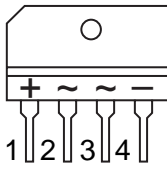No.	Part name	Checking procedure														
1	Electrolytic capacitor	<p>1. Turn OFF the power supply breaker. 2. Discharge all three capacitors completely. 3. Check that safety valve at the bottom of capacitor is not broken. 4. Check that vessel is not swollen or exploded. 5. Check that electrolytic liquid does not blow off. 6. Check that the normal charging characteristics are show in continuity test by the tester.</p> <p>(For 05k~18k)</p>  <p>C07 → 500μF/ 400V (05k~13k) C07 → 750μF/ 400V (16k~18k)</p> <p>(For 24k)</p>  <p>C10, C11 → 500μF/450V</p> <div data-bbox="1077 504 1417 694"> <p>Case that product is good</p> <p>Pointer swings once, and returns slowly. When performing test once again under another polarity, the pointer should return.</p> </div>														
2	Converter module	<p>1. Turn OFF the power supply breaker. 2. Discharge all three capacitors completely. 3. Check that the normal rectification characteristics are shown in continuity test by the tester.</p>   <p>(DB01)</p> <p>Diode check</p> <table border="1" data-bbox="810 1742 1193 1998"> <thead> <tr> <th colspan="2">Tester rod</th><th>Resistance value in good product</th></tr> </thead> <tbody> <tr> <td>⊕₁</td><td>⊖₄</td><td rowspan="5">50kΩ or more (0Ω in trouble)</td></tr> <tr> <td>⊖₂</td><td>⊖₄</td></tr> <tr> <td>⊖₃</td><td>⊖₄</td></tr> <tr> <td>⊕₁</td><td>⊖₂</td></tr> <tr> <td>⊕₁</td><td>⊖₃</td></tr> </tbody> </table>	Tester rod		Resistance value in good product	⊕ ₁	⊖ ₄	50kΩ or more (0Ω in trouble)	⊖ ₂	⊖ ₄	⊖ ₃	⊖ ₄	⊕ ₁	⊖ ₂	⊕ ₁	⊖ ₃
Tester rod		Resistance value in good product														
⊕ ₁	⊖ ₄	50kΩ or more (0Ω in trouble)														
⊖ ₂	⊖ ₄															
⊖ ₃	⊖ ₄															
⊕ ₁	⊖ ₂															
⊕ ₁	⊖ ₃															

11-9. How to Simply Judge Whether Outdoor Fan Motor is Good or Bad

1. Symptom


- Outdoor fan motor does not rotate.
 - Outdoor fan motor stops within several tens seconds though it started rotating.
 - Outdoor fan motor rotates or does not rotate according to the position where the fan stopped, etc.
- Remote controller check code "02 : Outdoor block, 1A : Outdoor fan drive system error"

2. Cause

The following causes are considered when the outdoor fan motor does not normally rotate.

- 1) Mechanical lock of the outdoor fan motor
- 2) Winding failure of the outdoor fan motor
- 3) Position-detect circuit failure inside of the outdoor fan motor
- 4) Motor drive circuit failure of the outdoor P.C. board

3. How to simply judge whether outdoor fan motor is good or bad

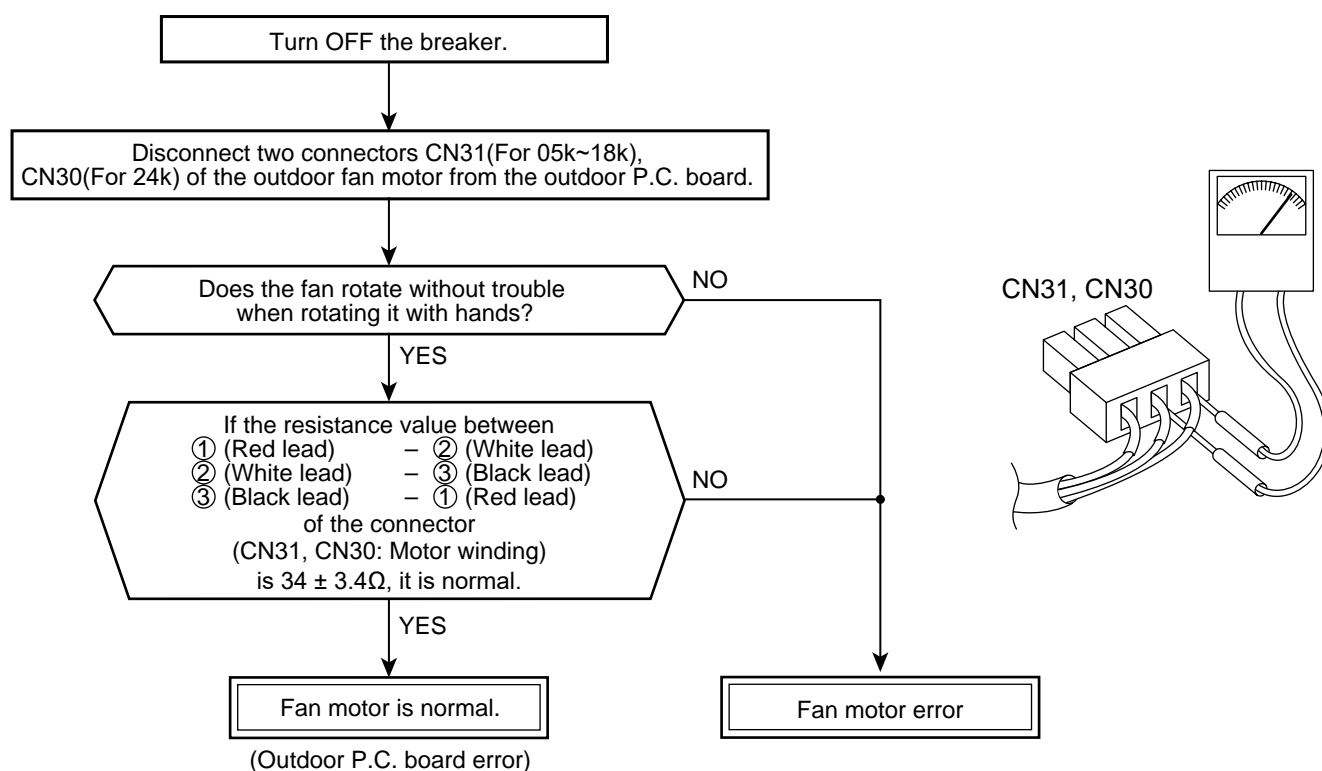

NOTE :

However, GND circuit error inside of the motor may be accepted in some cases when the above check is performed.



When the fan motor does not become normal even if P.C. board is replaced, replace the outdoor fan motor.







12. HOW TO REPLACE THE MAIN PARTS

WARNING




- Since high voltages pass through the electrical parts, turn off the power without fail before proceeding with the repairs.
Electric shocks may occur if the power plug is not disconnected.
- After the repairs have been completed (after the front panel and cabinet have been installed), perform a test run, and check for smoking, unusual sounds and other abnormalities.
If this check is omitted, a fire and/or electric shocks may occur.
Before proceeding with the test run, install the front panel and cabinet.
- Ensure that the following steps are taken when doing repairs on the refrigerating cycle.
 1. Do not allow any naked flames in the surrounding area.
If a gas stove or other appliance is being used, extinguish the flames before proceeding.
If the flames are not extinguished, they may ignite any oil mixed with the refrigerant gas.
 2. Do not use welding equipment in an airtight room.
Carbon monoxide poisoning may result if the room is not properly ventilated.
 3. Do not bring welding equipment near flammable objects.
Flames from the equipment may cause the flammable objects to catch fire.
- **If keeping the power on is absolutely unavoidable while doing a job such as inspecting the circurity, wear rubber gloves to avoid contact with the live parts.**
Electric shocks may be received if the live parts are touched.
High-voltage circuits are contained inside this unit.
Proceed very carefully when conducting checks since directly touching the parts on the control circuit board may result in electric shocks.










12-1. Indoor Unit


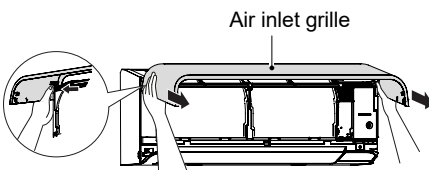
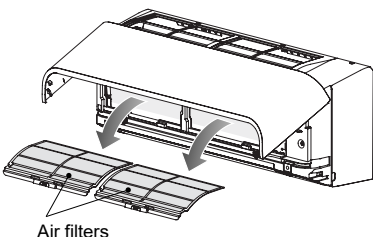
No.	Part name	Procedures	Remarks
1	Air inlet grille	1) Stop operation of the air conditioner and turn off its main power supply. 2) Open the air inlet grille until touch with front panel after that press and pull arms the air inlet grille until to take off. 	
②	Air filters	1) Follow to the procedure in the item ①.  2) Remove the left and the right air filters from the front panel.	

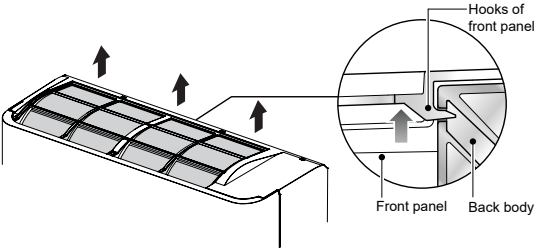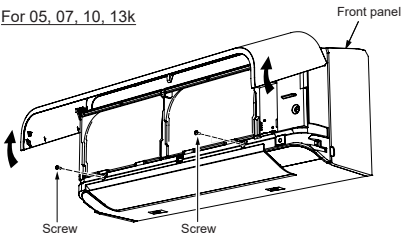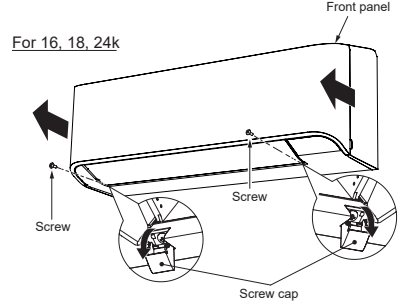
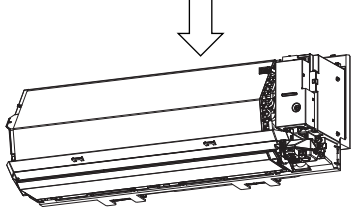
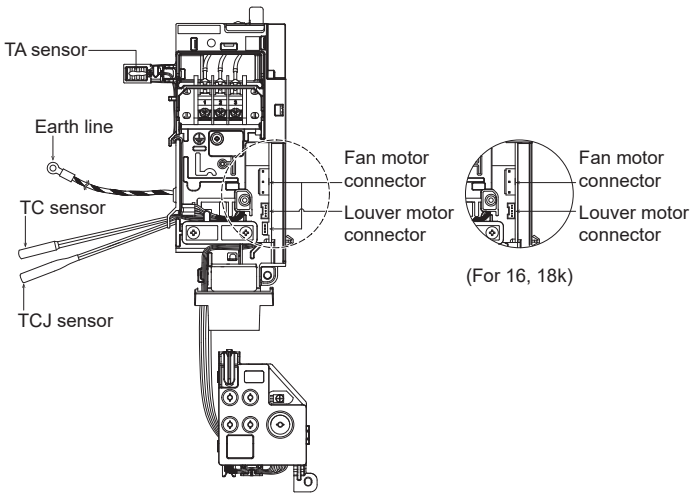
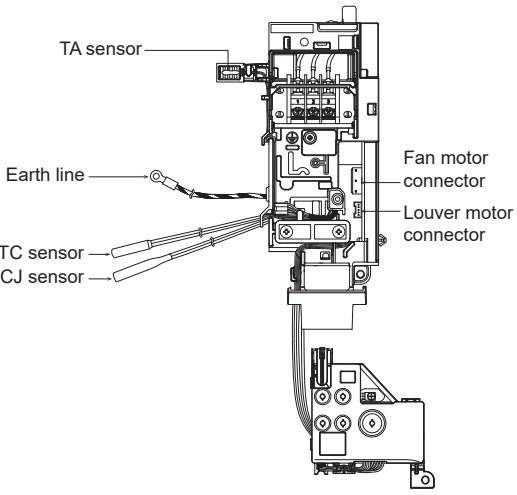
No.	Part name	Procedures	Remarks
③	Front Panel	<p>1) Stop operation of the air conditioner and turn off its main power supply.</p> <p><For 05, 07, 10, 13k> Open the air inlet grille upward.</p> <p><For 16, 18, 24k> Open two screw caps.</p> <p>2) Securely remove two screws at the front panel.</p>  <p>3) Take off the hooks of front panel from top side of the back body.</p> <p>4) Slightly open the lower part of the front panel then pull the upper part of the front panel toward you to remove it as shown on figure.</p>	<p><u>For 05, 07, 10, 13k</u></p>  <p><u>For 16, 18, 24k</u></p>  
④	Electric part box assembly	<p>1) Follow the procedure item③.</p> <p>2) Remove screw holding the electric part cover.</p>  <p>(For 16, 18k)</p> <p><u>For 05, 07, 10, 13, 16, 18k</u></p> <p>3) Disconnect the connectors for the fan motor and louver motor from P.C. board assembly.</p>	 <p><u>For 24k</u></p>





No.	Part name	Procedures	Remarks
④	Electric part box assembly (Continue)	<div data-bbox="464 248 983 432"> </div> <p>4) Remove the earth screw and earth line from evaporator.</p> <p>5) Pull out TC and TCJ sensor from sensor holder of the evaporator.</p> <p>6) Remove the 2 fixing screws that secures the electric parts box assembly, unit display assembly and remove the electric parts box assembly.</p>	
⑤	Horizontal louver	<p>1) Remove shaft of the horizontal louver from drain pan.</p> <p><For 05, 07, 10, 13, 16, 18k> Remove the center arm first then remove the other shafts.</p> <div data-bbox="475 1240 895 1603"> </div> <p><For 24k> Remove 2 the center arm first then remove the other shafts.</p> <div data-bbox="469 1760 892 2078"> </div>	


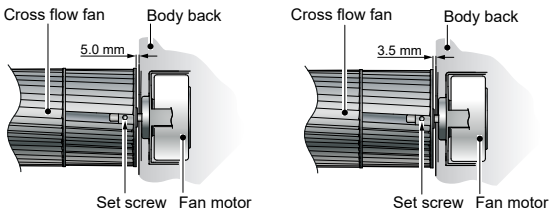
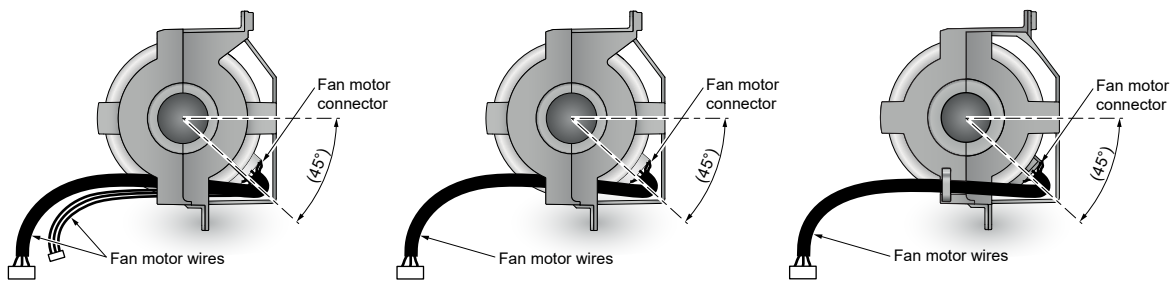
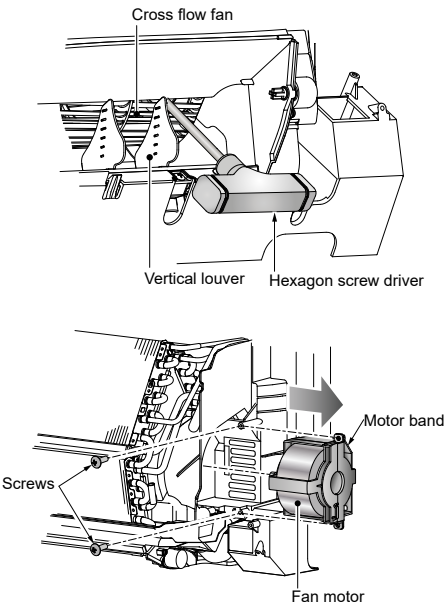
No.	Part name	Procedures	Remarks
⑥	Fan motor	<p>1) Follow the procedure item③and④. 2) Loosen the set screw of the cross flow fan.</p> <div data-bbox="446 313 997 571">  <p>For 05,07,10,13k For 16,18,24k</p> </div> <p>3) Remove 2 fixing screws of the motor band. 4) Pull the motor band and the fan motor outward.</p> <p><To re-installation> - Check the type name of fan motor. - Keep connector position and arrange fan motor wires follow figure.</p> <div data-bbox="263 929 1444 1310">  <p>For SJM-240-25 For WDF-340-30CA For WDF-340-30CA (AC Fan motor : 05,07,10,13k) (DC Fan motor : 16,18k) (DC Fan motor : 24k)</p> </div>	

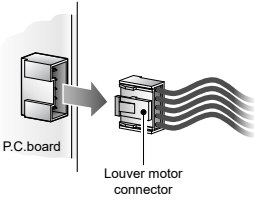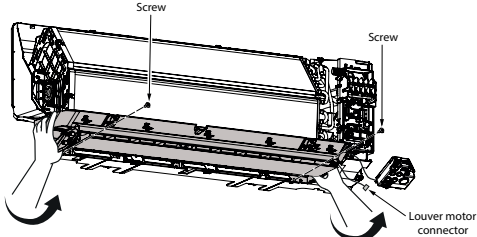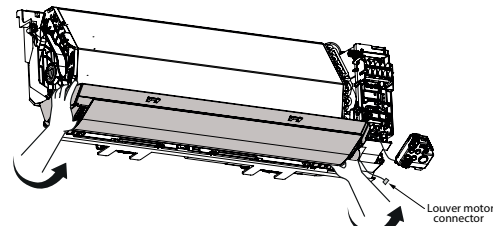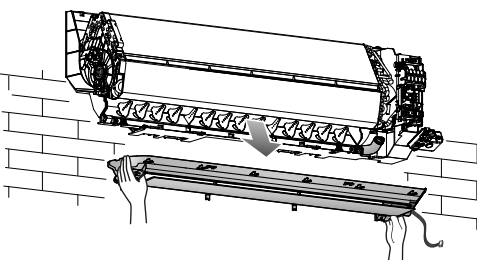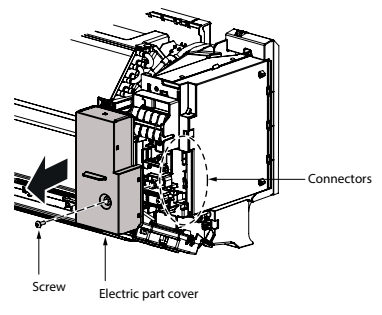
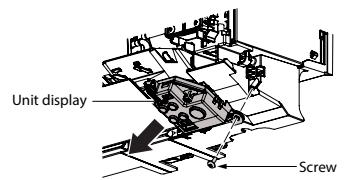
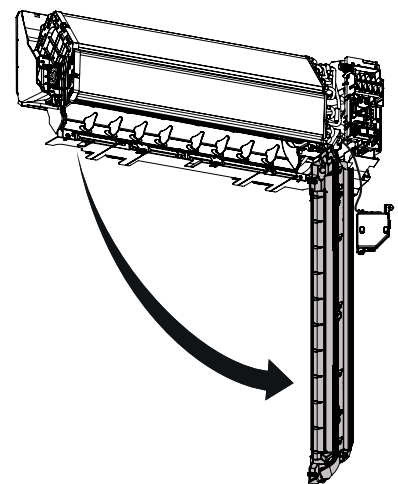
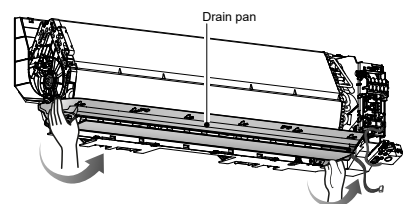
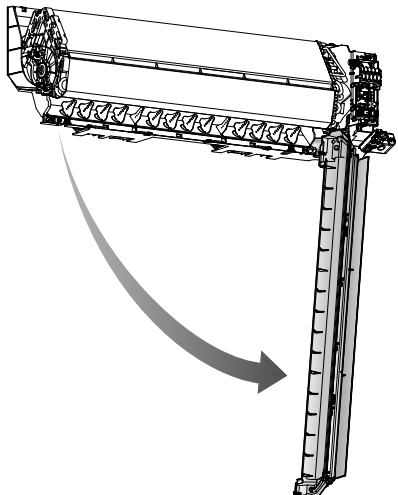
No.	Part name	Procedures	Remarks
⑦	Drain pan assembly	<p>1) Follow the procedure item ③.</p> <p>2) Remove screw holding the electric part cover.</p>  <p>3) Disconnect the louver motor connector (5P) from P.C. board assembly.</p> <p>4) Remove fixing screws of the unit display and remove unit display.</p> <p><05, 07, 10, 13k> Remove 2 fixing screws of the drain pan.</p>  <p><16, 18k> Drain pan can be remove from body back.</p>  <p><24k> Remove drain pan can be selected remove drain hose or not remove drain hose following:</p> <ul style="list-style-type: none"> - Not remove drain hose; Pulling out the drain pan from back body, then holding the drain pan with main unit. - Remove drain hose; Drain hose can be removed follow the procedure item ⑦. After that remove the drain pan from main unit. 	    



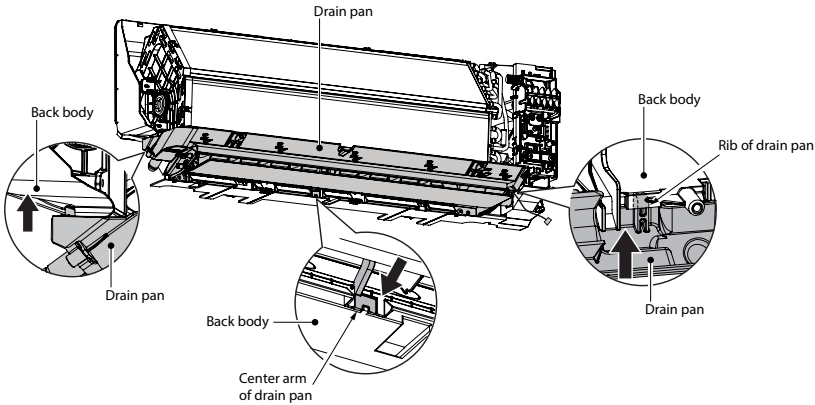
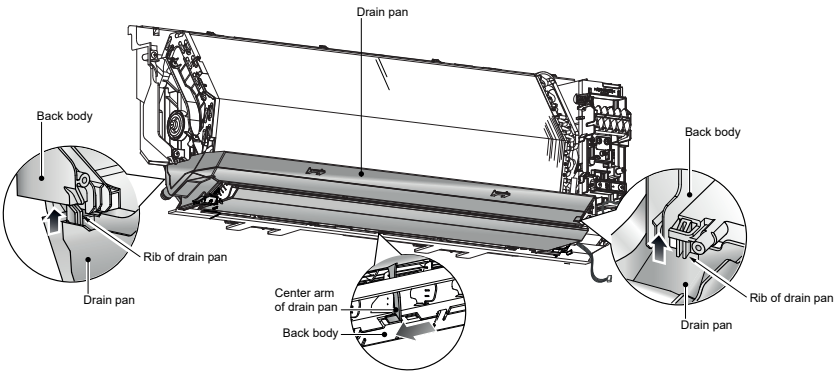
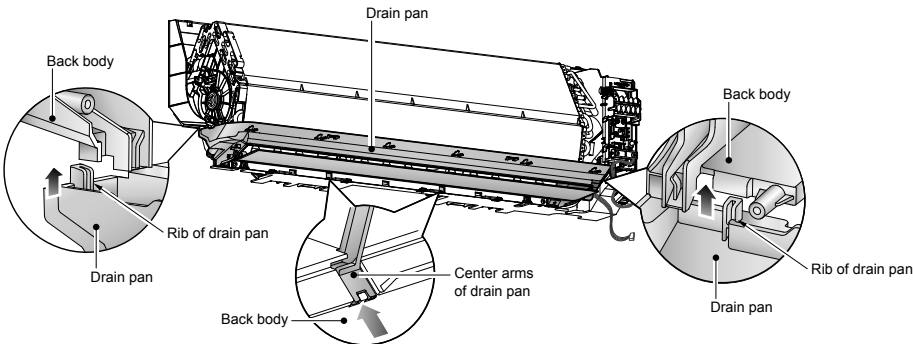
No.	Part name	Procedures	Remarks
⑦	Drain pan assembly	<p><To re-installation></p> <ul style="list-style-type: none"> - Press the drain pan into the back body - Please make sure ribs of drain pan in left and right side must be install to lock position. - Press the center arm of drain pan to back body. <p><05, 07, 10, 13k></p>  <p><16, 18k></p>  <p><24k></p> 	

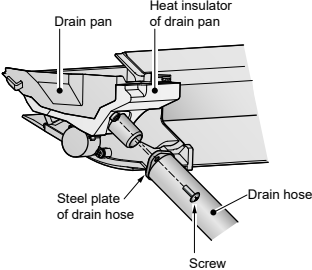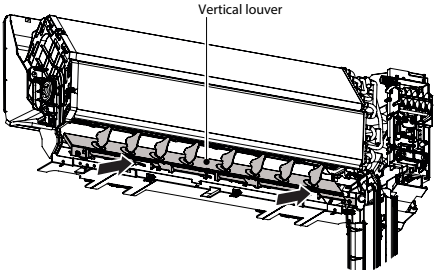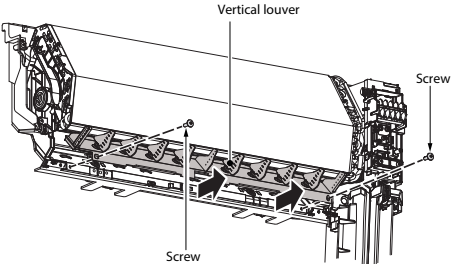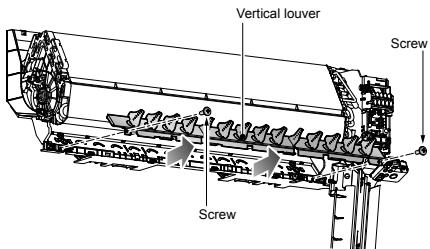No.	Part name	Procedures	Remarks
⑧	Drain hose	<p>1) Follow the procedure item ③.</p> <p>2) The drain hose can be removed by removing the screw securing the drain hose and then pulling out the drain hose.</p> <p>3) When removing the drain hose, be careful of any sharp edges of steel plate. The edges can injuries.</p>  <p><To re-installation> - To install the drain hose, insert the drain hose firmly until the connection part contacts with heat insulator, and then secure it with original screw.</p>	
⑨	Vertical louver assembly	<p>1) Follow the procedure item③and⑦.</p> <p><05, 07, 10, 13k> Remove vertical louver from body back.</p>  <p><16, 18k> Remove 2 fixing screws from the base vertical louver then remove the vertical louver assembly from the body back.</p>  <p><24k> Remove 2 fixing screws from the base vertical louver then remove the vertical louver assembly from the body back.</p> 	

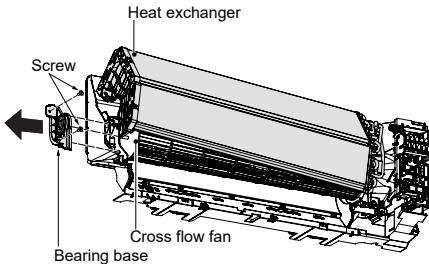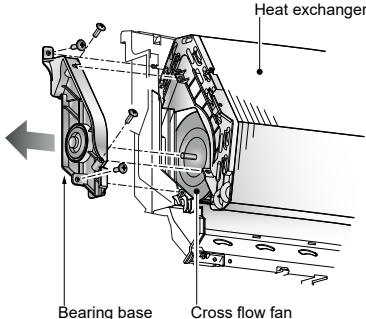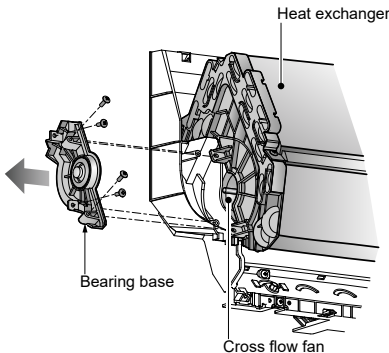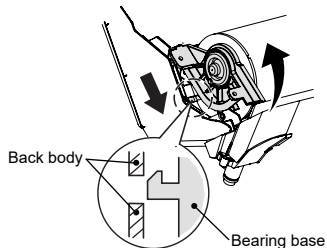No.	Part name	Procedures	Remarks
⑩	Bearing base	<p>1) Follow the procedure item③.</p> <p><05, 07, 10, 13k> Remove 2 fixing screws from the bearing base, then remove it from the main unit.</p>  <p><16, 18k> Remove 4 fixing screws from the bearing base, then remove it from the main unit.</p>  <p><24k> Remove 4 fixing screws from the bearing base, then remove it from the main unit.</p>  <p><Caution at assembling></p> <ul style="list-style-type: none"> – If the bearing is out from the housing, push it into the specified position, then incorporate it in the main unit. 	

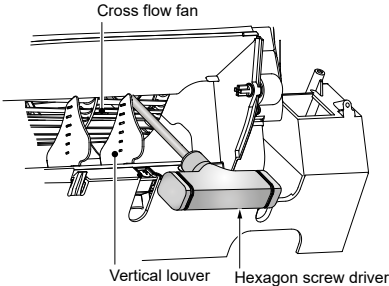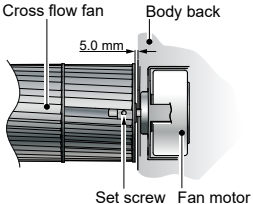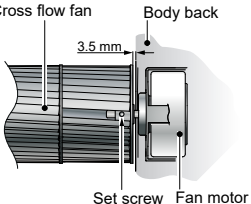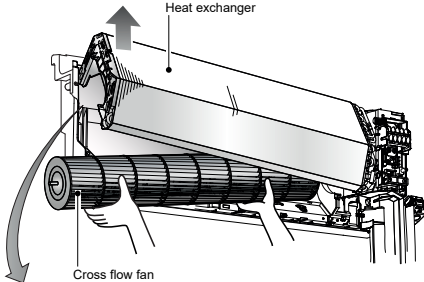No.	Part name	Procedures	Remarks
⑪	Cross flow fan	<p>1) Follow the procedure item ③ ,⑦ and ⑩ .</p> <p>2) Loosen the set screw of the cross flow fan.</p>  <p>3) Lift up the heat exchanger follow the figure. Pull out the left hand side until the cross flow fan is released from the shaft of the fan motor and then pull out the lower side of heat exchanger follow the figure.</p> <p><To re-installation></p> <p>1) To incorporate the fan motor and the motor into the position in the following figure.</p> <ul style="list-style-type: none"> - Install the cross flow fan so that the right end of the 1st joint from the right of the cross flow fan is keep as below from closed wall of the main unit. <div style="display: flex; justify-content: space-around; align-items: flex-end;"> <div style="text-align: center;">  <p>For 05,07,10,13k</p> </div> <div style="text-align: center;">  <p>For 16,18,24k</p> </div> </div> <p>- Holding the set screw, install the cross flow fan so that flat area on shaft of the fan motor comes to the mounting hole of the set screw.</p>	

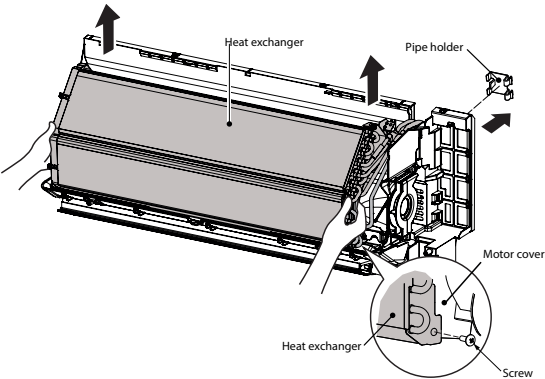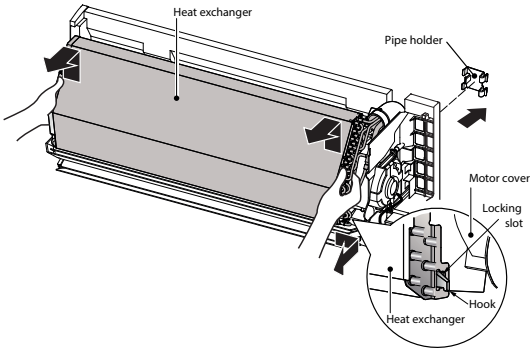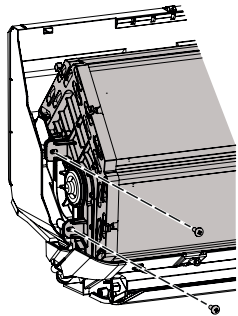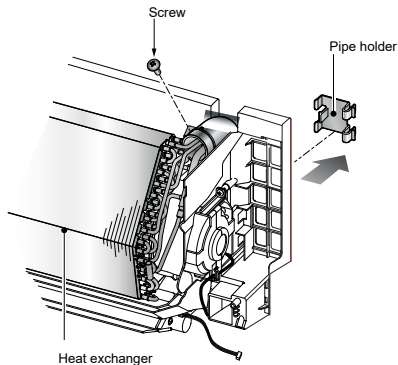
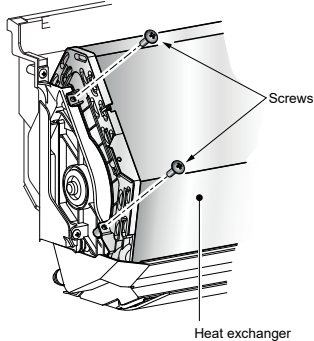
No.	Part name	Procedures	Remarks
⑫	Heat exchanger (Evaporator)	<p>1) Follow the procedure item ③ and ④ .</p> <p><05, 07, 10, 13k></p> <ul style="list-style-type: none"> - Remove 2 fixing screws at the left side of the heat exchanger. - Remove fixing screw at the upper right side of the heat exchanger. - Remove the pipe holder from the rear side of the main unit. - Remove 1 fixing screw from motor cover then pull out the upper side of heater exchange.  <p><16, 18k></p> <ul style="list-style-type: none"> - Remove 2 fixing screws at the left side of the heat exchanger. - Remove fixing screw at the upper right side of the heat exchanger. - Remove the pipe holder from the rear side of the main unit. - Pull out the right hand side until the locking slot of heat exchanger is released from the hook of the motor cover then pull out the upper side of heat exchanger. 	  

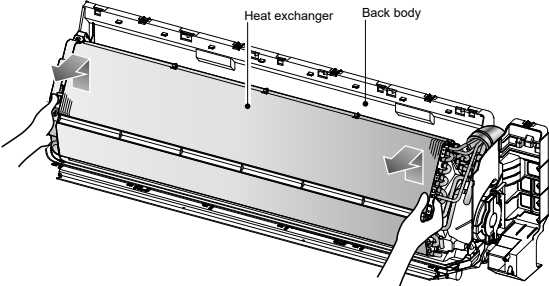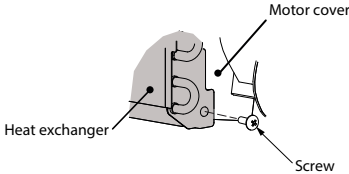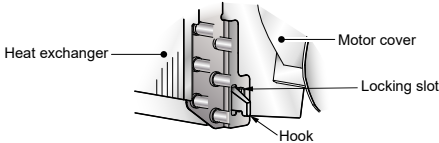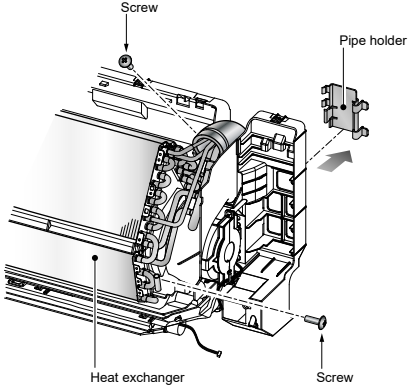
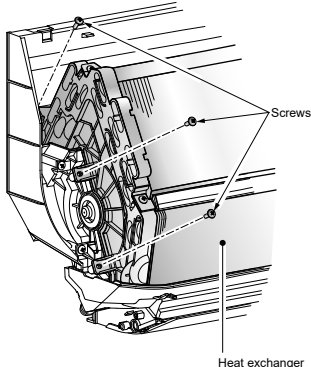

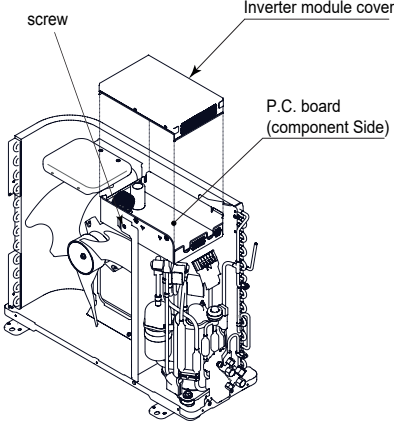
 
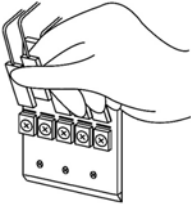
No.	Part name	Procedures	Remarks
⑫	Heat exchanger (Evaporator)	<p><24k></p> <ul style="list-style-type: none"> - Remove 3 fixing screws at the upper left side of the heat exchanger. - Remove 2 fixing screws at the upper and right side of the heat exchanger. - Remove the pipe holder from the rear side of the main unit. - Pull out the heat exchanger to upper side.  <p><To re-installation></p> <ul style="list-style-type: none"> - Keep the back body horizontally and put the heat exchanger carefully to the back body. - Make sure the heat exchanger can be assembled with the back body and secure it tightly with screws. <p><05, 07, 10, 13, 24k></p> <ul style="list-style-type: none"> - Make sure for fixing screw on motor cover locking with heat exchanger.  <p><16, 18k></p> <ul style="list-style-type: none"> - Make sure that the hook of motor cover must be installed into the locking slot of heat exchanger. 	 



Microcomputer


No.	Part name	Procedure	Remarks
①	Common procedure	<ol style="list-style-type: none">1) Turn the power supply off to stop the operation of air-conditioner.2) Remove the front panel.<ul style="list-style-type: none">• Remove the 2 fixing screws.3) Remove the electrical part base.	Replace terminal block, microcomputer ass'y and the P.C. board ass'y.



12-2. Outdoor Unit (RAS-05, 07, 10, 13B2AVG-E2)

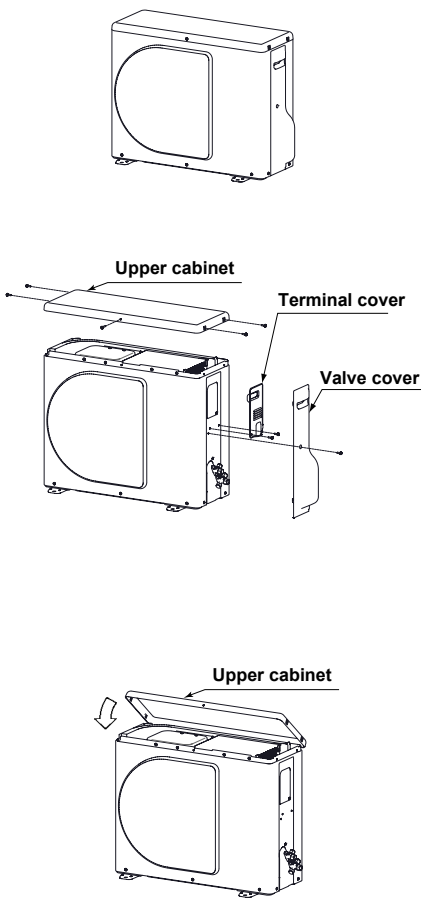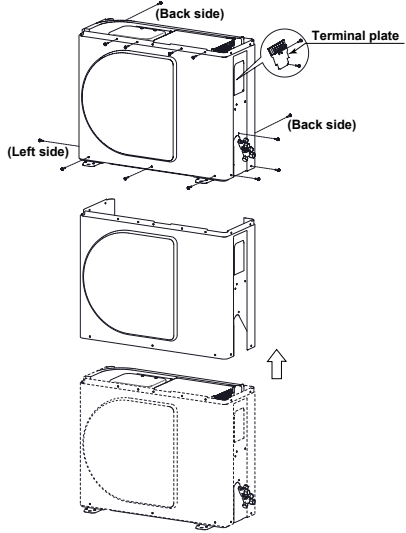No.	Part name	Procedures	Remarks
①	Common procedure	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Stop operation of the air conditioner, and turn off the main switch and breaker of the air conditioner. 2) Remove the valve cover. (ST2TØ4 x 10L 1 pc) <ul style="list-style-type: none"> • After removing screw, remove the valve cover pulling it downward. 3) Remove the wiring cover (ST2TØ4 x 10L 2 pcs.), and then remove the power cord, connecting cable, and cord clamp (ST2TØ4 x 16L 3 pcs.). 4) Remove the upper cabinet. (ST2TØ4 x 10L 5 pcs.) <ul style="list-style-type: none"> • After removing screws, remove the upper cabinet pulling it upward. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Attach the upper cabinet. (ST2TØ4 x 10L 5 pcs.) <ul style="list-style-type: none"> • Hook the rear side of the upper cabinet to the claw of the front cabinet, and then place it on the front cabinet. 2) After connecting the power cord and connecting cable, attach the cord clamp and wiring cover. <ul style="list-style-type: none"> • Put the wiring cover into the front cabinet, and insert the claw which has been hooked to the lower part into the square hole, and then fix it with screw. (ST2TØ4 x 10L 2 pc.) 3) Attach the valve cover. (ST2TØ4 x 10L 1 pc.) <ul style="list-style-type: none"> • Insert the upper part to the front cabinet, set the hook claw of the valve cover to square holes (at three positions) of the main unit, and attach it pushing upward. 	 <p>Upper cabinet</p> <p>Terminal cover</p> <p>Valve cover</p> <p>Upper cabinet</p>
②	Front cabinet	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of item 1 of ①. 2) Remove upper screw (ST2TØ4 x 10L 4 pcs.) of the front cabinet, and lower screws (ST2TØ4 x 10L 8 pcs.) of the front cabinet. <ul style="list-style-type: none"> • Both side of front cabinet envelop the unit, so remove it by pulling sideward. <p>3. Attachment</p> <ol style="list-style-type: none"> 1) Assemble front cabinet to the unit. 2) Attach the removed screws to the original positions. 	 <p>(Back side)</p> <p>Terminal plate</p> <p>(Left side)</p> <p>(Back side)</p>

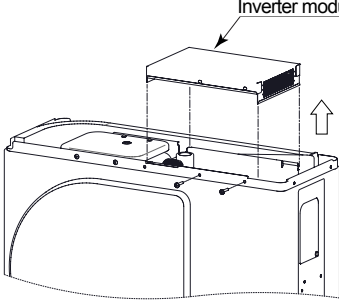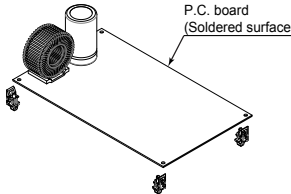
No.	Part name	Procedure	Remarks
③	Inverter assembly	<p>1) Perform work of item 1 in ①.</p> <p>2) Remove screw (ST2TØ4×10L 2 pcs.) of the upper part of the front cabinet.</p> <ul style="list-style-type: none"> • Disconnect connectors all connector on P.C. board. • Take off P.C. board out from spacer under P.C. board. • If there is no space above the unit, perform work of 1 in ②. <div data-bbox="416 566 979 663" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Be careful to check the inverter because high-voltage circuit is incorporated in it.</p> </div> <p>3) Perform discharging by connecting \oplus, \ominus polarity by discharging resistance (approx. 100Ω40W) or plug of soldering iron to \oplus, \ominus terminals a of the C07 (printed "CAUTION HIGH VOLTAGE" is attached.) electrolytic capacitor (500μF) on P.C. board.</p> <div data-bbox="416 927 979 1106" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Be careful to discharge the capacitor because the electrolytic capacitor cannot naturally discharge and voltage remains according to trouble type in some cases.</p> </div> <div data-bbox="416 1155 979 1364" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="text-align: center;">NOTE</p> <p>This capacitor is one with mass capacity. Therefore, it is dangerous that a large spark generates if short-circuiting between \oplus, \ominus</p> </div> <p>4) Remove screw (ST2TØ4 x 10L 4pcs.) fixing the terminal part of inverter box to the main body.</p> <p>5) Remove the front cabinet by performing step 1 in ② , and remove the fixing screws (ST2TØ4 x 10L) for securing the main body and inverter box.</p> <p>6) Disconnect connectors of various lead wires.</p> <div data-bbox="416 1742 979 1917" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="text-align: center;">Requirement</p> <p>As each connector has a lock mechanism, avoid to remove the connector by holding the lead wire, but by holding the connector.</p> </div>	 <p style="text-align: right;">Inverter module cover</p>  <p style="text-align: right;">P.C. board (Soldered surface)</p> <p>Discharging position (Discharging period 10 seconds or more)</p> <p style="text-align: right;">Plug of soldering iron</p>   <p style="text-align: right;">Inverter module cover</p> <p style="text-align: right;">P.C. board (component Side)</p> <p>screw</p>  <p>The connector is one with lock, so remove it while pushing the part indicated by an arrow.</p>  <p>Be sure to remove the connector by holding the connector, not by pulling the lead wire.</p>


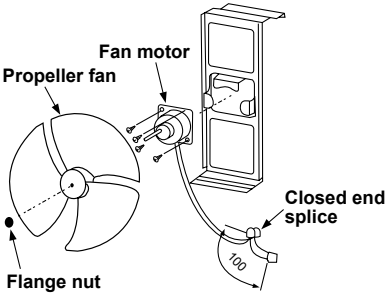
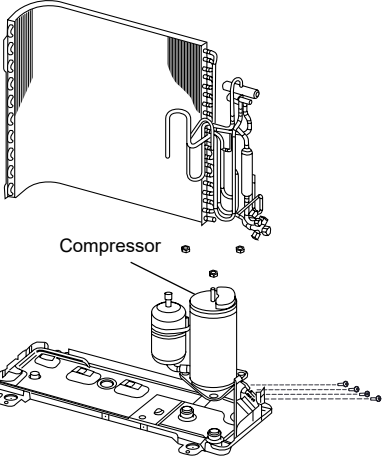
No.	Part name	Procedures	Remarks
④	Fan motor	<ol style="list-style-type: none"> 1) Perform work of item 1 of ① and 1 of ②. 2) Remove the flange nut fixing the fan motor and the propeller fan. <ul style="list-style-type: none"> • Flange nut is loosened by turning clockwise. (To tighten the flange nut, turn counter-clockwise.) 3) Remove the propeller fan. 4) Disconnect the connector for the fan motor from the inverter. 5) Remove the fixing screws (4 pcs.) holding the fan motor by hand so that it does not fall. 6) Cut the motor lead at the point which is 100 mm apart from the connector toward the fan. 7) Use the connector used for the inverter, and pinch the lead wires using the closed end splice. 	
⑤	Compressor	<ol style="list-style-type: none"> 1) Perform work of item 1 of ①, 1 of ② and ③. 2) Extract refrigerant gas. 3) Remove the partition board. (ST2TØ4 x 10L 3 pcs.) 4) Remove the sound-insulation material. 5) Remove the terminal cover of the compressor, and disconnect the lead wire of the compressor thermo and the compressor from the terminal. 6) Remove the pipe connected to the compressor with a burner. <ul style="list-style-type: none"> • Make sure the flame does not touch the 4 way valve. 7) Remove the fixing screw of the base plate and heat exchanger. (ST2TØ4 x 10L 2 pcs.) 8) Pull upward the refrigeration cycle. 9) Remove the nut fixing the compressor to the base plate. 	

 
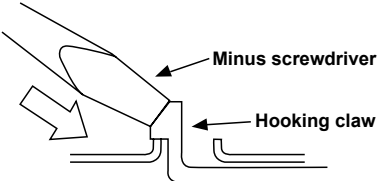

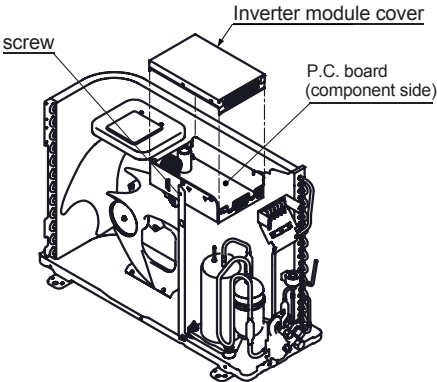
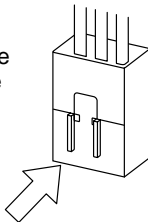
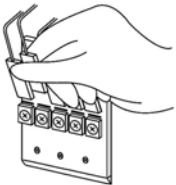
No.	Part name	Procedures	Remarks
⑥	Fan guard	<p>1. Detachment</p> <p>1) Perform work of item 1 of ① and 1 of ②.</p> <div data-bbox="496 324 997 470" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Requirement: Perform the work on a corrugated cardboard, cloth, etc. to prevent scratches to the product.</p> </div> <p>2) Remove the front cabinet, and place it down so that the fan guard side faces downwards.</p> <p>3) Remove the hooking claws by pushing a minus screwdriver according to the arrow mark in the right figure, and remove the fan guard.</p> <p>2. Attachment</p> <p>1) Insert the claws of the fan guard in the hole of the front cabinet. Push the hooking claws (8 positions) by your hand and fix the claws.</p> <div data-bbox="496 929 997 1108" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Requirement: This completes all the attaching work. Check that all the hooking claws are fixed to the specified positions.</p> </div>	 <p>The diagram illustrates the detachment of a hooking claw. A hand is shown using a minus screwdriver to push against the claw. An arrow labeled 'Minus screwdriver' points to the tool, and another arrow labeled 'Hooking claw' points to the component being removed.</p>

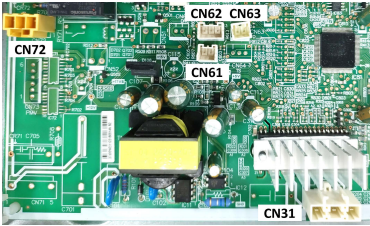

No.	Part name	Procedure	Remarks
⑦	Control board assembly	<p>1. Disconnect the leads and connectors connected to the other parts from the control board assembly.</p> <p>1) Leads</p> <ul style="list-style-type: none"> • 3 leads (black, white, orange) connected to terminal block. • Lead connected to compressor : Disconnect the connector (3P). <p>2) Connectors</p> <p>CN31 : Outdoor fan motor (3P: white)* (*) : See Note</p> <p>CN72 : 4-way valve (2P: yellow)* CN61 : TE sensor (2P: white)* CN62 :TD sensor (3P: white)* CN63 : TO sensor (2P: yellow)</p> <div data-bbox="687 882 783 913" style="text-align: center;">NOTE</div> <div data-bbox="440 925 1015 1016"> <p>These connectors have a disconnect prevention mechanism: as such, the lock on their housing must be released before they are disconnected.</p> </div> <p>2. Remove the control board assembly from the spacer. (Remove the heat sink and control board assembly while keeping them screwed together.)</p> <p>3. Remove the two fixing screws used to secure the heat sink and control board assembly.</p> <p>4. Mount the new control board assembly.</p> <div data-bbox="687 1319 783 1350" style="text-align: center;">NOTE</div> <div data-bbox="440 1361 1023 1453"> <p>When mounting the new control board assembly, ensure that the P.C. board is inserted properly into the spacer support.</p> </div>	 <p>CN31, CN72, CN61, CN62 and CN63 are connectors with locking mechanisms: as such, to disconnect them, they must be pressed in the direction of the arrow while pulling them out.</p> 



Outdoor unit (RAS-16, 18B2AVG-E2)


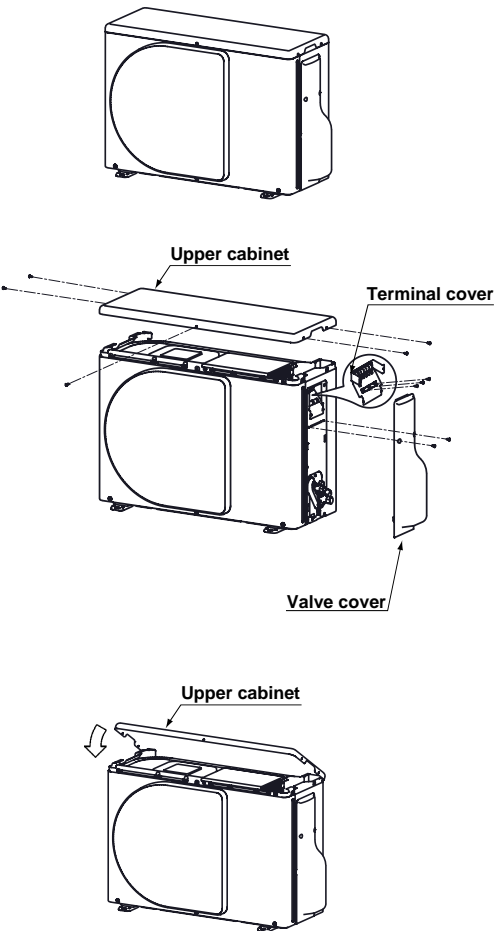
No.	Part name	Procedures	Remarks
①	Common procedure	<p>1. Detachment</p> <div data-bbox="472 309 940 427" style="border: 1px solid black; padding: 5px;"> <p>NOTE</p> <p>Wear gloves for this job. Otherwise, you may injure your hands on the parts, etc.</p> </div> <ol style="list-style-type: none"> 1) Stop operation of the air conditioner, and turn off the main switch of the breaker for air conditioner. 2) Remove the valve cover. (ST2TØ4 × 10L 2 pcs.) <ul style="list-style-type: none"> • After removing screw, remove the valve cover pulling it downward. 3) Remove cord clamp (ST2TØ4 × 14L 3 pcs.), and then remove connecting cable. 4) Remove the upper cabinet. (ST2TØ4 × 10L 5 pcs.) <ul style="list-style-type: none"> • After removing screws, remove the upper cabinet pulling it upward. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Attach the upper cabinet. (ST2TØ4 × 10L 5 pcs.) 2) Perform cabling of connecting cable, and attach the cord clamp. <ul style="list-style-type: none"> • Fix the cord clamp by tightening the screws (ST2TØ4 × 14L 3 pcs.), fitting 2 concave parts of the cord clamp to each connecting cables. 3) Attach the valve cover. (ST2TØ4 × 10L 2 pcs.) <ul style="list-style-type: none"> • Insert the upper part into the square hole of the side cabinet, set hook claws of the valve cover to square holes (at three positions) of the main unit, and attach it pushing upward, 	 <p>The diagram illustrates the process of removing and reattaching the upper cabinet and valve cover of the outdoor unit. The top illustration shows the unit with the upper cabinet, terminal cover, and valve cover being removed. The bottom illustration shows the unit with the upper cabinet and valve cover being attached.</p>

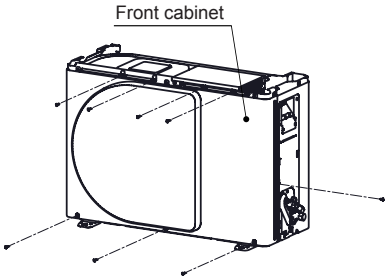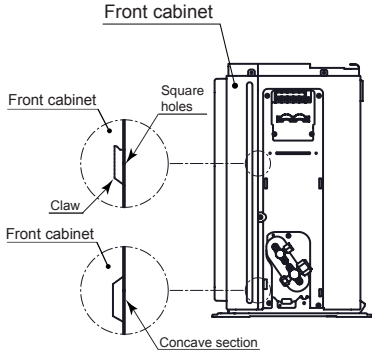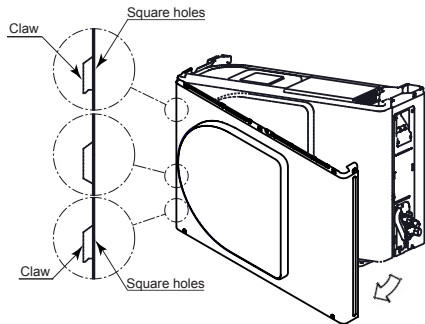No.	Part name	Procedures	Remarks
②	Front cabinet	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform step 1 in ①. 2) Remove the fixing screws (ST2TØ4 × 10L 2 pcs.) used to secure the front cabinet and inverter cover, the screws (ST2TØ4 × 10L 4 pcs.) used to secure the front cabinet at the bottom, and the fixing screws (ST2TØ4 × 10L 2 pcs.) used to secure the motor base. <ul style="list-style-type: none"> • The front cabinet is fitted into the side cabinet (left) at the front left side so pull up the top of the front cabinet to remove it. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Insert the claw on the front left side into the side cabinet (left). 2) Hook the bottom part of the front right side onto the concave section of the bottom plate. Insert the claw of the side cabinet (right) into the square hole in the front cabinet. 3) Return the screws that were removed above to their original positions and attach them. 	  

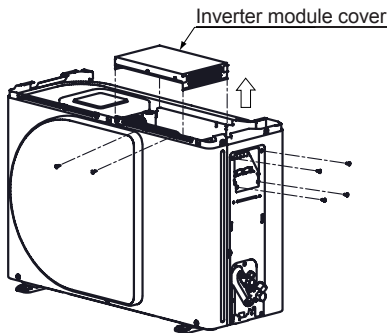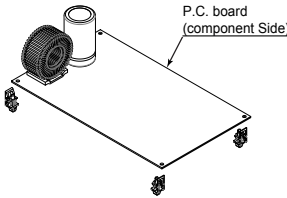No.	Part name	Procedures	Remarks
③	Inverter assembly	<p>1) Perform work of item 1 in ①.</p> <p>2) Remove screw (ST2TØ4x10L 2 pcs.) of the upper part of the front cabinet.</p> <ul style="list-style-type: none"> • Disconnect connectors all connector on P.C. board. • Take off P.C. board out from spacer under P.C. board. • If there is no space above the unit, perform work of 1 in ②. <div data-bbox="416 528 979 624" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Be careful to check the inverter because high-voltage circuit is incorporated in it.</p> </div> <p>3) Perform discharging by connecting \oplus, \ominus polarity by discharging resistance (approx. 100Ω40W) or plug of soldering iron to \oplus, \ominus terminals a of the C07 (printed "CAUTION HIGH VOLTAGE" is attached.) electrolytic capacitor (760μF) on P.C. board.</p> <div data-bbox="416 889 979 1070" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Be careful to discharge the capacitor because the electrolytic capacitor cannot naturally discharge and voltage remains according to trouble type in some cases.</p> </div> <div data-bbox="416 1111 979 1328" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="text-align: center;">NOTE</p> <p>This capacitor is one with mass capacity. Therefore, it is dangerous that a large spark generates if short-circuiting between \oplus, \ominus</p> </div> <p>4) Remove screw (ST2TØ4 x 10L 4pcs.) fixing the terminal part of inverter box to the main body.</p> <p>5) Remove the front cabinet by performing step 1 in ② , and remove the fixing screws (ST2TØ4 x 10L) for securing the main body and inverter box.</p> <p>6) Disconnect connectors of various lead wires.</p> <div data-bbox="416 1688 979 1881" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="text-align: center;">Requirement</p> <p>As each connector has a lock mechanism, avoid to remove the connector by holding the lead wire, but by holding the connector.</p> </div>	 <p style="text-align: right;">Inverter module cover</p>  <p style="text-align: right;">P.C. board (component Side)</p> <p>Discharging position (Discharging period 10 seconds or more)</p>  <p style="text-align: right;">Plug of soldering iron</p>  <p style="text-align: right;">Inverter module cover</p> <p style="text-align: right;">P.C. board (component side)</p> <p>screw</p> <p>The connector is one with lock, so remove it while pushing the part indicated by an arrow.</p>   <p>Be sure to remove the connector by holding the connector, not by pulling the lead wire.</p>

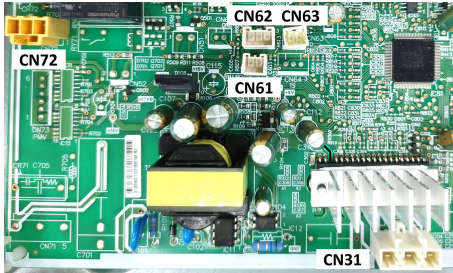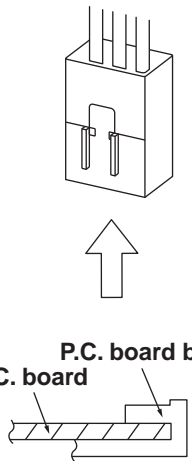No.	Part name	Procedures	Remarks
④	Control board assembly	<p>1. Disconnect the leads and connectors connected to the other parts from the control board assembly.</p> <p>1) Leads</p> <ul style="list-style-type: none"> • 3 leads (black, white, orange) connected to terminal block. • Lead connected to compressor : Disconnect the connector (3P). <p>2) Connectors</p> <p>CN31 : Outdoor fan motor (3P: white)* (*) : See Note CN72 : 4-way valve (2P: yellow)* CN61 : TE sensor (2P: white)* CN62 :TD sensor (3P: white)* CN63 : TO sensor (2P: yellow)</p> <div data-bbox="459 741 932 887" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="text-align: center;">NOTE</p> <p>These connectors have a disconnect prevention mechanism: as such, the lock on their housing must be released before they are disconnected.</p> </div> <p>2. Remove the control board assembly from the P.C. board base. (Remove the heat sink a control board assembly while keeping them screwed together.)</p> <div data-bbox="459 1039 932 1128" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="text-align: center;">NOTE</p> <p>Disengage the four claws of the P.C. board base, hold the heat sink, and lift to remove it.</p> </div> <p>3. Remove the two fixing screws used to secure the heat sink and control board assembly.</p> <p>4. Mount the new control board assembly.</p> <div data-bbox="459 1267 932 1413" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="text-align: center;">NOTE</p> <p>When mounting the new control board assembly, ensure that the P.C. board is inserted properly into the P.C. board support groove.</p> </div>	 <p>CN31,CN72,CN61,CN62 and CN63 are connectors with locking mechanisms: as such, to disconnect them, they must be pressed in the direction of the arrow while pulling them out.</p> <div data-bbox="1043 804 1315 1263" style="text-align: center;">  <p>P.C. board base P.C. board</p> </div>

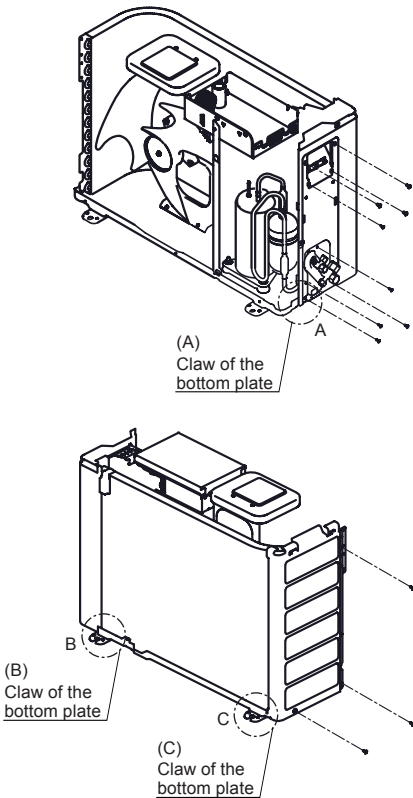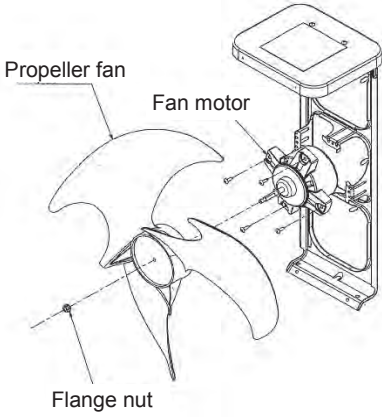No.	Part name	Procedures	Remarks
⑤	Side cabinet	<p>1. Side cabinet (right)</p> <ol style="list-style-type: none"> 1) Perform step 1 in ② and all the steps in ③. 2) Remove the fixing screw (ST2TØ4 × 10L 4 pcs.) used for securing the side cabinet to the bottom plate and valve fixing panel. <p>2. Side cabinet (left)</p> <ol style="list-style-type: none"> 1) Perform step 1 in ②. 2) Remove the fixing screw (ST2TØ4 × 10L 1 pc.) used to secure the side cabinet (left) onto the heat exchanger. 3) Remove the fixing screw (ST2TØ4 × 10L 2 pcs.) used for securing the side cabinet to the bottom plate and heat exchanger. 	
⑥	Fan motor	<ol style="list-style-type: none"> 1) Perform work of item 1 of ① and ②. 2) Remove the flange nut fixing the fan motor and the propeller. <ul style="list-style-type: none"> • Flange nut is loosened by turning clockwise. (To tighten the flange nut, turn counterclockwise.) 3) Remove the propeller fan. 4) Disconnect the connector for fan motor from the inverter. 5) Remove the fixing screws (4 pcs.) holding by hands so that the fan motor does not fall. <p>* Precautions when assembling the fan motor Tighten the flange nut using a tightening torque of 4.9 N•m.</p>	

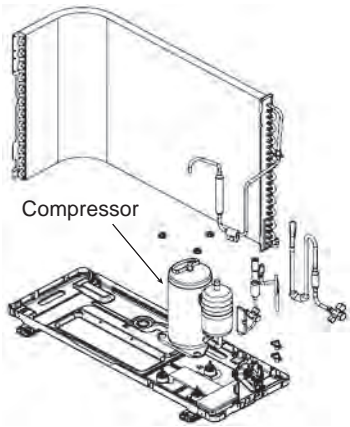 No.	Part name	Procedures	Remarks
⑦	Compressor	<ol style="list-style-type: none"> 1) Perform work of item 1 of ① and ②, ③, ④, ⑤. 2) Extract refrigerant gas. 3) Remove the partition board. (ST2TØ4 × 10L 3 pcs.) 4) Remove the sound-insulation material. 5) Remove terminal cover of the compressor, and disconnect lead wire of the compressor from the terminal. 6) Remove pipe connected to the compressor with a burner. 7) Remove the fixing screw of the bottom plate and heat exchanger. (ST2TØ4 × 10L 1 pc.) 8) Remove the fixing screw of the bottom plate and valve fixing plate. (ST2TØ4 × 10L 1 pc.) 9) Pull upward the refrigeration cycle. 10) Remove NUT (3 pcs. fixing the compressor to the bottom plate. 	
⑧	Fan Guard	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of item 1 of ②. 2) Remove the front cabinet, and put it down so that fan guard side directs downward. <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Perform work on a corrugated cardboard, cloth, etc. to prevent flaw to the product.</p> </div> <ol style="list-style-type: none"> 3) Remove the hooking claws by pushing minus screwdriver according to the arrow mark in the right figure, and remove the fan guard. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Insert claws of the fan guard in the holes of the front cabinet. Push the hooking claws (9 positions) by hands and fix the claws. <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>All the attaching works have completed. Check that all the hooking claws are fixed to the specified positions.</p> </div>	

No.	Part name	Procedures	Remarks
⑨	TS sensor (Suction pipe temperature sensor)	<ul style="list-style-type: none">• Attachment Install the sensor onto the straight pipe part of the suction pipe. Be careful for the lead direction of the sensor.	
⑩	TD sensor (Discharge pipe temperature sensor)	<ul style="list-style-type: none">• Attachment With its leads pointed upward, install the sensor onto the vertical straight pipe part of the discharge pipe.	
⑪	TO sensor (Outside air temperature sensor)	<ul style="list-style-type: none">• Attachment Insert the outdoor air temperature sensor into the holder, and install the holder onto the heat exchanger.	


 

 

CAUTION



During the installation work (and on its completion), take care not to damage the coverings of the sensor leads on the edges of the metal plates or other parts. It is dangerous for these coverings to be damaged since damage may cause electric shocks and/or a fire.




CAUTION




After replacing the parts, check whether the positions where the sensors were installed are the proper positions as instructed. The product will not be controlled properly and trouble will result if the sensors have not been installed in their proper positions.







Outdoor unit (RAS-24B2AVG-E2)

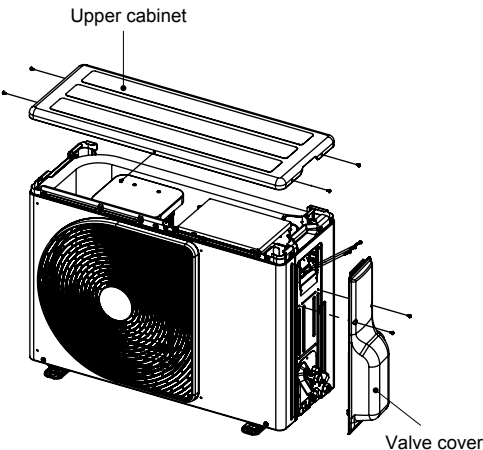

No.	Part name	Procedures	Remarks
①	Common procedure	<p>1. Detachment</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="text-align: center;">NOTE</p> <p>Wear gloves for this job. Otherwise, you may injure your hands on the parts, etc.</p> </div> <ol style="list-style-type: none"> 1) Stop operation of the air conditioner, and turn off the main switch of the breaker for air conditioner. 2) Remove the valve cover. (ST2TØ4 × 10L 2 pcs.) <ul style="list-style-type: none"> • After removing screw, remove the valve cover pulling it downward. 3) Remove cord clamp (ST2TØ4 × 14L 3 pcs.), and then remove connecting cable. 4) Remove the upper cabinet. (ST2TØ4 × 10L 5 pcs.) <ul style="list-style-type: none"> • After removing screws, remove the upper cabinet pulling it upward. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Attach the upper cabinet. (ST2TØ4 × 10L 5 pcs.) 2) Perform cabling of connecting cable, and attach the cord clamp. <ul style="list-style-type: none"> • Fix the cord clamp by tightening the screws (ST2TØ4 × 14L 3 pcs.), fitting concave parts of the cord clamp to each connecting cables. 3) Attach the valve cover. (ST2TØ4 × 10L 2 pcs.) <ul style="list-style-type: none"> • Insert the upper part into the square hole of the side cabinet, set hook claws of the valve cover to square holes (at three positions) of the main unit, and attach it pushing upward, 	 <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <div style="text-align: center;">  (ST1TØ4 × 10L) </div> <div style="text-align: center;">  (ST2TØ4 × 10L) </div> <div style="text-align: center;">  (ST2TØ4 × 14L) </div> <div style="text-align: center;">  (ST2TØ4 × 20L) </div> </div>

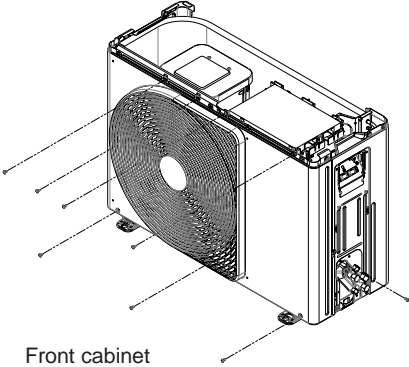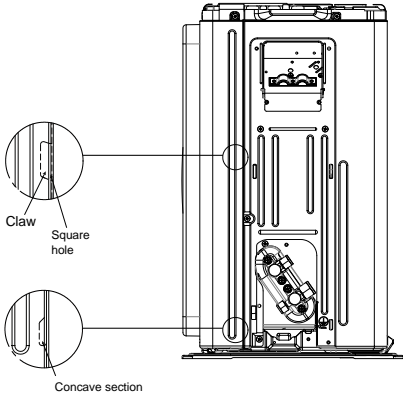No.	Part name	Procedures	Remarks
②	Front cabinet	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform step 1 in ①. 2) Remove the fixing screws (ST2TØ4 × 10L 2 pcs.) used to secure the front cabinet and inverter cover, the screws (ST2TØ4 × 10L 4 pcs.) used to secure the front cabinet at the bottom, and the fixing screws (ST2TØ4 × 10L 2 pcs.) used to secure the motor base. <ul style="list-style-type: none"> • The front cabinet is fitted into the side cabinet (left) at the front left side so pull up the top of the front cabinet to remove it. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Insert the claw on the front left side into the side cabinet (left). 2) Hook the bottom part of the front right side onto the concave section of the bottom plate. Insert the claw of the side cabinet (right) into the square hole in the front cabinet. 3) Return the screws that were removed above to their original positions and attach them. 	 <p>Front cabinet</p>  <p>Claw Square hole</p> <p>Concave section</p>

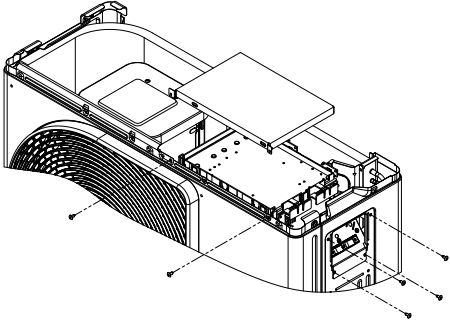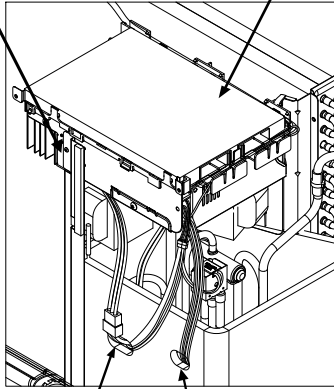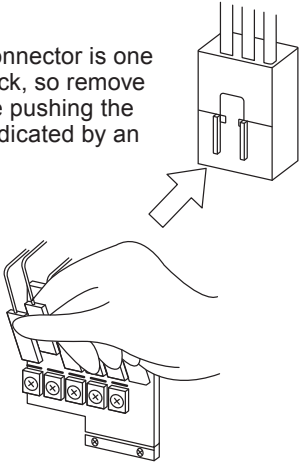No.	Part name	Procedures	Remarks
③	Inverter assembly	<p>1) Perform work of item 1 in ①.</p> <p>2) Remove screw (ST2TØ4 × 10L 2 pcs.) of the upper part of the front cabinet.</p> <ul style="list-style-type: none"> • If removing the inverter cover in this condition, P.C. board can be checked. • If there is no space above the unit, perform work of 1 in ②. <div data-bbox="456 432 928 504" style="border: 1px solid black; padding: 5px;"> <p>Be careful to check the inverter because high-voltage circuit is incorporated in it.</p> </div> <p>3) Perform discharging by connecting ⊕, ⊖ polarity by discharging resistance (approx. 100Ω40W) or plug of soldering iron ⊕ to ⊖, terminals a of the C10, C11 (printed "CAUTION HIGH VOLTAGE" is attached.) electrolytic capacitor (500μF) on P.C. board.</p> <div data-bbox="456 692 928 819" style="border: 1px solid black; padding: 5px;"> <p>Be careful to discharge the capacitor because the electrolytic capacitor cannot naturally discharge and voltage remains according to trouble type in some cases.</p> </div> <div data-bbox="456 851 928 996" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">NOTE</p> <p>This capacitor is one with mass capacity. Therefore, it is dangerous that a large spark generates if short-circuiting between ⊕, ⊖</p> </div> <p>4) Remove screw (ST2TØ4 x 10L 4pcs.) fixing the terminal part of inverter box to the main body.</p> <p>5) Remove the front cabinet by performing step 1 in ②, and remove the fixing screws (ST2TØ4 x 10L) for securing the main body and inverter box.</p> <p>6) Remove various lead wires from the holder at upper part of the inverter box.</p> <p>7) Pull the inverter box upward.</p> <p>8) Disconnect connectors of various lead wires.</p> <div data-bbox="456 1361 928 1480" style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Requirement</p> <p>As each connector has a lock mechanism, avoid to remove the connector by holding the lead wire, but by holding the connector.</p> </div>	 <p>Discharging position (Discharging period 10 seconds or more)</p> <p>Plug of soldering iron</p> <p>A screw (ST2TØ4 x 10L)</p> <p>P.C. board (Soldered surface)</p>  <p>Put the compressor leads through the hole.</p> <p>Put each leads through the hole.</p> <p>The connector is one with lock, so remove it while pushing the part indicated by an arrow.</p>  <p>Be sure to remove the connector by holding the connector, not by pulling the lead wire.</p>

 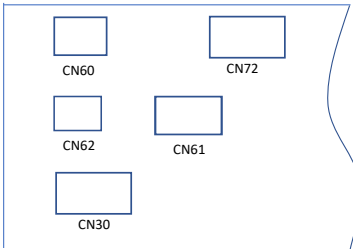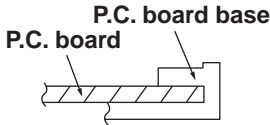No.	Part name	Procedures	Remarks
④	Control board assembly	<p>1. Disconnect the leads and connectors connected to the other parts from the control board assembly.</p> <p>1) Leads</p> <ul style="list-style-type: none"> • 3 leads (black, white, orange) connected to terminal block. • Lead connected to compressor : Disconnect the connector (3P). <p>2) Connectors</p> <p>CN30 : Outdoor fan motor (3P: white)* (* : See Note) CN72 : 4-way valve (2P: yellow)* CN60 : TE sensor (2P: white)* CN61 : TD sensor (3P: white)* CN62 : TO sensor (2P: yellow)</p> <div style="border: 1px solid black; padding: 5px; text-align: center; margin: 10px 0;"> NOTE </div> <p>These connectors have a disconnect prevention mechanism: as such, the lock on their housing must be released before they are disconnected.</p> <p>2. Remove the control board assembly from the spacer. (Remove the heat sink and control board assembly while keeping them screwed together.)</p> <p>3. Remove the two fixing screws used to secure the heat sink and control board assembly.</p> <p>4. Mount the new control board assembly.</p> <div style="border: 1px solid black; padding: 5px; text-align: center; margin: 10px 0;"> NOTE </div> <p>When mounting the new control board assembly, ensure that the P.C. board is inserted properly into the spacer support.</p>	<div style="border: 1px solid black; padding: 10px; margin-bottom: 20px;">  </div> <p>CN30, CN72, CN60, CN61 and CN62 are connectors with locking mechanisms: as such, to disconnect them, they must be pressed in the direction of the arrow while pulling them out.</p> <div style="text-align: center; margin: 20px 0;">  </div> <div style="text-align: center;">  <p>P.C. board base P.C. board</p> </div>

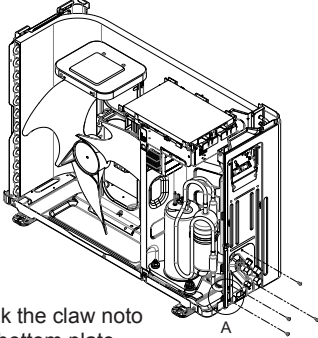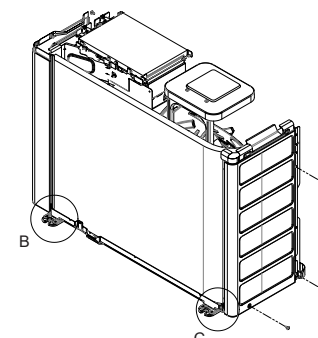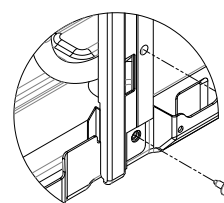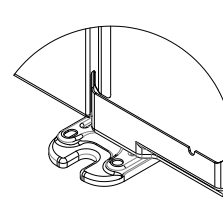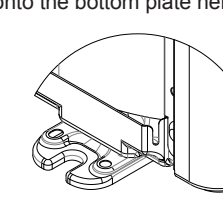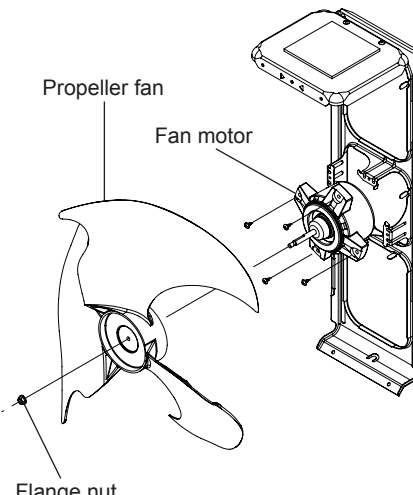No.	Part name	Procedures	Remarks
⑤	Side cabinet	<p>1. Side cabinet (right)</p> <ol style="list-style-type: none"> 1) Perform step 1 in ② and all the steps in ③. 2) Remove the fixing screw (ST2TØ4 × 10L 4 pcs.) used for securing the side cabinet to the bottom plate and valve fixing panel <p>2. Side cabinet (left)</p> <ol style="list-style-type: none"> 1) Perform step 1 in ②. 2) Remove the fixing screw (ST2TØ4 × 10L 1 pc.) used to secure the side cabinet (left) onto the heat exchanger. 3) Remove the fixing screw (ST2TØ4 × 10L 2 pcs.) used for securing the side cabinet to the bottom plate and heat exchanger. 	 <p>Hook the claw onto the bottom plate</p>  <p>The back body section hooked onto the bottom plate here.</p> <div style="display: flex; justify-content: space-around; align-items: flex-end;"> <div style="text-align: center;">  <p>Detail A</p> </div> <div style="text-align: center;">  <p>Detail B</p> </div> <div style="text-align: center;">  <p>Detail C</p> </div> </div>
⑥	Fan motor	<ol style="list-style-type: none"> 1) Perform work of item 1 of ① and ②. 2) Remove the flange nut fixing the fan motor and the propeller. <ul style="list-style-type: none"> • Flange nut is loosened by turning clockwise. (To tighten the flange nut, turn counterclockwise.) 3) Remove the propeller fan. 4) Disconnect the connector for fan motor from the inverter. 5) Remove the fixing screws (4 pcs.) holding by hands so that the fan motor does not fall. <ul style="list-style-type: none"> * Precautions when assembling the fan motor Tighten the flange nut using a tightening torque of 4.9 N•m. 	 <p>Propeller fan</p> <p>Fan motor</p> <p>Flange nut</p>

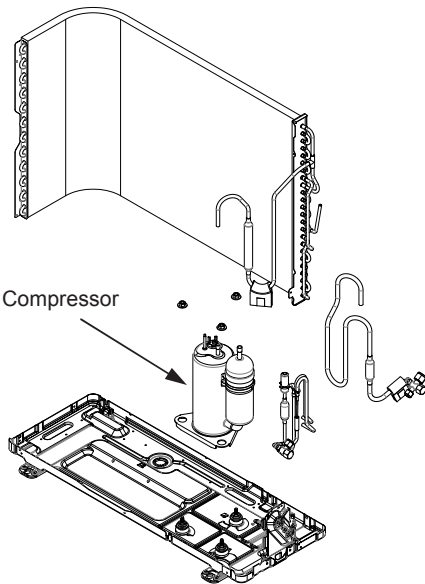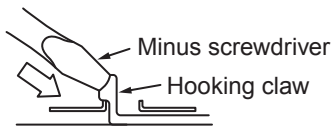No.	Part name	Procedures	Remarks
⑦	Compressor	<ol style="list-style-type: none"> 1) Perform work of item 1 of ① and ②, ③, ④, ⑤. 2) Extract refrigerant gas. 3) Remove the partition board. (ST2TØ4 × 10L 3 pcs.) 4) Remove the sound-insulation material. 5) Remove terminal cover of the compressor, and disconnect lead wire of the compressor from the terminal. 6) Remove pipe connected to the compressor with a burner. 7) Remove the fixing screw of the bottom plate and heat exchanger. (ST2TØ4 × 10L 1 pc.) 8) Remove the fixing screw of the bottom plate and valve fixing plate. (ST2TØ4 × 10L 1 pc.) 9) Pull upward the refrigeration cycle. 10) Remove NUT (3 pcs. fixing the compressor to the bottom plate. 	
⑧	Fan Guard	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of item 1 of ② . 2) Remove the front cabinet, and put it down so that fan guard side directs downward. <div data-bbox="464 1171 935 1245" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Perform work on a corrugated cardboard, cloth, etc. to prevent flaw to the product.</p> </div> <ol style="list-style-type: none"> 3) Remove the hooking claws by pushing minus screwdriver according to the arrow mark in the right figure, and remove the fan guard. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Insert claws of the fan guard in the holes of the front cabinet. Push the hooking claws (9 positions) by hands and fix the claws <div data-bbox="464 1552 935 1648" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>All the attaching works have completed. Check that all the hooking claws are fixed to the specif ed positions.</p> </div>	

No.	Part name	Procedures	Remarks
⑨	TE sensor (outdoor heat exchanging temperature sensor)	<ul style="list-style-type: none">• Attachment Install the sensor onto the straight pipe part of the condenser output pipe.	
⑩	TD sensor (Discharge pipe temperature sensor)	<ul style="list-style-type: none">• Attachment With its leads pointed upward, install the sensor onto the vertical straight pipe part of the discharge pipe.	
⑪	TO sensor (Outside air temperature sensor)	<ul style="list-style-type: none">• Attachment Insert the outdoor air temperature sensor into the holder, and install the holder onto the heat exchanger.	

CAUTION

During the installation work (and on its completion), take care not to damage the coverings of the sensor leads on the edges of the metal plates or other parts. It is dangerous for these coverings to be damaged since damage may cause electric shocks and/or a fire.


CAUTION

After replacing the parts, check whether the positions where the sensors were installed are the proper positions as instructed. The product will not be controlled properly and trouble will result if the sensors have not been installed in their proper positions.

13. EXPLODED VIEWS AND PARTS LIST


13-1. Indoor Unit

RAS-B05, 07, 10, 13B2KV2G-E

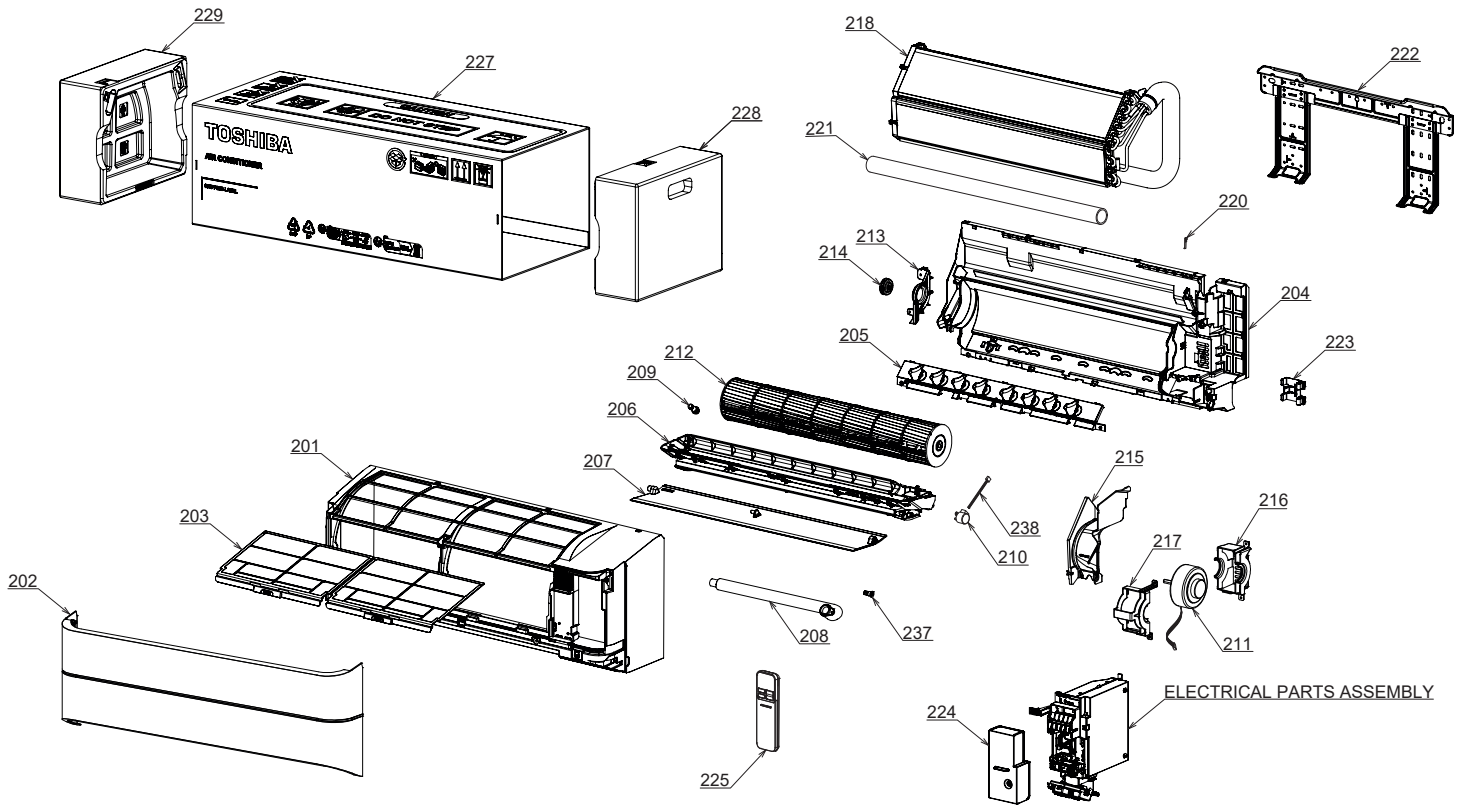


Location No.	Part No.	Description	Location No.	Part No.	Description
201	43T00933	FRONT PANEL ASSY	217	43T39369	MOTOR BAND FRONT
202	43T09663	GRILLE OF AIR INLET ASSY	218	43T44878	REFRIGERANT CYCLE ASSEMBLY (FOR RAS-B05,07B2KV2G-E)
203	43T80374	AIR FILTER	218	43T44879	REFRIGERANT CYCLE ASSEMBLY (FOR RAS-B10,13B2KV2G-E)
204	43T03426	BACK BODY ASSY	220	43T19333	HOLDER, SENSOR
205	43T22399	VERTICAL LOUVER ASSY	221	43T11341	PIPE-SHIELD
206	43T72384	DRAIN PAN ASSY	222	43T82356	PLATE, INSTALLATION
207	43T22388	HORIZONTAL LOUVER	223	43T49368	PIPE HOLDER
208	43T70321	DRAIN HOSE	224	43T62420	TERMINAL COVER ASSY
209	43T79322	DRAIN CAP	225	43T66485	WIRELESS REMOCO (WH-TG01NE)
210	43T21434	STEPPING-MOTOR	227	43T91450	PACKING SLEEVE
211	43T21462	MOTOR FAN	228	43T91451	PACKING CUSHION RIGHT
212	43T20367	CROSS FLOW FAN ASSY	229	43T91452	PACKING CUSHION LEFT
213	43T39466	BASE BEARING	237	43125202	COVER-AXIS
214	43T22312	BEARING ASSY, MOLD	238	43T60382	MOTOR CORD
215	43T39444	MOTOR COVER			
216	43T39443	MOTOR BAND BACK ASSY			

RAS-B05, 07, 10, 13B2KVG-E2

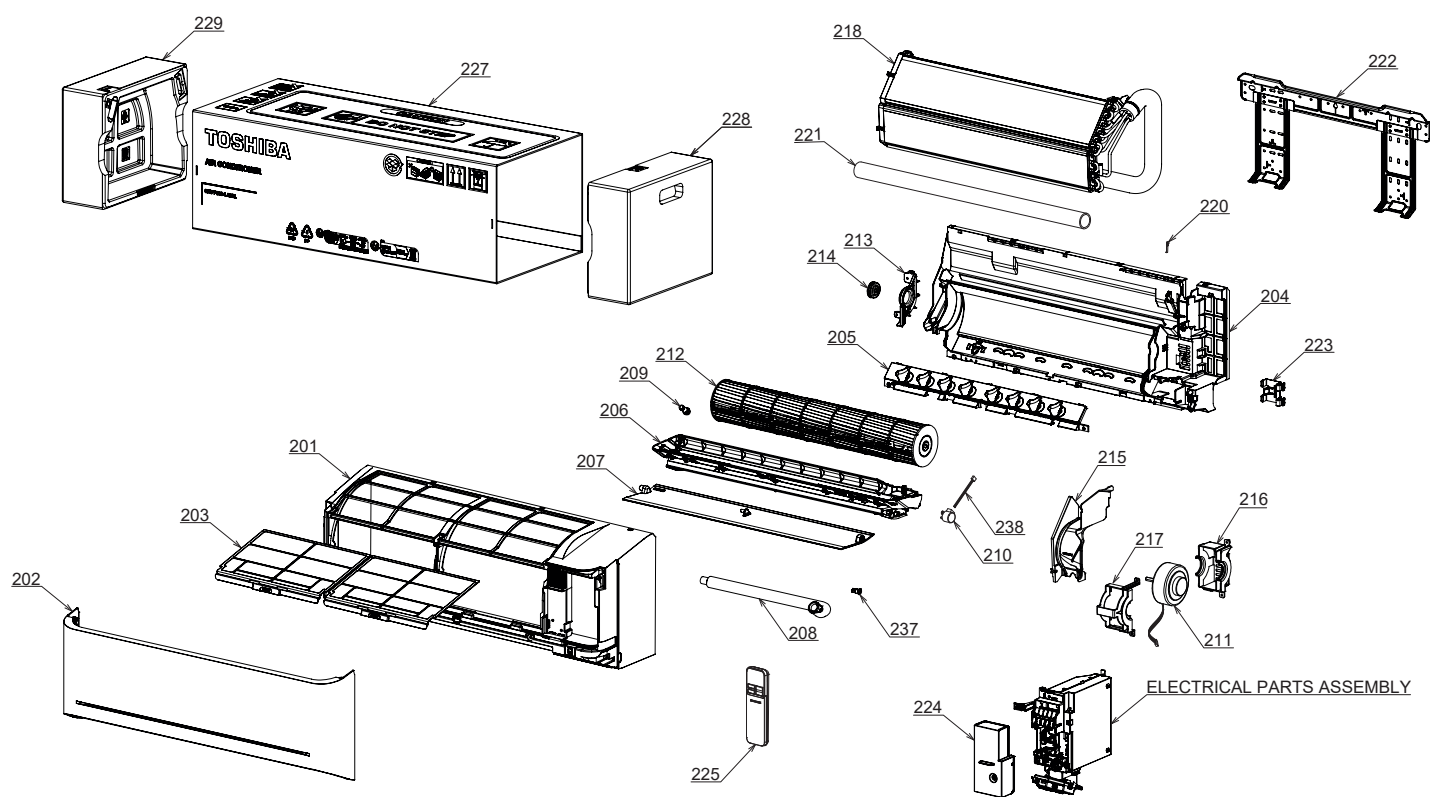


Location No.	Part No.	Description	Location No.	Part No.	Description
201	43T00933	FRONT PANEL ASSY	217	43T39369	MOTOR BAND FRONT
202	43T09612	GRILLE OF AIR INLET ASSY	218	43T44878	REFRIGERANT CYCLE ASSEMBLY (FOR RAS-B05,07B2KVG-E2)
203	43T80374	AIR FILTER	218	43T44879	REFRIGERANT CYCLE ASSEMBLY (FOR RAS-B10,13B2KVG-E2)
204	43T03426	BACK BODY ASSY	220	43T19333	HOLDER, SENSOR
205	43T22399	VERTICAL LOUVER ASSY	221	43T11341	PIPE-SHIELD
206	43T72384	DRAIN PAN ASSY	222	43T82356	PLATE, INSTALLATION
207	43T22388	HORIZONTAL LOUVER	223	43T49368	PIPE HOLDER
208	43T70321	DRAIN HOSE	224	43T62420	TERMINAL COVER ASSY
209	43T79322	DRAIN CAP	225	43T66485	WIRELESS REMOCO (WH-TG01NE)
210	43T21434	STEPPING-MOTOR	227	43T91450	PACKING SLEEVE
211	43T21462	MOTOR FAN	228	43T91451	PACKING CUSHION RIGHT
212	43T20367	CROSS FLOW FAN ASSY	229	43T91452	PACKING CUSHION LEFT
213	43T39466	BASE BEARING	237	43125202	COVER-AXIS
214	43T22312	BEARING ASSY, MOLD	238	43T60382	MOTOR CORD
215	43T39444	MOTOR COVER			
216	43T39443	MOTOR BAND BACK ASSY			

RAS-B16, 18B2KV2G-E (B2KVG-E2)

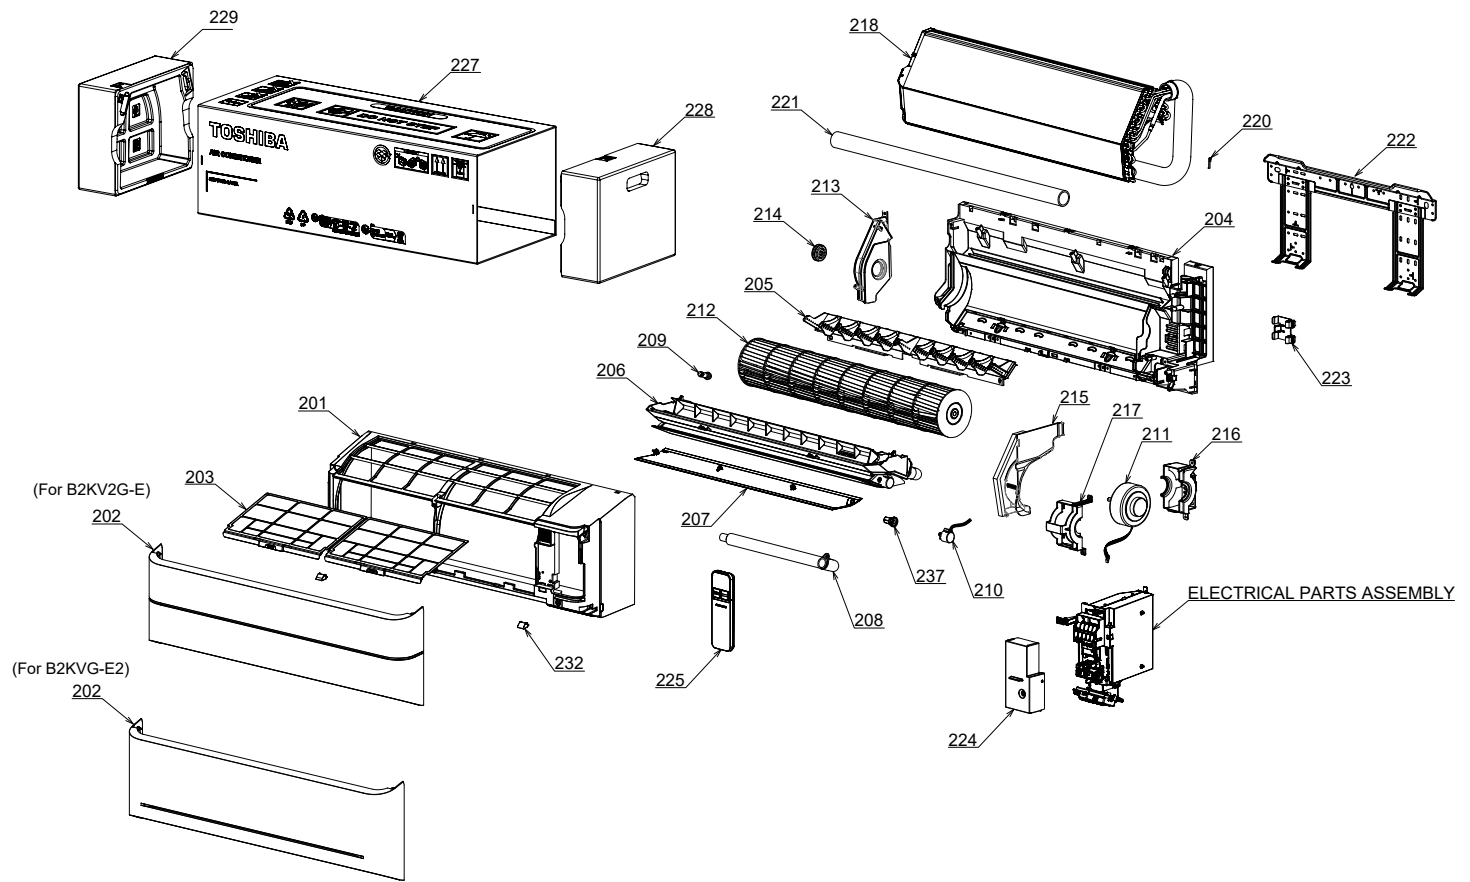

Location No.	Part No.	Description	Location No.	Part No.	Description
201	43T00863	FRONT PANEL ASSY	216	43T39441	MOTOR BAND BACK ASSY
202	43T09613	GRILLE OF AIR INLET ASSY (FOR RAS-B16,18B2KVG-E2)	217	43T39369	MOTOR BAND FRONT
202	43T09664	GRILLE OF AIR INLET ASSY (FOR RAS-B16,18B2KV2G-E)	218	43T44880	REFRIGERANT CYCLE ASSEMBLY (FOR RAS-B16B2KV2G-E,B2KVG-E2)
203	43T80375	AIR FILTER	218	43T44881	REFRIGERANT CYCLE ASSEMBLY (FOR RAS-B18B2KV2G-E,B2KVG-E2)
204	43T03417	BACK BODY ASSY	220	43T19333	HOLDER, SENSOR
205	43T22343	VERTICAL LOUVER ASSY	221	43T11341	PIPE-SHIELD
206	43T72413	DRAIN PAN ASSY	222	43T82356	PLATE, INSTALLATION
207	43T22345	HORIZONTAL LOUVER	223	43T49368	PIPE HOLDER
208	43T70321	DRAIN HOSE	224	43T62420	TERMINAL COVER ASSY
209	43T79322	DRAIN CAP	225	43T66485	WIRELESS REMOCO (WH-TG01NE)
210	43T21546	STEPPING-MOTOR (24BYJ48-STHL)	227	43T91453	PACKING SLEEVE
211	43T21543	FAN-MOTOR(WDF-340-30CA)	228	43T91454	PACKING CUSHION RIGHT
212	43T20344	CROSS FLOW FAN ASSY	229	43T91455	PACKING CUSHION LEFT
213	43T39365	BASE BEARING	232	4301V149	CAP-SCREW
214	43T22312	BEARING ASSY, MOLD	237	4301V148	COVER-AXIS
215	43T39364	MOTOR COVER			


RAS-B24B2KV2G-E (B2KVG-E2)

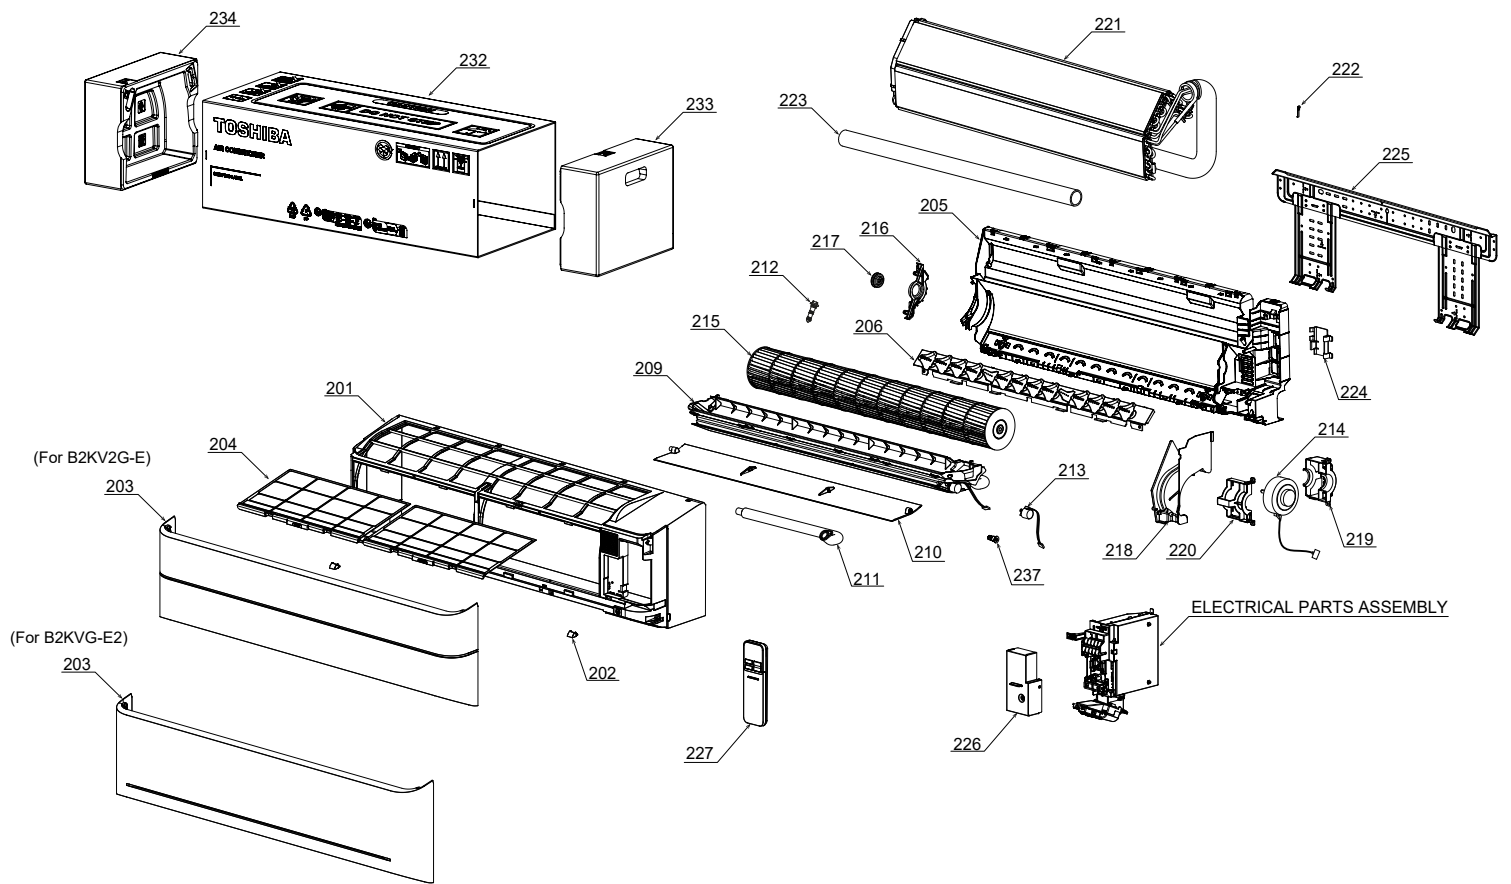

Location No.	Part No.	Description	Location No.	Part No.	Description
201	43T00882	FRONT PANEL ASSY	216	43T39467	BASE BEARING
202	43T00715	CAP SCREW	217	43T22312	BEARING ASSY, MOLD
203	43T09614	GRILLE OF AIR INLET ASSY (FOR RAS-B24B2KVG-E2)	218	43T39383	MOTOR COVER
203	43T09665	GRILLE OF AIR INLET ASSY (FOR RAS-B24B2KV2G-E)	219	43T39455	MOTOR BAND BACK ASSY
204	43T80376	AIR FILTER	220	43T39382	MOTOR BAND FRONT
205	43T03407	BACK BODY ASSY	221	43T44883	REFRIGERANT CYCLE ASSEMBLY
206	43T22357	VERTICAL LOUVER ASSY	222	43T19333	HOLDER, SENSOR
209	43T72414	DRAIN PAN ASSY	223	43T11342	PIPE-SHIELD
210	43T22354	HORIZONTAL LOUVER	224	43T49413	HOLDER, PIPE
211	43T70321	DRAIN HOSE	225	43T82357	PLATE, INSTALLATION
212	43T79322	DRAIN CAP	226	43T62420	TERMINAL COVER ASSY
213	43T21546	STEPPING-MOTOR (24BYJ48-STHL)	227	43T66485	WIRELESS REMOCO (WH-TG01NE)
214	43T21543	FAN-MOTOR(WDF-340-30CA)	232	43T91456	PACKING SLEEVE
215	43T20357	CROSS FLOW FAN ASSY	233	43T91457	PACKING CUSHION RIGHT
			234	43T91458	PACKING CUSHION LEFT
			237	43125202	COVER-AXIS


13-2. Indoor Unit (Part-E)

RAS-B05, 07, 10, 13B2KV2G-E (B2KVG-E2)

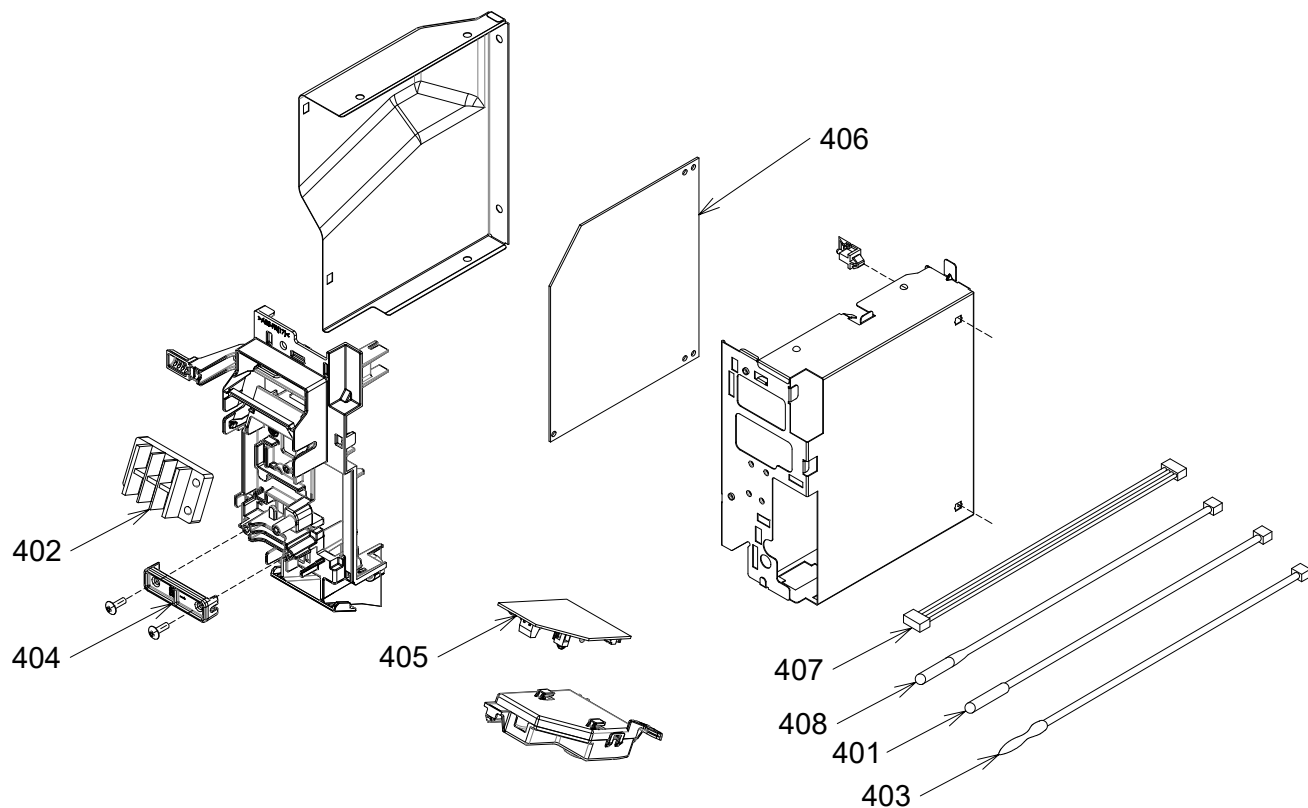

Location No.	Part No.	Description	Location No.	Part No.	Description
401	43T60605	TEMPERATURE SENSOR	406	43TNV610	PC BOARD (WP-050) (FOR RAS-B10B2KV2G-E, B2KVG-E2)
402	43T60556	TERMINAL-3P	406	43TNV611	PC BOARD (WP-050) (FOR RAS-B13B2KV2G-E, B2KVG-E2)
403	43T50413	TA-SENSOR	407	43T60502	HOUSING-WiFi
404	43T62340	CORD-CLAMP	408	43T60605	TEMPERATURE SENSOR
405	43TNV623	PC BOARD ASSY:WRS-LED			
406	43TNV608	PC BOARD (WP-050) (FOR RAS-B05B2KV2G-E, B2KVG-E2)			
406	43TNV609	PC BOARD (WP-050) (FOR RAS-B07B2KV2G-E, B2KVG-E2)			


RAS-B16, 18, 24B2KV2G-E (B2KVG-E2)

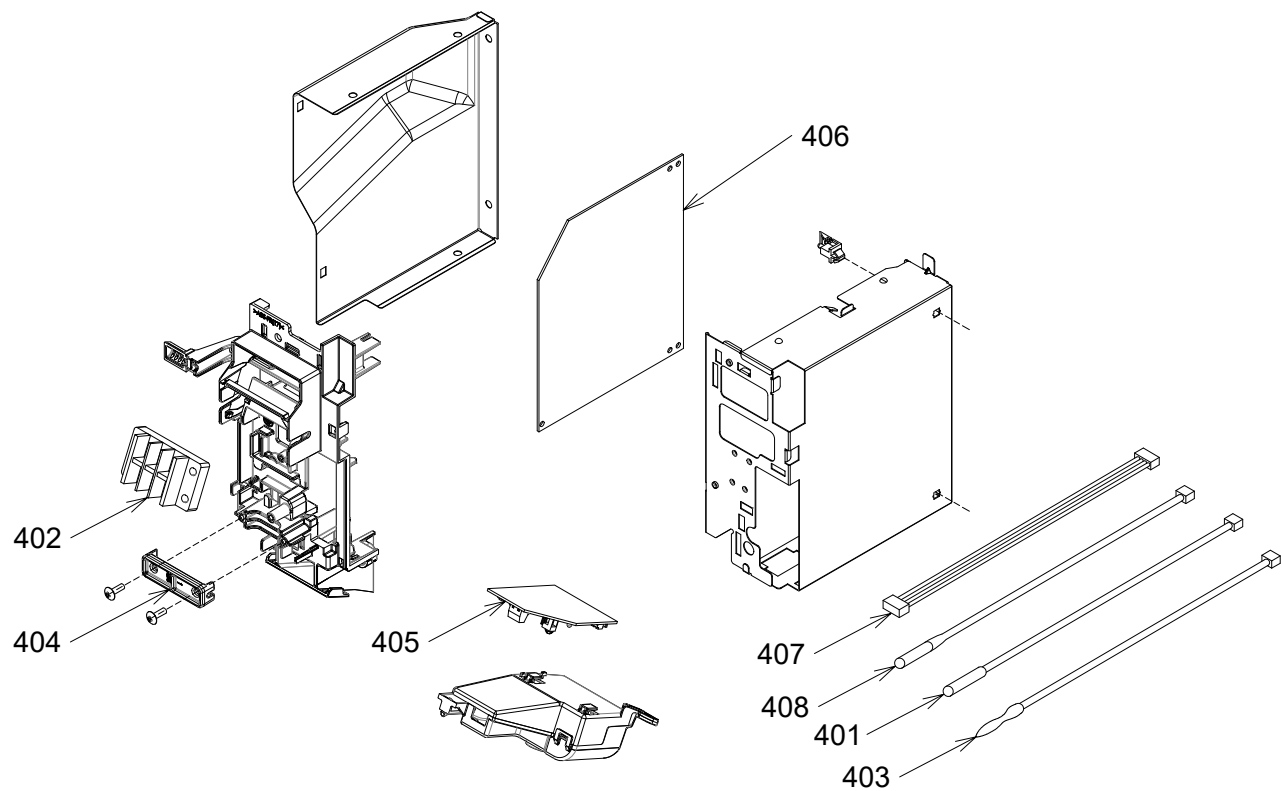

Location No.	Part No.	Description	Location No.	Part No.	Description
401	43T50393	TEMPERATURE SENSOR (FOR RAS-B24B2KV2G-E,B2KVG-E2)	406	43TNV613	PC BOARD (WP-048) (FOR RAS-B16B2KV2G-E,B2KVG-E2)
401	43T50394	TEMPERATURE SENSOR (FOR RAS-B16,18B2KV2G-E,B2KVG-E2)	406	43TNV614	PC BOARD (WP-048) (FOR RAS-B18B2KV2G-E,B2KVG-E2)
402	43T60556	TERMINAL-3P	406	43TNV615	PC BOARD (WP-048) (FOR RAS-B24B2KV2G-E,B2KVG-E2)
403	43T50413	TA-SENSOR	407	43T60502	HOUSING-WiFi
404	43T62340	CORD-CLAMP	408	43T60605	TEMPERATURE SENSOR
405	43TNV623	PC BOARD ASSY:WRS-LED			


13-3. Outdoor Unit

RAS-05, 07, 10, 13B2AVG-E2

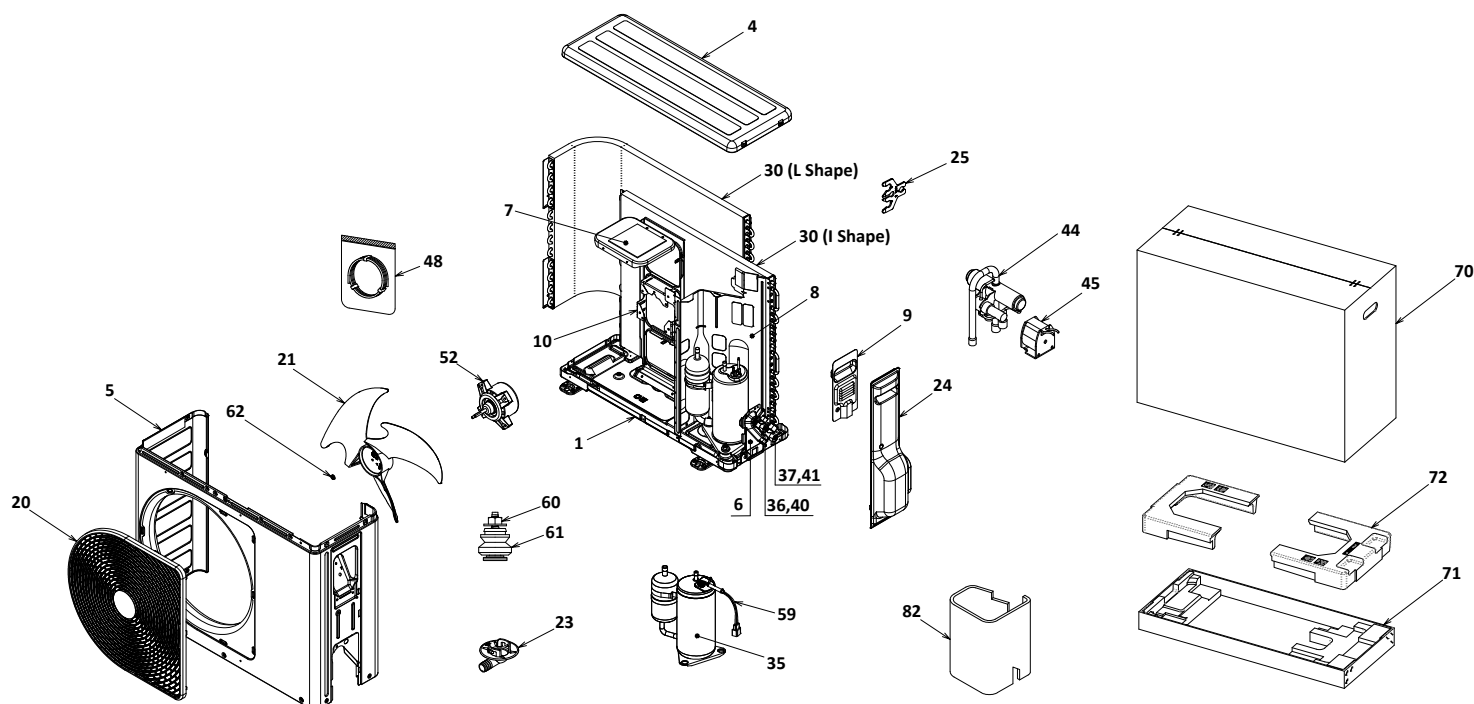

Location No.	Part No.	Description	Location No.	Part No.	Description
1	43T42388	BASE PLATE ASSEMBLY	35	43T41621	COMPRESSOR (FOR RAS-05,07B2AVG-E2)
4	43T00733	UPPER CABINET ASSEMBLY (FOR RAS-05,07,10B2AVG-E2)	35	43T41622	COMPRESSOR (FOR RAS-10,13B2AVG-E2)
4	43T00966	UPPER CABINET ASSEMBLY (FOR RAS-13B2AVG-E2)	36	43T47403	BONNET, 6.35 DIA
5	43T00682	FRONT CABINET ASSEMBLY (FOR RAS-05,07,10B2AVG-E2)	37	43T47404	BONNET, 9.52 DIA
5	43T00683	FRONT CABINET ASSEMBLY (FOR RAS-13B2AVG-E2)	40	43T46540	VALVE; PACKED 6.35 DIA
6	43T00448	FIXING PLATE VALVE	41	43T46541	VALVE; PACKED 9.52 DIA
7	43T39334	MOTOR BASE CONNECTION PLATE	44	43T46367	4 WAY VALVE
8	43T04325	PARTITION ASSEMBLY	45	43T63327	COIL-4WAY
9	43T62378	TERMINAL COVER ASSEMBLY	48	43T47007	CAPILLARY TUBE; 1.2 DIA (FOR RAS-10,13B2AVG-E2)
10	43T39325	MOTOR BASE	48	43T47308	CAPILLARY TUBE; 1.0 DIA (FOR RAS-05,07B2AVG-E2)
20	43T19363	FAN GUARD	52	43T21558	FAN MOTOR
21	43T20324	PROPELLER FAN	59	43T60507	LEAD ASSY, COMPRESSOR
23	43T79325	DRAIN NIPPLE	60	43T97001	NUT
24	43T19337	PACKED VALVE COVER	61	43T49327	RUBBER CUSHION
30	43T43728	CONDENSER ASSEMBLY (FOR RAS-05,07B2AVG-E2)	62	43T47001	NUT FLANGE
30	43T43729	CONDENSER ASSEMBLY (FOR RAS-10B2AVG-E2)	70	43T91445	CARTON BOX
30	43T43730	CONDENSER ASSEMBLY (FOR RAS-13B2AVG-E2)	71	43T91447	FIBERBOARD UNDER ASSEMBLY
			72	43T91302	CUSHION-PKG-UPR
			82	43T04524	SOUND INSULATION OUTSIDE


RAS-16, 18, 24B2AVG-E2

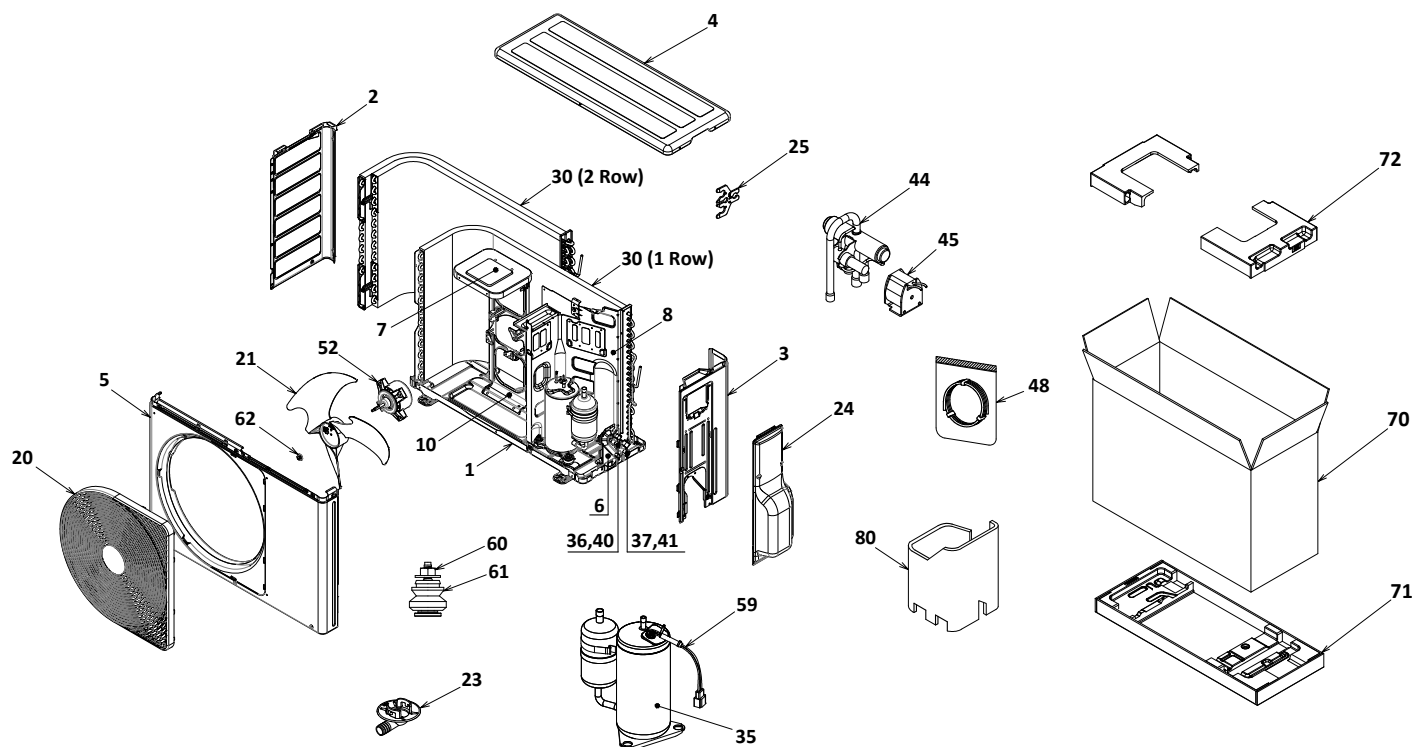

Location No.	Part No.	Description	Location No.	Part No.	Description
1	43T42403	BASE PLATE ASSEMBLY	35	43T41623	COMPRESSOR (FOR RAS-16,18B2AVG-E2)
2	43T00459	LEFT CABINET	35	43T41624	COMPRESSOR (FOR RAS-24B2AVG-E2)
3	43T00690	RIGHT CABINET ASSEMBLY	36	43T47403	BONNET, 6.35 DIA
4	43T00735	UPPER CABINET ASSEMBLY	37	43T47405	BONNET, 12.7 DIA
5	43T00688	FRONT CABINET ASSEMBLY (FOR RAS-24B2AVG-E2)	40	43T46540	VALVE; PACKED 6.35 DIA
5	43T00689	FRONT CABINET ASSEMBLY (FOR RAS-18B2AVG-E2)	41	43T46572	VALVE; PACKED 12.7 DIA
5	43T00737	FRONT CABINET ASSEMBLY (FOR RAS-16B2AVG-E2)	44	43T46367	4 WAY VALVE
6	43T00448	FIXING PLATE VALVE	45	43T63327	COIL-4WAY
7	43T39333	MOTOR BASE CONNECTION PLATE	48	43T47007	CAPILLARY TUBE; 1.2 DIA (FOR RAS-16B2AVG-E2)
8	43T04330	PARTITION ASSEMBLY (FOR RAS-16B2AVG-E2)	48	43T47008	CAPILLARY TUBE; 1.5 DIA (FOR RAS-18B2AVG-E2)
8	43T04500	GUIDE WIND PARTITION ASSEMBLY (FOR RAS-18,24B2AVG-E2)	48	43T47014	CAPILLARY TUBE; 1.7 DIA (FOR RAS-24B2AVG-E2)
10	43T39393	MOTOR BASE	52	43T21558	FAN MOTOR
20	43T19364	FAN GUARD	59	43T60497	LEAD ASSY, COMPRESSOR (FOR RAS-24B2AVG-E2)
21	43T20365	PROPELLER FAN	59	43T60507	LEAD ASSY, COMPRESSOR (FOR RAS-16,18B2AVG-E2)
23	43T79325	DRAIN NIPPLE	60	43T97001	NUT
24	43T00939	PACKED-VALVE COVER ASSEMBLY	61	43T49327	RUBBER CUSHION
25	43T63376	HOLDER, SENSOR	62	43T47001	NUT FLANGE
30	43T43657	CONDENSER ASSEMBLY (FOR RAS-24B2AVG-E2)	70	43T91446	CARTON BOX
30	43T43731	CONDENSER ASSEMBLY (FOR RAS-16B2AVG-E2)	71	43T91448	FIBERBOARD UNDER ASSEMBLY
30	43T43732	CONDENSER ASSEMBLY (FOR RAS-18B2AVG-E2)	72	43T91449	CUSHION-PKG-UPR
			80	43T04525	SOUND INSULATION OUTSIDE


13-4. Outdoor Unit (Part-E)

RAS-05, 07, 10, 13B2AVG-E2

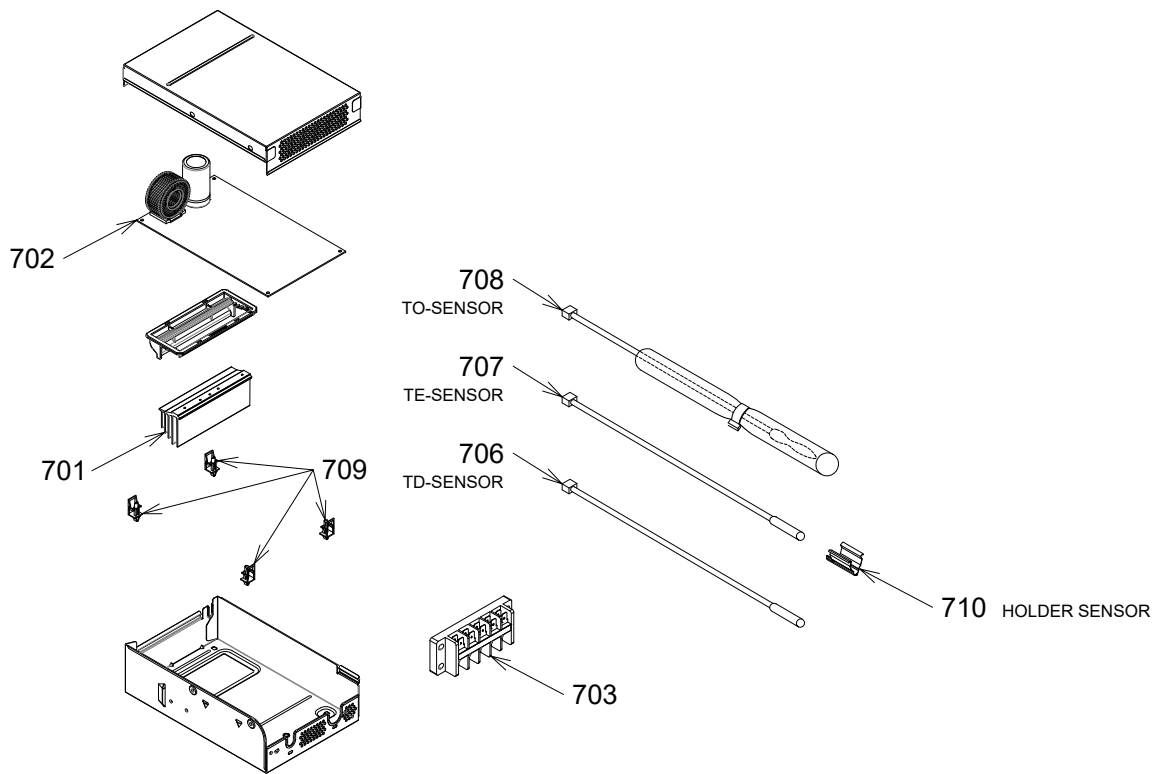


Location No.	Part No.	Description	Location No.	Part No.	Description
701	43T67311	HEATSINK	703	43T60555	TERMINAL-5P
702	43TNV616	PC BOARD (WP-043) (FOR RAS-05B2AVG-E2)	706	43T50334	TEMPERATURE SENSOR
702	43TNV617	PC BOARD (WP-043) (FOR RAS-07B2AVG-E2)	707	43T50352	TEMPERATURE SENSOR
702	43TNV618	PC BOARD (WP-043) (FOR RAS-10B2AVG-E2)	708	43T50458	SENSOR-TA(TO)
702	43TNV619	PC BOARD (WP-043) (FOR RAS-13B2AVG-E2)	709	43T95304	SPACER-KGES
			710	43T63318	HOLDER SENSOR

RAS-16, 18B2AVG-E2

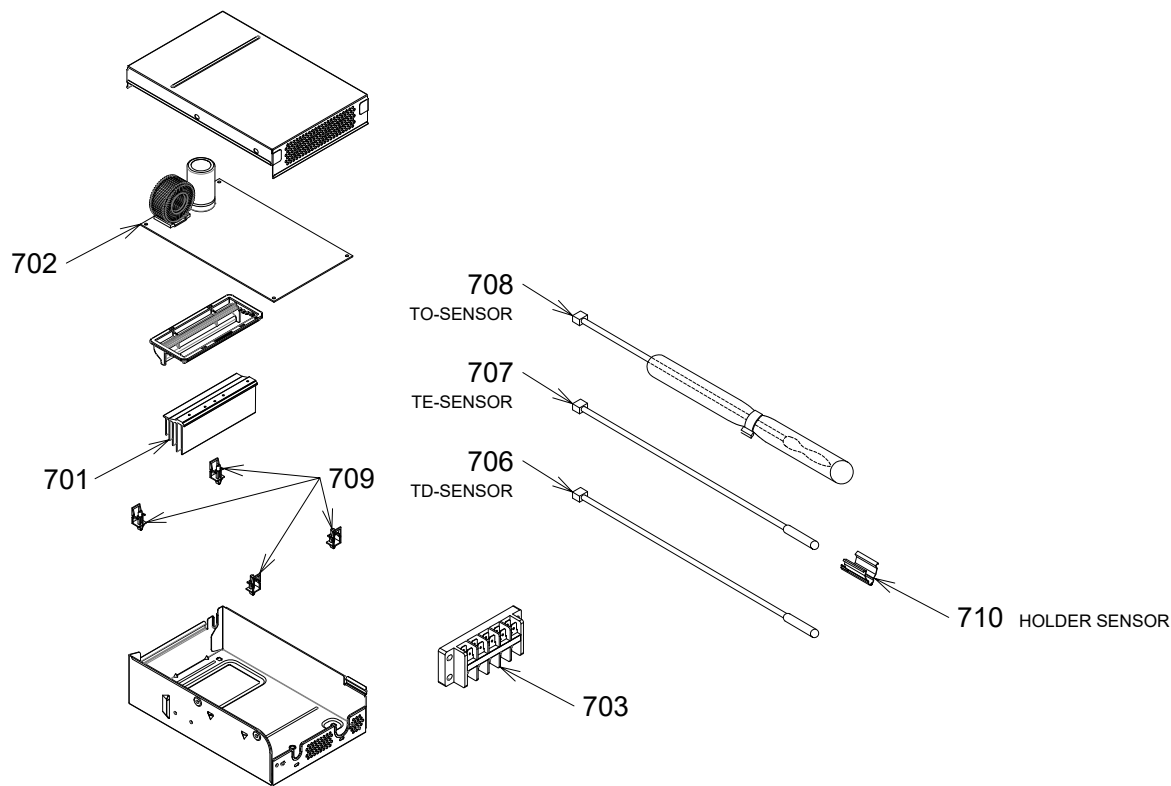

Location No.	Part No.	Description	Location No.	Part No.	Description
701	43T67311	HEATSINK	706	43T50334	TEMPERATURE SENSOR
702	43TNV620	PC BOARD (WP-043) (FOR RAS-16B2AVG-E2)	707	43T50352	TEMPERATURE SENSOR
702	43TNV621	PC BOARD (WP-043) (FOR RAS-18B2AVG-E2)	708	43T50458	SENSOR-TA(TO)
703	43T60555	TERMINAL-5P	709	43T95304	SPACER-KGES
			710	43T63318	HOLDER SENSOR

RAS-24B2AVG-E2

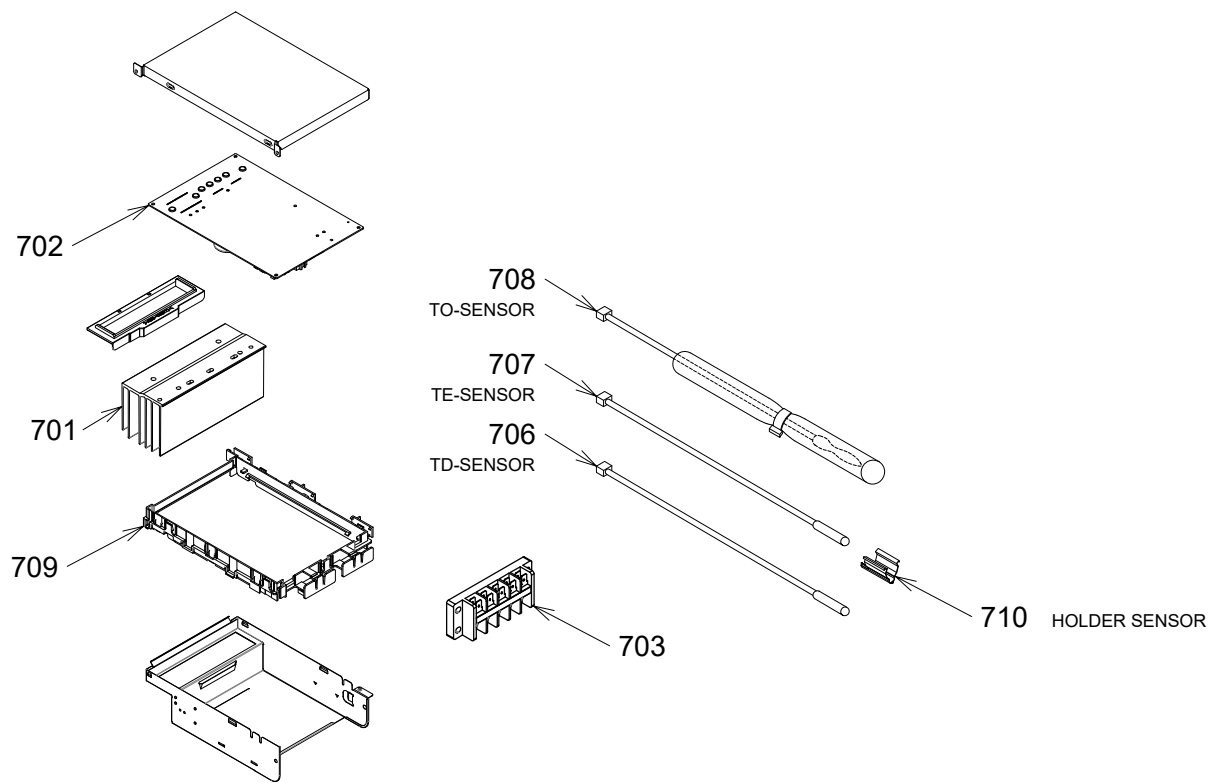

Location No.	Part No.	Description	Location No.	Part No.	Description
701	43T67310	HEATSINK	707	43T50352	TEMPERATURE SENSOR
702	43TNV622	PC BOARD (WP-528)	708	43T50458	SENSOR-TA(TO)
703	43T60555	TERMINAL-5P	709	43T62313	PC PLATE BASE
706	43T50334	TEMPERATURE SENSOR	710	43T63318	HOLDER SENSOR

CARRIER AIR CONDITIONING (THAILAND) CO., LTD.

144/9 MOO 5, BANGKADI INDUSTRIAL PARK, TIVANON ROAD, TAMBOL BANGKADI,
AMPHUR MUANGPATHUMTHANI, PATHUMTHANI 12000, THAILAND